

Superior Clamping and Gripping



# **Product Information**

Universal gripper JGP-P

# Reliable. Loadable. Alternative.

# JGP-P universal gripper

Universal 2-finger parallel gripper with T-slot guidance and the optimum price-performance ratio

# Field of application

Optimum standard solution for many fields of application. Universal application in clean and slightly dirty surroundings in machine building and plant building industry, assembly and handling as well as automotive industry.

# Advantages - Your benefits

A firm focus on the essentials for maximum profitability

**Sturdy T-slot guidance** for the precise handling of different workpieces

**Comprehensive sensor accessory program** for versatile querying possibilities and stroke position monitoring

Maximum piston surface area for maximum gripping forces

**Wedge-hook design** for high power transmission and synchronized gripping

Mounting from two sides in three screw directions for universal and flexible gripper assembly

Air supply via hose-free direct connection or screw connections for universal and flexible gripper assembly













# **Functional description**

The piston is moved up and down by compressed air. The angled active surfaces of the wedge-hook produce a synchronized, parallel jaw motion.



#### 1 T-slot guidance

loadable, robust base jaw guidance for extremely long gripper fingers

#### ② Base jaw

with standardized screw connection diagram for the connection of the workpiece-specific gripper fingers

#### **3** Bracket for sensors

Brackets for proximity switches and adjustable control cams in the housing

#### 4 Housing

is weight-optimized due to the use of high-strength aluminum alloy

## ⑤ Centering and mounting possibilities for universal assembly of the gripper

## 6 Wedge-hook design

for high power transmission and minimal wear as a result of larger diagonal pull surfaces

## 7 Piston

Maximum force through maximum surface of drive piston

## **Detailed functional description**

## Gripping force maintenance version AS/IS



The mechanical gripping force maintenance device ensures that a minimum clamping force will be applied even if there is a drop in pressure. In the AS version this acts as a closing force, and in the IS version as an opening force. The image shows the AS version. The gripping force maintenance can also be used to increase the gripping force or for one-way gripping.

- T-slot guidance
- 2 Base jaw
- Bracket for sensors
- 4 Housing

- Centering and mounting possibilities
- 6 Wedge-hook design
- Piston
- 8 Gripping force maintenance device


## Settings of the control cams during monitoring with inductive proximity switches



Monitoring with inductive proximity switch can be performed as standard from size 64. In delivery state, the positions "gripper open" and "gripper closed" are preset with the control cams. The inductive sensors must be ordered separately and are slid into the housing up to the stop and clamped. In order to monitor any other position, such as "workpiece gripped" for example, both control cams can be individually set in the respective base jaws.

- Control cam preset for "gripper closed" position
- 2 Control cam preset for "gripper open" position
- Holder with clamping screw for fixing the sensor
- Clamping screw for process-reliable fixing of the adjusted switching point
- Adjusting screw for setting any switching point

## Optional mounting possibility under the cover sheet for customer-specific additional structure

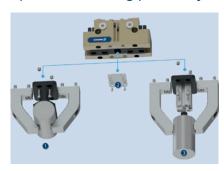

In delivery state, a cover sheet is mounted to the gripper. This can be removed if necessary. Under the cover sheet are threads and fittings for mounting customerspecific designs for implementing additional functions.

- Additional centering or support of the workpiece
- 2 The cover plate (can be removed)
- **3** Ejector with external cylinder attached to the gripper

## General notes about the series

**Operating principle:** Wedge gear with surface power

transmission

Housing material: Aluminum

Base jaw material: Steel

Actuation: pneumatic, with filtered compressed air as per

ISO 8573-1:2010 [7:4:4].

Warranty: 24 months

Service life characteristics: on request

**Scope of delivery:** Brackets for proximity switches, centering sleeves, 0-rings for direct connection, assembly instructions (operating manual with declaration of incorporation is available online)

**Gripping force maintenance device:** possible by using the version with mechanical gripping force maintenance or pressure maintenance valve SDV-P

**Gripping force:** is the arithmetic sum of the individual force applied to each jaw at distance P (see illustration).

**Finger length:** is measured from the reference surface as the distance P in direction to the main axis.

The maximum permissible finger length applies until the nominal operating pressure is achieved. With higher pressures, the finger length must be reduced proportionally to the nominal operating pressure.

**Repeat accuracy:** is defined as a distribution of the end Position for 100 consecutive strokes.

**Workpiece weight:** is calculated for force-fit gripping with a coefficient of static friction of 0.1 and a safety factor of 2 against workpiece slippage at acceleration due to gravity g. For form-fit or capture gripping, there are significantly higher permissible workpiece weights.

Closing and opening times: are purely the times that the base jaws or fingers are in motion. Valve switching times, hose fill times, or PLC reaction times are not included, and are to be considered when cycle times are calculated.



## **Application example**

Loading and unloading of a machine tool optimized for the cycle time. By using two grippers on the robot, the machine tool can be loaded automatically in a way that is optimized for the cycle time, and productivity can be increased. After the finished part has been removed from the first gripper, the automated clamping force block is cleaned of coolant and chips via the integrated blow-off nozzle of the double gripper. After that, the second gripper can directly insert the unmachined part and the machining process can be started. The finished part is then deposited and the next unmachined part is picked up again in parallel with the machining of the workpiece.

- 2-finger parallel gripper JGP-P
- TANDEM PGS3 clamping force block

## SCHUNK offers more ...

The following components make the product even more productive – the suitable addition for the highest functionality, flexibility, reliability, and controlled production.



① For more information on these products can be found on the following product pages or at schunk.com.


# Options and special information

**Gripping force maintenance version AS/IS:** The mechanical gripping force maintenance version ensures minimum gripping force even in the event of a pressure drop. In the AS/S version this acts as a closing force, in the IS version as an opening force.


**Integrated air purge connection:** impedes the ingress of dirt into the inside of the gripper **Additional versions:** Do you have further requirements for the gripper JGP-P? Then look for the compatible gripper model PGN-plus-P. The premium gripper PGN-plus-P already offers additional options and variants by default.




## Gripping force O.D. gripping

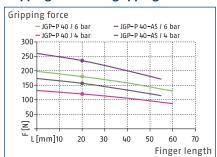

## **Gripping force I.D. gripping**

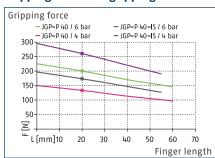

#### **Dimensions and maximum loads**

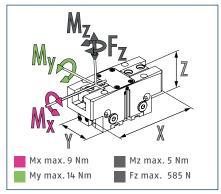


The indicated moments and forces are statical values, apply for each base jaw and may appear simultaneously. Loads may additionally occur to the moment produced by the gripping force itself.

## Technical data

Description		JGP-P 40	JGP-P 40-AS	JGP-P 40-IS
ID		1460247	1460248	1460249
Stroke per jaw	[mm]	2.5	2.5	2.5
Closing/opening force	[N]	180/200	235/-	-/260
Min. spring force	[N]		55	60
Weight	[kg]	0.08	0.1	0.1
Recommended workpiece weight	[kg]	0.9	0.9	0.9
Fluid consumption double stroke	[cm³]	4	8	10
Min./nom./max. operating pressure	[bar]	2.5/6/8	4/6/6.5	4/6/6.5
Min./max. air purge pressure	[bar]	0.5/1	0.5/1	0.5/1
Closing/opening time	[s]	0.015/0.015	0.015/0.03	0.03/0.015
Closing/opening time with spring	[s]		0.03	0.03
Max. permissible finger length	[mm]	60	55	55
Max. permissible weight per finger	[kg]	0.1	0.1	0.1
IP protection class		40	40	40
Min./max. ambient temperature	[°C]	5/90	5/90	5/90
Repeat accuracy	[mm]	0.01	0.01	0.01
Dimensions X x Y x Z	[mm]	50 x 25 x 24.7	50 x 25 x 33.7	50 x 25 x 33.7

① It may take a few 100 gripping cycles until the full gripping force (as indicated in the data table) will be available.


#### Main view

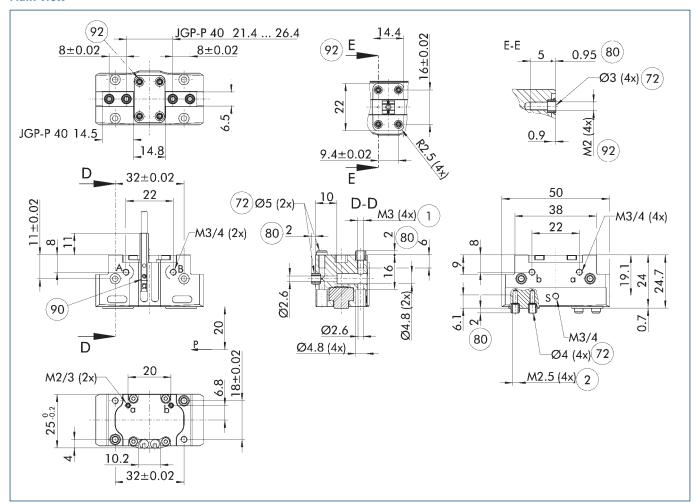


The drawing shows the gripper in the basic version with closed jaws, without dimensional consideration of the options described below.

- As an alternative/in addition to spring-assisted mechanical gripping force maintenance, the SDV-P pressure maintenance valve can be used for I.D. and O.D. gripping (see "Accessories" section of catalog).
- A, a Main / direct connection, gripper opening
- B, b Main / direct connection, gripper closing
- S Air purge connection
- (1) Gripper connection
- (2) Finger connection
- (72) Fit for centering sleeves
- 80 Depth of the centering sleeve hole in the counter part
- 90 Sensor MMS 22...
- 92 Screw connection with centering for customized mounting (these centering sleeves are not included in the scope of delivery)


## Maximum permitted finger projection

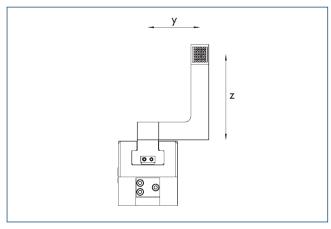

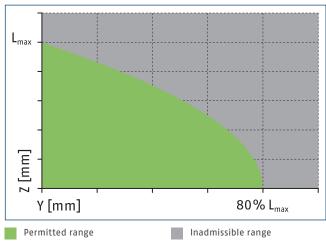


 $L^{\text{max}}$  is equivalent to the maximum permitted finger length, see the technical data table.

#### Hose-free direct connection M2

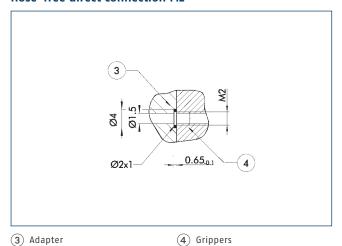

The direct connection is used for supplying compressed air without hoses. Instead, the pressure medium is fed through bore-holes in the mounting plate.


## **Gripping force maintenance version AS/IS**

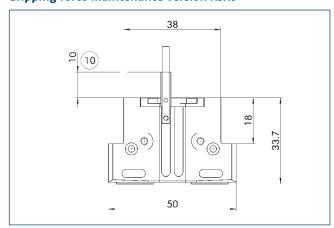

10 Projection applies only for AS version

The mechanical gripping force maintenance device ensures that a minimum clamping force will be applied even if there is a drop in pressure. In the AS/S variant this acts as a closing force, in the IS variant as an opening force. Besides this, gripping force maintenance can be used to increase gripping force or for single actuated gripping.

## **Electronic symbol according to DIN ISO 1219**

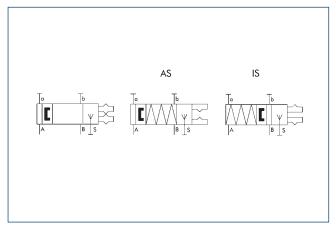


- A, a Main / direct connection, gripper opening
- B, b Main / direct connection, gripper closing
- S Air purge connection

The circuit symbol shows the connection options and the function of the pneumatic gripper. "A" and "B" are the main connections of the gripper for opening and closing. "a" and "b" are optional direct connections for opening and closing without interference–prone hosing. "S" describes the optional air purge connection, which impedes the ingress of dirt into the gripper.

SCHUNK also provides ECAD data for your design. You can choose between direct access via your EPLAN-Electric P8 software or download using the EPLAN Data Portal. Further information can be found on the SCHUNK website.

#### SDV-P pressure maintenance valve

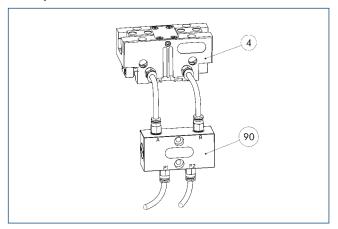

4 Grippers


90 SDV-P pressure maintenance valve

The SDV-P pressure maintenance valve ensures in emergency STOP situations that the pressure in the piston chamber of pneumatic gripper, swivel, linear, and quick-change modules is temporarily maintained.

Description	ID	Recommended hose diameter	
		[mm]	
Pressure maintenance	e valve		
SDV-P 04	0403130	6	
Pressure maintenance valve with air bleed screw			
SDV-P 04-E	0300120	6	

① In order to achieve the specified closing and opening time for each gripper variant, the recommended hose diameter must be used. The direct allocation of the respective variant of the gripper for the respective SDV-P can be found at schunk.com.

#### **Protective cover HUE PGN-plus 40**

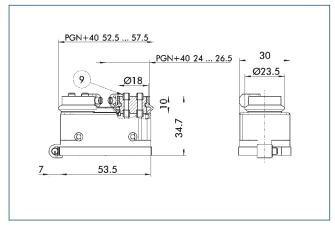


(9) For mounting screw connection diagram, see basic version

The HUE protective cover fully protects the gripper against external influences. The cover is suitable for applications of up to IP65 if an additional sealing of the cover bottom is provided. For detailed information, please see the HUE series. The connection diagram shifts by the height of the intermediate jaw.

Description	ID	IP protection class
Protection cover		
HIIF PGN-nlus 40	0371490	65

The HUE protective cover is not suitable for use on grippers with gripping force maintenance. An inductive monitoring of the gripper in connection with the HUE protective cover is not possible. SCHUNK recommends the use of magnetic sensors that are approved for the respective gripper variant.

#### UZB 40 universal intermediate jaw

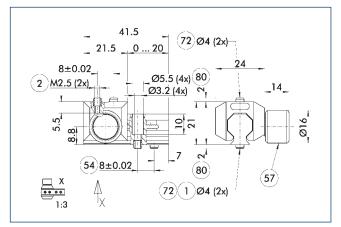

- (1) Gripper connection
- (2) Finger connection
- (54) Optional right or left connection
- (57) Locking
- 72) Fit for centering sleeves
- 80 Depth of the centering sleeve hole in the counter part

The drawing shows the UZB universal intermediate jaw.

Description	ID	Grid dimension
		[mm]
Universal intermediate	jaw	
UZB 40	0300040	1
Finger blank		
ABR-PGZN-plus 40	0300008	
SBR-PGZN-plus 40	0300018	


① If the operating pressure is higher than 6 bar, suitability for use beyond the application limits must be checked.

#### Fields of application

Series	Size	Variant	Suitability		
JGP-P	40	-1 (6 bar)			
JGP-P	40	-1-AS/1-IS (6 bar)			
Legend					
	Can be combined without restrictions				
	Use with restrictions (see loading limits)				
0000	cannot be combined				

The load limits for describing the application limits can be found in the catalog chapter of the corresponding accessories.

#### Finger blanks ABR/SBR-PGZN-plus 40

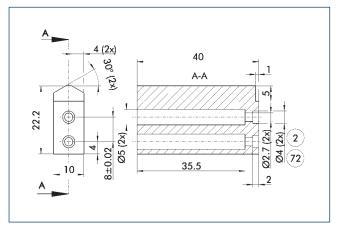


(2) Finger connection

(72) Fit for centering sleeves

The drawing shows the finger blank which can be reworked by the customer.

Description	ID	Material	Scope of delivery
Finger blank			
ABR-PGZN-plus 40	0300008	Aluminum (3.4365)	1
SBR-PGZN-plus 40	0300018	Steel (1.7131)	1

#### Compensation unit AGE-F

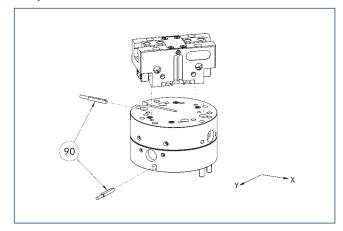


90 Monitoring

The unit has direct connection possibilities for different grippers of the PGN-plus, PGN-plus-P and PZN-plus series. For more detailed information, please refer to the main view.

Description	ID	Compensation XY	Reset force	Often combined
		[mm]	[N]	
Compensation unit				
AGE-F-XY-031-1	0324900	± 1.5	1.5	
AGE-F-XY-031-2	0324901	± 1.5	4	
AGE-F-XY-031-3	0324902	± 1.5	5.5	•

① Due to the interfering contour, monitoring of the gripper is not possible.

## Adapter plate for PGN-plus 40

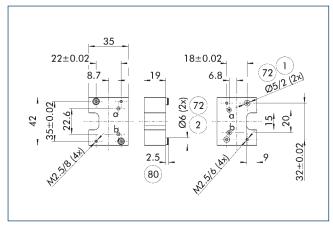


- 1 Robot-side connection
- 2 Tool-side connection
- 72) Fit for centering sleeves
- 80 Depth of the centering sleeve hole in the counter part

The adapter plate has integrated air feed-throughs in order to be able to use the hose-free direct connection of the appropriate gripper.

Description	ID
Tool side	
A-CWA-050-040-P	0305754

## **Compact change system for grippers**

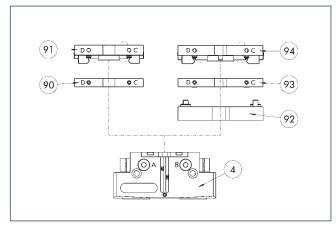


- (4) Grippers
- 90 CWA compact change adapter
- (91) CWK compact change master
- **92** A-CWA adapter plate
- 93 CWA compact change adapter
- 94) CWK compact change master

Grippers can be directly mounted without an adapter plate. For details see our catalog Gripping or Robot Accessories.

Description	ID	
Tool side		
A-CWA-050-040-P	0305754	

#### Add-on valves for single grippers

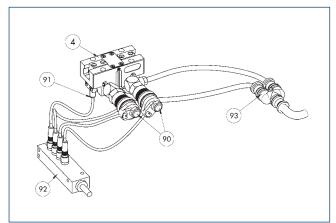

- (4) Grippers
- 90 Micro valves
- 90 MICIO Valve
- (91) Sensor


- **92** Sensor distributor
- 93 Y distributor

The set of attachment valves reduces the compressed air consumption as there is no need to ventilate or bleed the supply lines. This can also reduce cycle time. The hose-free direct assembly of the micro valves reduces the hosing effort for the gripper. To further simplify electrical connection of the valves and sensors, their signals can be bundled via an optional distributor.

Description	ID	Often combined
Add-on valve set		
ABV-MV15-M3	0303322	
ABV-MV15-M3-V2-M8	0303384	
ABV-MV15-M3-V4-M8	0303354	•

A set of add-on valves ABV is required per actuator. The ABV set contains two 3/2 micro valves, an Y-distributor for compressed air supply and optionally a sensor distributor with two or four inputs or outputs. Sensors for monitoring the gripper need to be ordered separately. Pneumatic hoses are not included in the scope of delivery.


#### **Modular Assembly Automation**

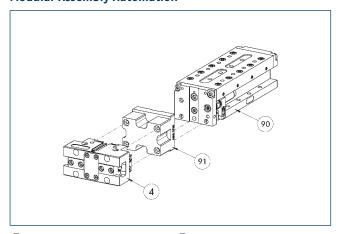

- 4 Grippers
- (91) ASG adapter plate
- © Linear module CLM/KLM/LM/ELP/ ELM/ELS/HLM

Grippers and linear modules can be combined with standard adapter plates from the modular assembly system. For more information see our main catalog "Modular Assembly Automation".

### Add-on valves for double grippers

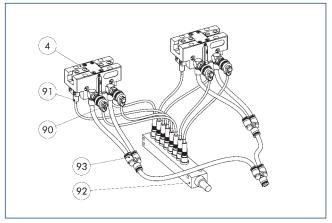


- (4) Grippers
- 90 Micro valves
- 92 Sensor distributor93 Y distributor
- (91) Sensor

The add-on valve set reduces compressed air consumption as there is no need to ventilate or bleed the supply lines. This can also reduce cycle time. The hose-free direct assembly of the micro valves reduces the hosing effort for the gripper. To further simplify electrical connection of the valves and sensors, their signals can be bundled via a distributor.

Description	ID
Add-on valve set	
ABV-MV15-M3-V8-M8	0303355

A set of add-on valves ABV is required per double gripping unit. The ABV set contains four 3/2 microvalves, three Y-distributors for compressed air supply and a sensor distributor with eight inputs or outputs. Sensors for monitoring the gripper need to be ordered separately. Pneumatic hoses are not included in the scope of delivery.

## **Electronic magnetic switch MMS**

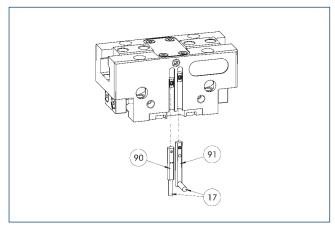


- 17) Cable outlet
- 91) Sensor MMS 22...-SA
- 90 Sensor MMS 22..

End position monitoring for mounting in the C-slot.

Description	ID	Often combined			
Electronic magnetic switch					
MMS 22-S-M8-PNP	0301032	•			
MMSK 22-S-PNP	0301034				
Electronic magnetic switches with	lateral cable	outlet			
MMS 22-S-M8-PNP-SA	0301042	•			
MMSK 22-S-PNP-SA	0301044				
Connection cables					
KA BG08-L 3P-0300-PNP	0301622	•			
KA BG08-L 3P-0500-PNP	0301623				
KA BW08-L 3P-0300-PNP	0301594				
KA BW08-L 3P-0500-PNP	0301502				
Clip for connector/socket					
CLI-M8	0301463				
Cable extension					
KV BW08-SG08 3P-0030-PNP	0301495				
KV BW08-SG08 3P-0100-PNP	0301496				
KV BW08-SG08 3P-0200-PNP	0301497	•			
Sensor distributor					
V2-M8	0301775	•			
V4-M8	0301746				
V8-M8	0301751				

Two sensors are required per unit for monitoring two positions. On option, extension cables and sensor distributors are available. Additional product variants of the sensor, and further information and technical data can be found in the catalog chapter sensor system.

## Programmable magnetic switch MMS 22-PI1

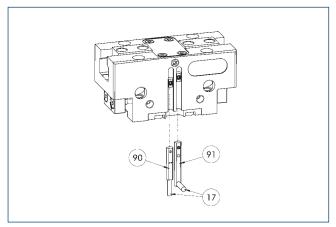


- (17) Cable outlet
- (91) Sensor MMS 22 ..-PI1-...-SA
- 90 Sensor MMS 22 PI1-...

Position monitoring with one programmable position per sensor and integrated electronic system in the sensor. Can be programmed using MT magnetic teaching tool (included in the scope of delivery, ID 0301030) or ST plug teaching tool (optional). End position monitoring for mounting in the C-slot. If the ST plug teaching tools are listed in the table provided, teaching is only possible with the ST teaching tools.

Description	ID	Often combined			
Programmable magnetic switch					
MMS 22-PI1-S-M8-PNP	0301160	•			
MMSK 22-PI1-S-PNP	0301162				
Programmable magnetic switch	with lateral c	able outlet			
MMS 22-PI1-S-M8-PNP-SA	0301166	•			
MMSK 22-PI1-S-PNP-SA	0301168				
Programmable magnetic switch with stainless steel housing					
MMS 22-PI1-S-M8-PNP-HD	0301110	•			
MMSK 22-PI1-S-PNP-HD	0301112				

Two sensors are required per unit for monitoring two positions. On option, extension cables and sensor distributors are available. Additional product variants of the sensor, and further information and technical data can be found in the catalog chapter sensor system.

#### Programmable magnetic switch MMS 22-PI2

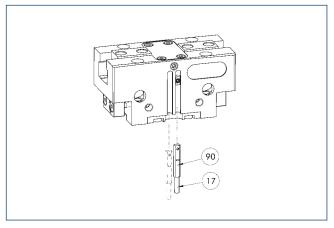

(17) Cable outlet


90 MMS 22...-PI2-... sensor

Positionsabfrage mit zwei programmierbaren Positionen je Sensor und in Sensor integrierter Elektronik. Programmierbar über Magnetteachwerkzeug MT (im Lieferumfang enthalten; Ident.-Nr.: 0301030) oder Steckerteachwerkzeug ST (optional). Endstellungsabfrage in C-Nut montiert. Sind die Steckerteachwerkzeuge ST in der aufgeführten Tabelle gelistet, kann ausschließlich mit den Steckerteachwerkzeugen ST geteacht werden.

Description	ID	Often combined				
Programmable magnetic switch						
MMS 22-PI2-S-M8-PNP	0301180	•				
MMSK 22-PI2-S-PNP	0301182					
Programmable magnetic switch	with lateral c	able outlet				
MMS 22-PI2-S-M8-PNP-SA	0301186	•				
MMSK 22-PI2-S-PNP-SA	0301188					
Programmable magnetic switch with stainless steel housing						
MMS 22-PI2-S-M8-PNP-HD	0301130	•				
MMSK 22-PI2-S-PNP-HD	0301132					

① One sensor is required per unit for monitoring two positions. Extension cables and sensor distributors are optionally available. Additional product variants of the sensor, and further information and technical data can be found in the catalog chapter sensor systems.

#### MMS-P programmable magnetic switch

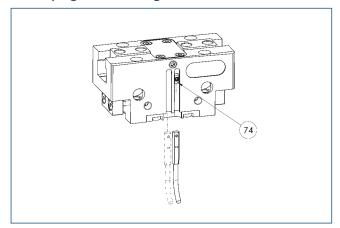


(74) Limit stop for sensor

Position monitoring with two programmable positions per sensor. End position monitoring for mounting in the C-slot.

Description	ID	Often combined				
Programmable magnetic switch						
MMSK-P 22-S-PNP	0301371					
MMS-P 22-S-M8-PNP	0301370	•				
Connection cables	Connection cables					
KA GLN0804-LK-00500-A	0307767	•				
KA GLN0804-LK-01000-A	0307768					
KA WLN0804-LK-00500-A	0307765					
KA WLN0804-LK-01000-A	0307766					
Clip for connector/socket						
CLI-M8	0301463					
Sensor distributor						
V2-M8-4P-2XM8-3P	0301380					

① One sensor is required per unit for monitoring two positions. Extension cables and sensor distributors are optionally available. Additional product variants of the sensor, and further information and technical data can be found in the catalog chapter sensor systems.

#### Analog position sensor MMS-A

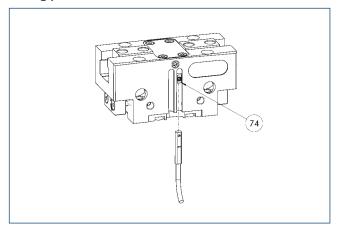


74) Limit stop for sensor

Non-contact measuring, analog multi-position monitoring for any number of positions, easy to assemble in the C-slot. Can be programmed using MT magnetic teaching tool (included in the scope of delivery, ID 0301030) or ST plug teaching tool (optional). End position monitoring for mounting in the C-slot. If the ST plug teaching tools are listed in the chart provided, teaching is only possible with the ST teaching tools.

Description	ID	
Analog position sensor		
MMS 22-A-10V-M08	0315825	
MMS 22-A-10V-M12	0315828	

① One sensor is required for each gripper. No additional mounting kit is required – the gripper is equipped for use of the sensor by default. Further information and technical data can be found in the catalog chapter sensor systems.

#### Flexible position sensor with MMS-A

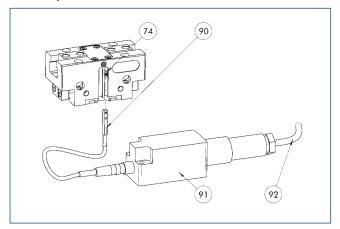


- (74) Limit stop for sensor
- (91) FPS-F5 evaluation electronic
- 90 MMS 22-A-... sensor
- (92) Connection cables

Flexible position monitoring of up to five positions. Sensor can be taught using MT magnetic teaching tool (included in the scope of delivery, ID 0301030) or ST plug teaching tool (optional). If the ST plug teaching tools are listed in the table provided, teaching is only possible with the ST teaching tools.

Description	ID
Analog position sensor	
MMS 22-A-05V-M08	0315805
Evaluation electronics	
FPS-F5	0301805
Sensor Teaching Tool	
MT-MMS 22-PI	0301030
Connection cables	
KA BG16-L 12P-1000	0301801

Beim Einsatz eines FPS-Systems wird pro Greifer ein MMS 22-A-05V sowie eine Auswerteelektronik (FPS-F5) benötigt sowie, falls aufgeführt, einen Anbausatz (AS). Kabelverlängerungen (KV) sind optional im Katalogteil "Zubehör" erhältlich.

#### Programmable magnetic switch MMS-I0-Link

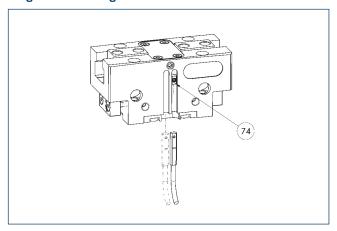

(74) Limit stop for sensor


Sensor zur Multi-Positionsabfrage durch Erfassung des kompletten Greiferhubs. Der Sensor wird direkt in der C-Nut des Greifers montiert. Die Programmierung des Sensors auf den Greifer erfolgt via IO-Link-Schnittstelle, Magnetteachtool MT (im Lieferumfang enthalten; Ident.-Nr.: 0301030) oder Steckerteachwerkzeug ST (optional). Sind die Steckerteachwerkzeuge ST in der aufgeführten Tabelle gelistet, kann nicht mit dem Magnetteachtool MT geteacht werden. Zum Betrieb ist ein IO-Link-Master notwendig.

Description	ID
Programmable mag	netic switch
MMS 22-I0L-M08	0315830
MMS 22-I0L-M12	0315835


① One sensor is required for each gripper. No additional mounting kit is required – the gripper is equipped for use of the sensor by default. Further information and technical data can be found in the catalog chapter sensor systems.




## Gripping force O.D. gripping

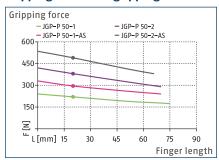

## **Gripping force I.D. gripping**

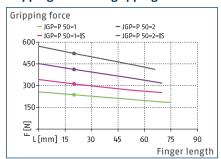

#### **Dimensions and maximum loads**

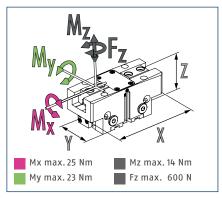


The indicated moments and forces are statical values, apply for each base jaw and may appear simultaneously. Loads may additionally occur to the moment produced by the gripping force itself.

## Technical data

Description		JGP-P 50-1	JGP-P 50-2	JGP-P 50-1-AS	JGP-P 50-2-AS	JGP-P 50-1-IS	JGP-P 50-2-IS
ID		1460250	1460251	1460252	1460253	1460254	1460255
Stroke per jaw	[mm]	4	2	4	2	4	2
Closing/opening force	[N]	220/235	380/410	295/-	490/-	-/300	-/520
Min. spring force	[N]			75	110	65	110
Weight	[kg]	0.17	0.17	0.2	0.2	0.2	0.2
Recommended workpiece weight	[kg]	1.1	1.9	1.1	1.9	1.1	1.9
Fluid consumption double stroke	[cm³]	6	6	10	10	12	12
Min./nom./max. operating pressure	[bar]	2.5/6/8	2.5/6/8	4/6/6.5	4/6/6.5	4/6/6.5	4/6/6.5
Min./max. air purge pressure	[bar]	0.5/1	0.5/1	0.5/1	0.5/1	0.5/1	0.5/1
Closing/opening time	[s]	0.015/0.015	0.015/0.015	0.015/0.025	0.015/0.025	0.025/0.015	0.025/0.015
Closing/opening time with spring	[s]			0.03	0.03	0.03	0.03
Max. permissible finger length	[mm]	75	70	70	66	70	66
Max. permissible weight per finger	[kg]	0.18	0.18	0.18	0.18	0.18	0.18
IP protection class		40	40	40	40	40	40
Min./max. ambient temperature	[°C]	5/90	5/90	5/90	5/90	5/90	5/90
Repeat accuracy	[mm]	0.01	0.01	0.01	0.01	0.01	0.01
Dimensions X x Y x Z	[mm]	65 x 30 x 31	65 x 30 x 31	65 x 30 x 47			

① It may take a few 100 gripping cycles until the full gripping force (as indicated in the data table) will be available.


#### Main view

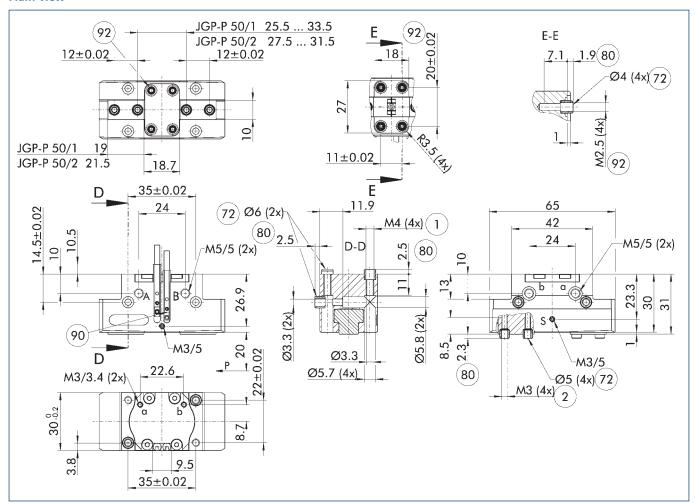


The drawing shows the gripper in the basic version with closed jaws, without dimensional consideration of the options described below.

- As an alternative/in addition to spring-assisted mechanical gripping force maintenance, the SDV-P pressure maintenance valve can be used for I.D. and O.D. gripping (see "Accessories" section of catalog).
- A, a Main / direct connection, gripper opening
- B, b Main / direct connection, gripper closing
- S Air purge connection
- (1) Gripper connection
- (2) Finger connection
- 72) Fit for centering sleeves
- 80 Depth of the centering sleeve hole in the counter part
- 90 Sensor MMS 22...
- ©2 Screw connection with centering for customized mounting (these centering sleeves are not included in the scope of delivery)


#### Maximum permitted finger projection

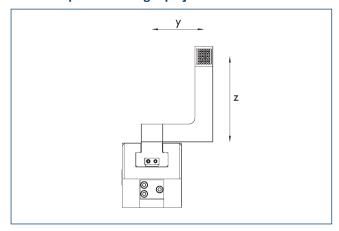

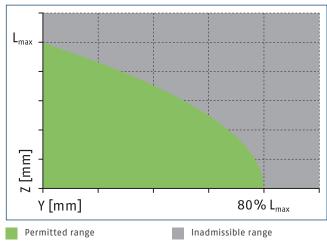


 $L^{\text{max}}$  is equivalent to the maximum permitted finger length, see the technical data table.

#### Hose-free direct connection M3

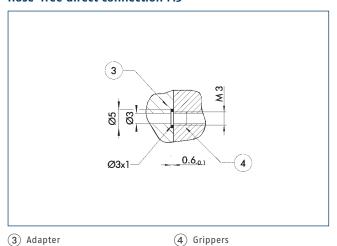

The direct connection is used for supplying compressed air without hoses. Instead, the pressure medium is fed through bore-holes in the mounting plate.


## **Gripping force maintenance version AS/IS**

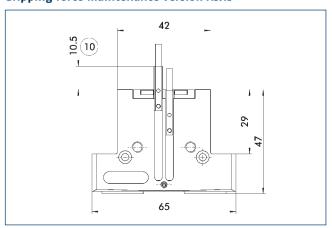

10 Projection applies only for AS version

The mechanical gripping force maintenance device ensures that a minimum clamping force will be applied even if there is a drop in pressure. In the AS/S variant this acts as a closing force, in the IS variant as an opening force. Besides this, gripping force maintenance can be used to increase gripping force or for single actuated gripping.

## **Electronic symbol according to DIN ISO 1219**

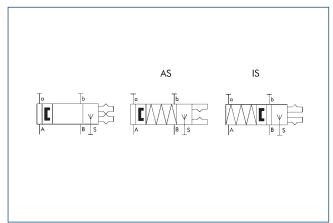


- A, a Main / direct connection, gripper opening
- B, b Main / direct connection, gripper closing
- S Air purge connection

The circuit symbol shows the connection options and the function of the pneumatic gripper. "A" and "B" are the main connections of the gripper for opening and closing. "a" and "b" are optional direct connections for opening and closing without interference–prone hosing. "S" describes the optional air purge connection, which impedes the ingress of dirt into the gripper.

SCHUNK also provides ECAD data for your design. You can choose between direct access via your EPLAN-Electric P8 software or download using the EPLAN Data Portal. Further information can be found on the SCHUNK website.

#### SDV-P pressure maintenance valve

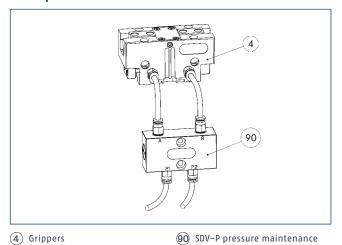


The SDV-P pressure maintenance valve ensures in emergency STOP situations that the pressure in the piston chamber of pneumatic gripper, swivel, linear, and quick-change modules is temporarily maintained.

Description	ID	Recommended hose diameter		
		[mm]		
Pressure maintenance valve				
SDV-P 04	0403130	6		
Pressure maintenance valve with air bleed screw				
SDV-P 04-E	0300120	6		

① In order to achieve the specified closing and opening time for each gripper variant, the recommended hose diameter must be used. The direct allocation of the respective variant of the gripper for the respective SDV-P can be found at schunk.com.

#### **Protective cover HUE PGN-plus 50**

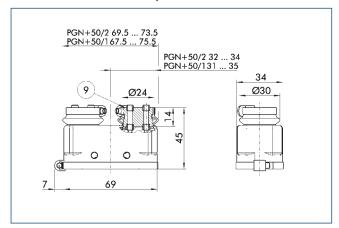


9 For mounting screw connection diagram, see basic version

The HUE protective cover fully protects the gripper against external influences. The cover is suitable for applications of up to IP65 if an additional sealing of the cover bottom is provided. For detailed information, please see the HUE series. The connection diagram shifts by the height of the intermediate jaw.

Description	ID	IP protection class
Protection cover		
HIIF PGN-plus 50	0371479	65

The HUE protective cover is not suitable for use on grippers with gripping force maintenance. An inductive monitoring of the gripper in connection with the HUE protective cover is not possible. SCHUNK recommends the use of magnetic sensors that are approved for the respective gripper variant.

### BSWS jaw quick-change jaw systems

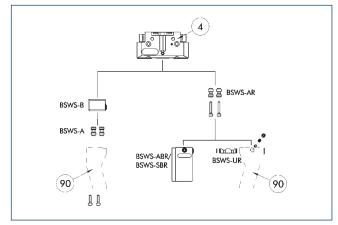

(4) Grippers

90 Customized gripper fingers

There are various jaw quick-change systems available for the gripper. For detailed information, please refer to the corresponding product.

Description	ID	Scope of delivery			
Jaw quick-change system adapter pin					
BSWS-A 50	0303020	2			
BSWS-AR 50	0300091	2			
Quick-change jaw system base	9				
BSWS-B 50	0303021	1			
Jaw quick-change system finger blank					
BSWS-ABR-PGZN-plus 50	0300071	1			
BSWS-SBR-PGZN-plus 50	0300081	1			
Jaw quick-change system locking mechanism					
BSWS-UR 50	0302990	1			


① If the operating pressure is higher than 6 bar, suitability for use beyond the application limits must be checked. Only systems that are listed in the table, can be used.

#### Fields of application

Series	Size	Variant	Suitability	
JGP-P	50	-1 (6 bar)		
JGP-P	50	-1-AS/1-IS (6 bar)		
JGP-P	50	-2 (6 bar)		
JGP-P	50	-2-AS/2-IS (6 bar)		
Legend				
	Can be combined	Can be combined without restrictions		
	Use with restriction	Use with restrictions (see loading limits)		
0000	cannot be combin	cannot be combined		

The load limits for describing the application limits can be found in the catalog chapter of the corresponding accessories.

## Jaw quick-change system BSWS-M

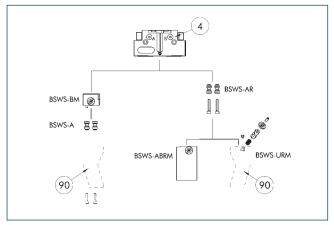

(4) Grippers

90 Customized gripper fingers

There are various jaw quick-change systems available for the gripper. For detailed information, please refer to the corresponding product.

actained innormation, product to the corresponding product.						
Description	ID	Scope of delivery				
Jaw quick-change system adapt	Jaw quick-change system adapter pin					
BSWS-A 50	0303020	2				
BSWS-AR 50	0300091	2				
Quick-change jaw system base						
BSWS-BM 50	1313899	1				
Jaw quick-change system finger blank						
BSWS-ABRM-PGZN-plus 50	1420850	1				
Jaw quick-change system locking mechanism						
BSWS-URM 50	1380614	1				


① If the operating pressure is higher than 6 bar, suitability for use beyond the application limits must be checked. Only systems that are listed in the table, can be used.

#### Fields of application

Series	Size	Variant	Suitability	
JGP-P	50	-1 (6 bar)		
JGP-P	50	-1-AS/1-IS (6 bar)		
JGP-P	50	-2 (6 bar)		
JGP-P	50	-2-AS/2-IS (6 bar)		
Legend				
	Can be combined without restrictions			
	Use with restrictions (see loading limits)			
0000	cannot be combined			

The load limits for describing the application limits can be found in the catalog chapter of the corresponding accessories.

#### ZBA-L-plus 50 intermediate jaws

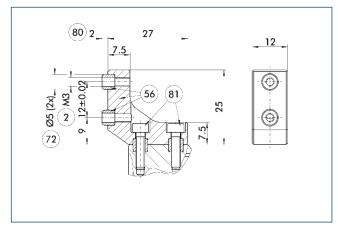


- (2) Finger connection
- (56) Included in the scope of delivery
- 72) Fit for centering sleeves
- 80 Depth of the centering sleeve hole in the counter part
- (81) Not included in the scope of delivery

The optional ZBA-L-plus intermediate jaws allow the screw connection diagram of the top jaws to be rotated by 90°. This makes it easier to design and produce top jaws (particularly for long versions) because no deep through-bores are required.

Description	ID	Material	Finger interface	Scope of delivery
Intermediate jaw				
ZBA-L-plus 50	0311712	Aluminum	PGN-plus 50	1

## UZB 50 universal intermediate jaw

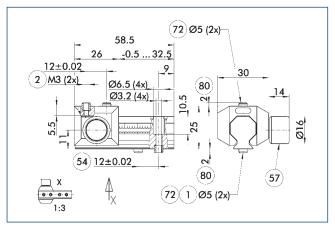

- 1 Gripper connection
- Finger connection
- (54) Optional right or left connection
- 57 Locking
- 72) Fit for centering sleeves
- 80 Depth of the centering sleeve hole in the counter part

The drawing shows the UZB universal intermediate jaw.

Description	ID	Grid dimension
		[mm]
Universal intermediate	jaw	
UZB 50	0300041	1.5
Finger blank		
ABR-PGZN-plus 50	0300009	
SBR-PGZN-plus 50	0300019	


 $\ \, \bigoplus$  If the operating pressure is higher than 6 bar, suitability for use beyond the application limits must be checked.

### Fields of application

Series	Size	Variant	Suitability		
JGP-P	50	-1 (6 bar)			
JGP-P	50	-1-AS/1-IS (6 bar)			
JGP-P	50	-2 (6 bar)			
JGP-P	50	-2-AS/2-IS (6 bar)	0000		
Legend					
	Can be combined without restrictions				
	Use with restrictions (see loading limits)				
0000	cannot be combined				

The load limits for describing the application limits can be found in the catalog chapter of the corresponding accessories.

#### Finger blanks ABR/SBR-PGZN-plus 50

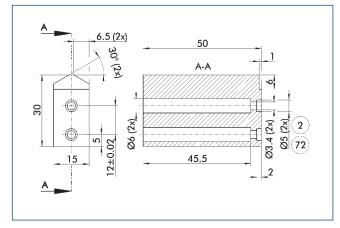


2 Finger connection

72 Fit for centering sleeves

The drawing shows the finger blank which can be reworked by the customer.

Description	ID	Material	Scope of delivery
Finger blank			
ABR-PGZN-plus 50	0300009	Aluminum (3.4365)	1
SBR-PGZN-plus 50	0300019	Steel (1.7131)	1

#### Tolerance compensation unit TCU

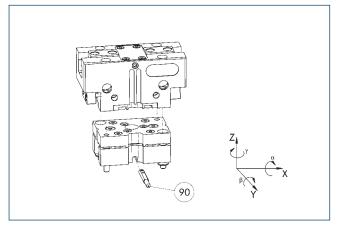


#### 90 Monitoring of locking

Grippers can be directly mounted without an adapter plate. Tolerance compensation unit and gripper have an identical screw connection diagram. Therefore the tolerance compensation units can be assembled later. Please consider the additional assembly height of the tolerance compensation unit. For details please refer to our catalog robot accessories.

Description	ID	Locking	Deflection
Compensation unit			
TCU-P-050-3-0V	0324757	no	±1°/±1°/±1,5°

#### Compensation unit AGE-F

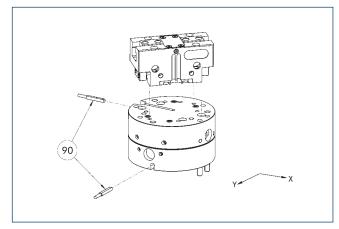


#### 90 Monitoring

The unit has direct connection possibilities for different grippers of the PGN-plus, PGN-plus-P and PZN-plus series. For more detailed information, please refer to the main view.

Description	ID	Compensation XY	Reset force	Often combined
		[mm]	[N]	
Compensation unit				
AGE-F-XY-040-1	0324920	± 2	3	
AGE-F-XY-040-2	0324921	± 2	4	
AGE-F-XY-040-3	0324922	± 2	4.5	•

① Due to the interfering contour, monitoring of the gripper is not possible.

## Adapter plate for PGN-plus 50

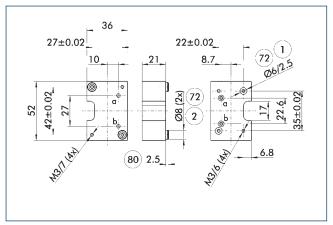


- 1 Robot-side connection
- Tool-side connection
- 72) Fit for centering sleeves
- 80 Depth of the centering sleeve hole in the counter part

The adapter plate has integrated air feed-throughs in order to be able to use the hose-free direct connection of the appropriate gripper.

Description	ID
Tool side	
A-CWA-064-050-P	0305768

## Compact change system for grippers

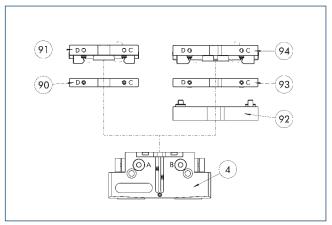


- (4) Grippers
- (90) CWA compact change adapter
- (91) CWK compact change master
- 92) A-CWA adapter plate
- (93) CWA compact change adapter
- (94) CWK compact change master

Grippers can be directly mounted without an adapter plate. For details see our catalog Gripping or Robot Accessories.

Description	ID		
Tool side	Tool side		
A-CWA-064-050-P	0305768		
CWA compact change	adapter		
CWA-050-P	0305751		
CWK compact change	master		
CWK-050-P	0305750		

#### Add-on valves for single grippers

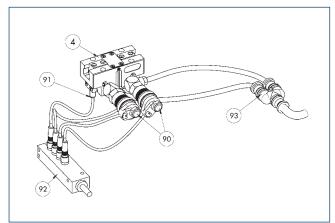

- (4) Grippers
- 90 Micro valves
- 90 Micio vaive:
- 91) Sensor


- (92) Sensor distributor
- 93 Y distributor

The set of attachment valves reduces the compressed air consumption as there is no need to ventilate or bleed the supply lines. This can also reduce cycle time. The hose-free direct assembly of the micro valves reduces the hosing effort for the gripper. To further simplify electrical connection of the valves and sensors, their signals can be bundled via an optional distributor.

Description	ID	Often combined
Add-on valve set		
ABV-MV15-M5	0303323	
ABV-MV15-M5-V2-M8	0303386	
ABV-MV15-M5-V4-M8	0303356	•

A set of add-on valves ABV is required per actuator. The ABV set contains two 3/2 micro valves, an Y-distributor for compressed air supply and optionally a sensor distributor with two or four inputs or outputs. Sensors for monitoring the gripper need to be ordered separately. Pneumatic hoses are not included in the scope of delivery.


## **Modular Assembly Automation**

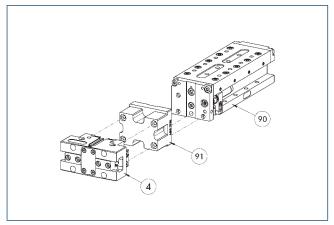

- 4 Grippers
- (91) ASG adapter plate
- © Linear module CLM/KLM/LM/ELP/ ELM/ELS/HLM

Grippers and linear modules can be combined with standard adapter plates from the modular assembly system. For more information see our main catalog "Modular Assembly Automation".

#### Add-on valves for double grippers

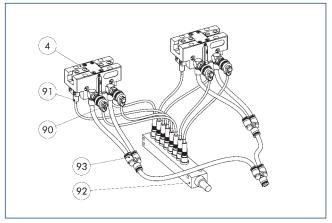

- (4) Grippers
- 90 Micro valves
- 93 Y distributor

(92) Sensor distributor


(91) Sensor

The add-on valve set reduces compressed air consumption as there is no need to ventilate or bleed the supply lines. This can also reduce cycle time. The hose-free direct assembly of the micro valves reduces the hosing effort for the gripper. To further simplify electrical connection of the valves and sensors, their signals can be bundled via a distributor.

Description	ID
Add-on valve set	
ABV-MV15-M5-V8-M8	0303357

A set of add-on valves ABV is required per double gripping unit. The ABV set contains four 3/2 microvalves, three Y-distributors for compressed air supply and a sensor distributor with eight inputs or outputs. Sensors for monitoring the gripper need to be ordered separately. Pneumatic hoses are not included in the scope of delivery.

## **Electronic magnetic switch MMS**

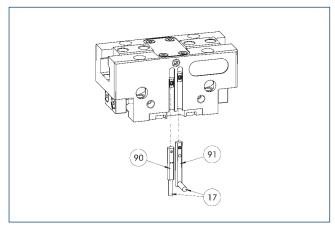


- 17) Cable outlet
- 91) Sensor MMS 22...-SA
- 90 Sensor MMS 22..

End position monitoring for mounting in the C-slot.

Description	ID	Often combined			
Electronic magnetic switch					
MMS 22-S-M8-PNP	0301032	•			
MMSK 22-S-PNP	0301034				
Electronic magnetic switches with	lateral cable	outlet			
MMS 22-S-M8-PNP-SA	0301042	•			
MMSK 22-S-PNP-SA	0301044				
Connection cables					
KA BG08-L 3P-0300-PNP	0301622	•			
KA BG08-L 3P-0500-PNP	0301623				
KA BW08-L 3P-0300-PNP	0301594				
KA BW08-L 3P-0500-PNP	0301502				
Clip for connector/socket					
CLI-M8	0301463				
Cable extension					
KV BW08-SG08 3P-0030-PNP	0301495				
KV BW08-SG08 3P-0100-PNP	0301496				
KV BW08-SG08 3P-0200-PNP	0301497	•			
Sensor distributor					
V2-M8	0301775	•			
V4-M8	0301746				
V8-M8	0301751				

Two sensors are required per unit for monitoring two positions. On option, extension cables and sensor distributors are available. Additional product variants of the sensor, and further information and technical data can be found in the catalog chapter sensor system.

### Programmable magnetic switch MMS 22-PI1

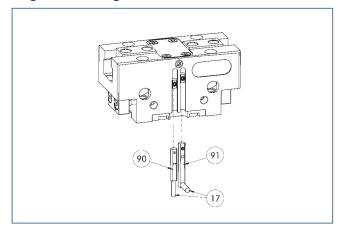

(17) Cable outlet

(91) Sensor MMS 22 ..-PI1-...-SA


90 Sensor MMS 22 PI1-...

Position monitoring with one programmable position per sensor and integrated electronic system in the sensor. Can be programmed using MT magnetic teaching tool (included in the scope of delivery, ID 0301030) or ST plug teaching tool (optional). End position monitoring for mounting in the C-slot. If the ST plug teaching tools are listed in the table provided, teaching is only possible with the ST teaching tools.

Description	ID	Often combined				
Programmable magnetic switch						
MMS 22-PI1-S-M8-PNP	0301160	•				
MMSK 22-PI1-S-PNP	0301162					
Programmable magnetic switch with lateral cable outlet						
MMS 22-PI1-S-M8-PNP-SA	0301166	•				
MMSK 22-PI1-S-PNP-SA	0301168					
Programmable magnetic switch with stainless steel housing						
MMS 22-PI1-S-M8-PNP-HD	0301110	•				
MMSK 22-PI1-S-PNP-HD	0301112					

Two sensors are required per unit for monitoring two positions. On option, extension cables and sensor distributors are available. Additional product variants of the sensor, and further information and technical data can be found in the catalog chapter sensor system.

#### Programmable magnetic switch MMS 22-PI2

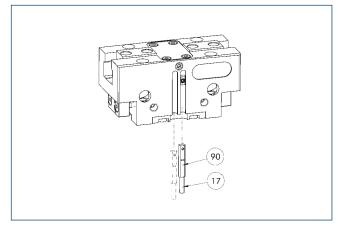

(17) Cable outlet


90 MMS 22...-PI2-... sensor

Positionsabfrage mit zwei programmierbaren Positionen je Sensor und in Sensor integrierter Elektronik. Programmierbar über Magnetteachwerkzeug MT (im Lieferumfang enthalten; Ident.–Nr.: 0301030) oder Steckerteachwerkzeug ST (optional). Endstellungsabfrage in C-Nut montiert. Sind die Steckerteachwerkzeuge ST in der aufgeführten Tabelle gelistet, kann ausschließlich mit den Steckerteachwerkzeugen ST geteacht werden.

Description	ID	Often combined				
Programmable magnetic switch						
MMS 22-PI2-S-M8-PNP	0301180	•				
MMSK 22-PI2-S-PNP	0301182					
Programmable magnetic switch with lateral cable outlet						
MMS 22-PI2-S-M8-PNP-SA	0301186	•				
MMSK 22-PI2-S-PNP-SA	0301188					
Programmable magnetic switch with stainless steel housing						
MMS 22-PI2-S-M8-PNP-HD	0301130	•				
MMSK 22-PI2-S-PNP-HD	0301132					

① One sensor is required per unit for monitoring two positions. Extension cables and sensor distributors are optionally available. Additional product variants of the sensor, and further information and technical data can be found in the catalog chapter sensor systems.

#### MMS-P programmable magnetic switch

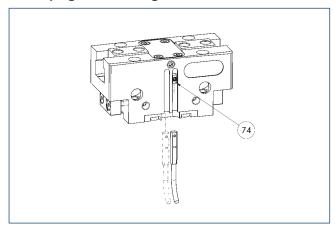


### (74) Limit stop for sensor

Position monitoring with two programmable positions per sensor. End position monitoring for mounting in the C-slot.

Description	ID	Often combined				
Programmable magnetic switch						
MMSK-P 22-S-PNP	0301371					
MMS-P 22-S-M8-PNP	0301370	•				
Connection cables						
KA GLN0804-LK-00500-A	0307767	•				
KA GLN0804-LK-01000-A	0307768					
KA WLN0804-LK-00500-A	0307765					
KA WLN0804-LK-01000-A	0307766					
Clip for connector/socket						
CLI-M8	0301463					
Sensor distributor						
V2-M8-4P-2XM8-3P	0301380					

① One sensor is required per unit for monitoring two positions. Extension cables and sensor distributors are optionally available. Additional product variants of the sensor, and further information and technical data can be found in the catalog chapter sensor systems.

#### Analog position sensor MMS-A

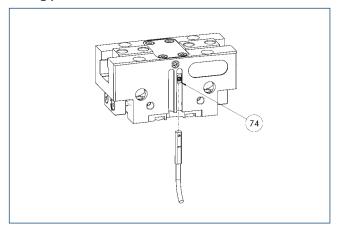


74) Limit stop for sensor

Non-contact measuring, analog multi-position monitoring for any number of positions, easy to assemble in the C-slot. Can be programmed using MT magnetic teaching tool (included in the scope of delivery, ID 0301030) or ST plug teaching tool (optional). End position monitoring for mounting in the C-slot. If the ST plug teaching tools are listed in the chart provided, teaching is only possible with the ST teaching tools.

Description	ID	
Analog position sensor		
MMS 22-A-10V-M08	0315825	
MMS 22-A-10V-M12	0315828	

① One sensor is required for each gripper. No additional mounting kit is required – the gripper is equipped for use of the sensor by default. Further information and technical data can be found in the catalog chapter sensor systems.

#### Flexible position sensor with MMS-A

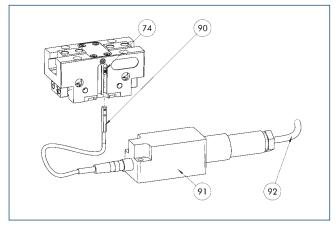


- (74) Limit stop for sensor
- (91) FPS-F5 evaluation electronic
- 90 MMS 22-A-... sensor
- (92) Connection cables

Flexible position monitoring of up to five positions. Sensor can be taught using MT magnetic teaching tool (included in the scope of delivery, ID 0301030) or ST plug teaching tool (optional). If the ST plug teaching tools are listed in the table provided, teaching is only possible with the ST teaching tools.

Description	ID
Analog position sensor	
MMS 22-A-05V-M08	0315805
Evaluation electronics	
FPS-F5	0301805
Sensor Teaching Tool	
MT-MMS 22-PI	0301030
Connection cables	
KA BG16-L 12P-1000	0301801

Beim Einsatz eines FPS-Systems wird pro Greifer ein MMS 22-A-05V sowie eine Auswerteelektronik (FPS-F5) benötigt sowie, falls aufgeführt, einen Anbausatz (AS). Kabelverlängerungen (KV) sind optional im Katalogteil "Zubehör" erhältlich.

#### Programmable magnetic switch MMS-I0-Link

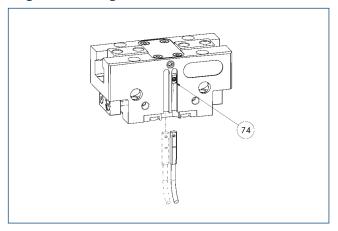

74) Limit stop for sensor


Sensor zur Multi-Positionsabfrage durch Erfassung des kompletten Greiferhubs. Der Sensor wird direkt in der C-Nut des Greifers montiert. Die Programmierung des Sensors auf den Greifer erfolgt via IO-Link-Schnittselle, Magnetteachtool MT (im Lieferumfang enthalten; Ident.-Nr.: 0301030) oder Steckerteachwerkzeug ST (optional). Sind die Steckerteachwerkzeuge ST in der aufgeführten Tabelle gelistet, kann nicht mit dem Magnetteachtool MT geteacht werden. Zum Betrieb ist ein IO-Link-Master notwendig

Description	ID	
Programmable magnetic switch		
MMS 22-I0L-M08	0315830	
MMS 22-I0L-M12	0315835	


① One sensor is required for each gripper. No additional mounting kit is required – the gripper is equipped for use of the sensor by default. Further information and technical data can be found in the catalog chapter sensor systems.




## Gripping force O.D. gripping

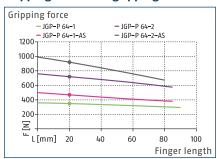

## **Gripping force I.D. gripping**

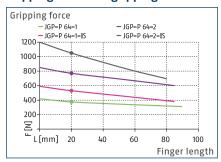

#### **Dimensions and maximum loads**

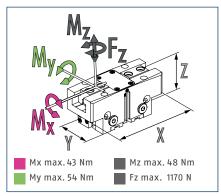


The indicated moments and forces are statical values, apply for each base jaw and may appear simultaneously. Loads may additionally occur to the moment produced by the gripping force itself.

## Technical data

Description		JGP-P 64-1	JGP-P 64-2	JGP-P 64-1-AS	JGP-P 64-2-AS	JGP-P 64-1-IS	JGP-P 64-2-IS
ID		1460256	1460257	1460258	1460259	1460260	1460261
Stroke per jaw	[mm]	6	3	6	3	6	3
Closing/opening force	[N]	350/375	720/770	470/-	920/-	-/530	-/1050
Min. spring force	[N]			120	200	155	280
Weight	[kg]	0.27	0.27	0.35	0.35	0.35	0.35
Recommended workpiece weight	[kg]	1.75	3.6	1.75	3.6	1.75	3.6
Fluid consumption double stroke	[cm³]	15	15	24	24	27	27
Min./nom./max. operating pressure	[bar]	2.5/6/8	2.5/6/8	4/6/6.5	4/6/6.5	4/6/6.5	4/6/6.5
Min./max. air purge pressure	[bar]	0.5/1	0.5/1	0.5/1	0.5/1	0.5/1	0.5/1
Closing/opening time	[s]	0.02/0.02	0.02/0.02	0.02/0.04	0.02/0.04	0.04/0.02	0.04/0.02
Closing/opening time with spring	[s]			0.07	0.07	0.07	0.07
Max. permissible finger length	[mm]	90	85	85	80	85	80
Max. permissible weight per finger	[kg]	0.4	0.4	0.4	0.4	0.4	0.4
IP protection class		40	40	40	40	40	40
Min./max. ambient temperature	[°C]	5/90	5/90	5/90	5/90	5/90	5/90
Repeat accuracy	[mm]	0.01	0.01	0.01	0.01	0.01	0.01
Dimensions X x Y x Z	[mm]	76 x 36 x 39	76 x 36 x 39	76 x 36 x 57			

① It may take a few 100 gripping cycles until the full gripping force (as indicated in the data table) will be available.


#### Main view

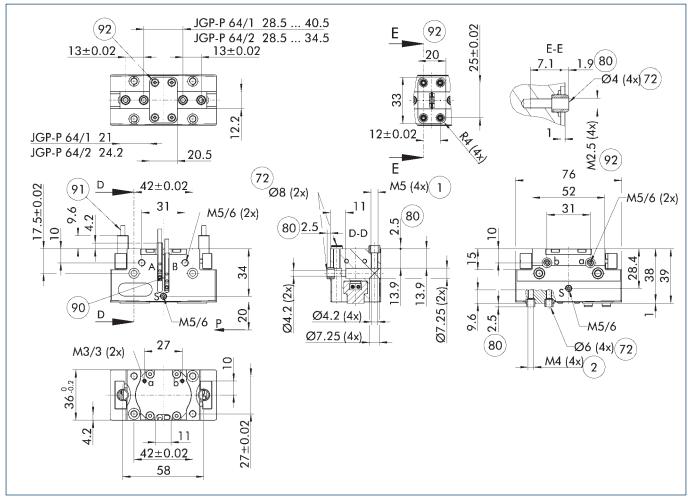


The drawing shows the gripper in the basic version with closed jaws, without dimensional consideration of the options described below.

- As an alternative/in addition to spring-assisted mechanical gripping force maintenance, the SDV-P pressure maintenance valve can be used for I.D. and O.D. gripping (see "Accessories" section of catalog).
- A, a Main / direct connection, gripper opening
- B, b Main / direct connection, gripper closing
- S Air purge connection
- (1) Gripper connection
- (2) Finger connection
- 72 Fit for centering sleeves
- 80 Depth of the centering sleeve hole in the counter part
- 90 Sensor MMS 22..
- (91) Sensor IN ...
- (92) Screw connection with centering for customized mounting (these centering sleeves are not included in the scope of delivery)


## Maximum permitted finger projection

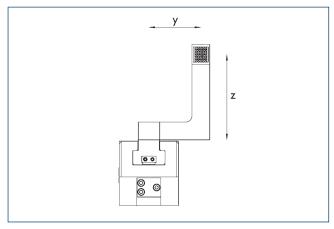

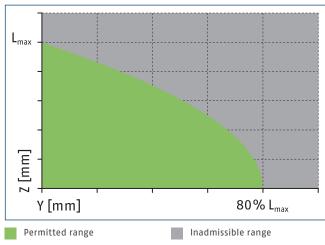


 $L^{\text{max}}$  is equivalent to the maximum permitted finger length, see the technical data table.

#### Hose-free direct connection M3

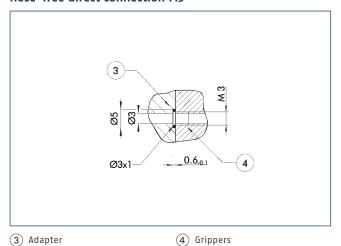

The direct connection is used for supplying compressed air without hoses. Instead, the pressure medium is fed through bore-holes in the mounting plate.


## **Gripping force maintenance version AS/IS**

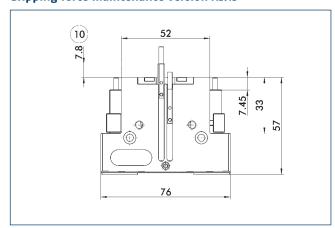

10 Projection applies only for AS version

The mechanical gripping force maintenance device ensures that a minimum clamping force will be applied even if there is a drop in pressure. In the AS/S variant this acts as a closing force, in the IS variant as an opening force. Besides this, gripping force maintenance can be used to increase gripping force or for single actuated gripping.

# **Electronic symbol according to DIN ISO 1219**

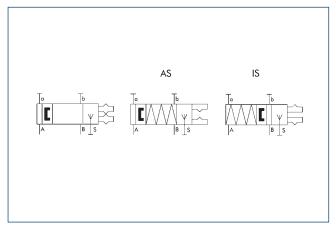


- A, a Main / direct connection, gripper opening
- B, b Main / direct connection, gripper closing
- S Air purge connection

The circuit symbol shows the connection options and the function of the pneumatic gripper. "A" and "B" are the main connections of the gripper for opening and closing. "a" and "b" are optional direct connections for opening and closing without interference–prone hosing. "S" describes the optional air purge connection, which impedes the ingress of dirt into the gripper.

SCHUNK also provides ECAD data for your design. You can choose between direct access via your EPLAN-Electric P8 software or download using the EPLAN Data Portal. Further information can be found on the SCHUNK website.

## SDV-P pressure maintenance valve

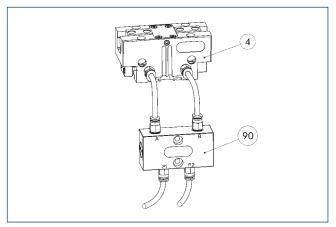

4 Grippers


90 SDV-P pressure maintenance

The SDV-P pressure maintenance valve ensures in emergency STOP situations that the pressure in the piston chamber of pneumatic gripper, swivel, linear, and quick-change modules is temporarily maintained.

Description	tion ID Recommended hose diameter	
		[mm]
Pressure maintenance	e valve	
SDV-P 04	0403130	6
SDV-P 07	0403131	8
Pressure maintenance	e valve with a	ir bleed screw
SDV-P 04-E	0300120	6
SDV-P 07-E	0300121	8

① In order to achieve the specified closing and opening time for each gripper variant, the recommended hose diameter must be used. The direct allocation of the respective variant of the gripper for the respective SDV-P can be found at schunk.com.

#### SDV-P E-P pressure maintenance valve

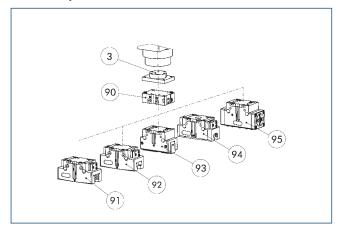


- (3) Adapter
- 90 SDV-P E-P pressure maintenance valve
- (91) 2-finger parallel gripper PGN-plus/PGN-plus-P
- 92 2-finger parallel gripper JGP-P
- 93) 2-finger angular gripper PWG-plus
- (94) 2-finger parallel gripper PGB
- 95) Sealed DPG-plus gripper

The SDV-P E-P pressure maintenance valves ensure that the pressure in the piston chamber is maintained temporarily during an emergency stop. SDV-P E-P can be directly connected to the listed grippers without the need for additional pneumatic hoses.

Description	ID
Pressure mainter	nance valve
SDV-P 64-E-P	0300124

#### Protective cover HUE PGN-plus 64

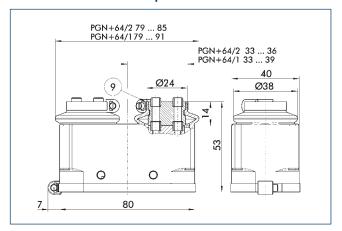


9 For mounting screw connection diagram, see basic version

The HUE protective cover fully protects the gripper against external influences. The cover is suitable for applications of up to IP65 if an additional sealing of the cover bottom is provided. For detailed information, please see the HUE series. The connection diagram shifts by the height of the intermediate jaw.

Description ID		IP protection class
Protection cover		
HUE PGN-plus 64	0371480	65

The HUE protective cover is not suitable for use on grippers with gripping force maintenance. An inductive monitoring of the gripper in connection with the HUE protective cover is not possible. SCHUNK recommends the use of magnetic sensors that are approved for the respective gripper variant.

## BSWS jaw quick-change jaw systems

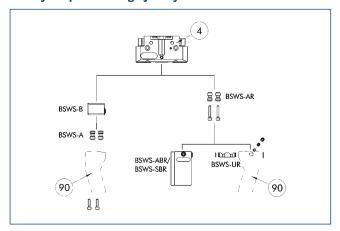

(4) Grippers

90 Customized gripper fingers

There are various jaw quick-change systems available for the gripper. For detailed information, please refer to the corresponding product.

Description	ID	Scope of delivery
Jaw quick-change system ada	pter pin	
BSWS-A 64	0303022	2
BSWS-AR 64	0300092	2
Quick-change jaw system base	2	
BSWS-B 64	0303023	1
Jaw quick-change system fing	er blank	
BSWS-ABR-PGZN-plus 64	0300072	1
BSWS-SBR-PGZN-plus 64	0300082	1
Jaw quick-change system lock	ing mechanis	m
BSWS-UR 64	0302991	1


① If the operating pressure is higher than 6 bar, suitability for use beyond the application limits must be checked. Only systems that are listed in the table, can be used.

#### Fields of application

Series	Size	Variant	Suitability
JGP-P	64	-1 (6 bar)	
JGP-P	64	-1-AS/1-IS (6 bar)	
JGP-P	64	-2 (6 bar)	
JGP-P	64	-2-AS/2-IS (6 bar)	
Legend			
	Can be combined without restrictions		
	Use with restrictions (see loading limits)		
0000	cannot be combined		

The load limits for describing the application limits can be found in the catalog chapter of the corresponding accessories.

## Jaw quick-change system BSWS-M

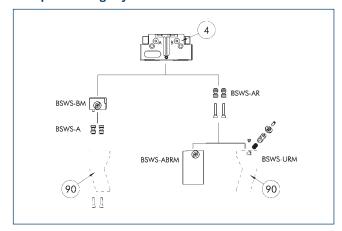

(4) Grippers

**90** Customized gripper fingers

There are various jaw quick-change systems available for the gripper. For detailed information, please refer to the corresponding product.

Description	ID	Scope of delivery
Jaw quick-change system adap	ter pin	
BSWS-A 64	0303022	2
BSWS-AR 64	0300092	2
Quick-change jaw system base		
BSWS-BM 64	1313900	1
Jaw quick-change system finge	r blank	
BSWS-ABRM-PGZN-plus 64	1420851	1
Jaw quick-change system locki	ng mechanism	
BSWS-URM 64	1398401	1


① If the operating pressure is higher than 6 bar, suitability for use beyond the application limits must be checked. Only systems that are listed in the table, can be used.

#### Fields of application

Series	Size	Variant	Suitability	
JGP-P	64	-1 (6 bar)		
JGP-P	64	-1-AS/1-IS (6 bar)		
JGP-P	64	-2 (6 bar)		
JGP-P	64	-2-AS/2-IS (6 bar)		
Legend				
	Can be combined without restrictions			
	Use with restrictions (see loading limits)			
0000	cannot be combined			

The load limits for describing the application limits can be found in the catalog chapter of the corresponding accessories.

## ZBA-L-plus 64 intermediate jaws

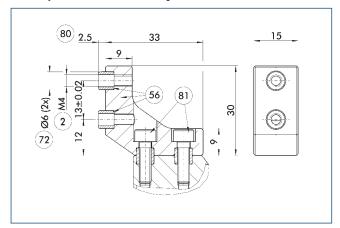


- 2 Finger connection
- (56) Included in the scope of delivery
- 72) Fit for centering sleeves
- 80 Depth of the centering sleeve hole in the counter part
- 81) Not included in the scope of delivery

The optional ZBA-L-plus intermediate jaws allow the screw connection diagram of the top jaws to be rotated by 90°. This makes it easier to design and produce top jaws (particularly for long versions) because no deep through-bores are required.

Description	ID		Finger interface	Scope of delivery
Intermediate jaw				
ZBA-L-plus 64	0311722	Aluminum	PGN-plus 64	1

# UZB 64 universal intermediate jaw

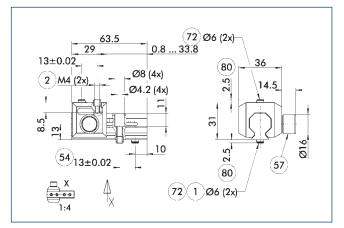

- 1 Gripper connection
- 2 Finger connection
- (54) Optional right or left connection
- (57) Locking
- 72) Fit for centering sleeves
- 80 Depth of the centering sleeve hole in the counter part

The drawing shows the UZB universal intermediate jaw.

		•
Description	ID	Grid dimension
		[mm]
Universal intermediate	jaw	
UZB 64	0300042	1.5
Finger blank		
ABR-PGZN-plus 64	0300010	
SBR-PGZN-plus 64	0300020	


① If the operating pressure is higher than 6 bar, suitability for use beyond the application limits must be checked.

## Fields of application

Series	Size	Variant	Suitability	
JGP-P	64	-1 (6 bar)		
JGP-P	64	-1-AS/1-IS (6 bar)		
JGP-P	64	-2 (6 bar)		
JGP-P	64	-2-AS/2-IS (6 bar	0000	
Legend				
	Can be combi	Can be combined without restrictions		
	Use with rest	Use with restrictions (see loading limits)		
0000	cannot be cor	cannot be combined		

The load limits for describing the application limits can be found in the catalog chapter of the corresponding accessories.

## Finger blanks ABR/SBR-PGZN-plus 64

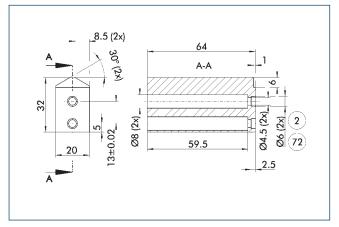

(2) Finger connection


(72) Fit for centering sleeves

The drawing shows the finger blank which can be reworked by the customer.

Description		ID	Material	Scope of delivery	
	Finger blank				
	ABR-PGZN-plus 64	0300010	Aluminum (3.4365)	1	
	SBR-PGZN-plus 64	0300020	Steel (1.7131)	1	

① In the PGL-plus-P gripper series, the use of finger blanks results in a limitation of the closing stroke. Please check this in detail in advance using the CAD data and adjust the reworking of the fingers accordingly.

#### Compensation unit AGE-F

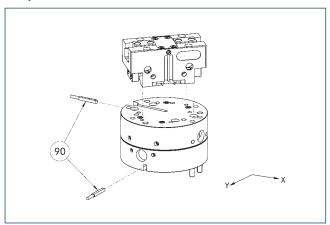


90 Monitoring

The unit has direct connection possibilities for different grippers of the PGN-plus, PGN-plus-P and PZN-plus series. For more detailed information, please refer to the main view.

Description	ID	Compensation XY	Reset force	Often combined
		[mm]	[N]	
Compensation unit				
AGE-F-XY-063-1	0324940	± 4	12	
AGE-F-XY-063-2	0324941	± 4	16	
AGE-F-XY-063-3	0324942	± 4	20	•

① Due to the interfering contour, monitoring of the gripper is not possible.

#### Tolerance compensation unit TCU

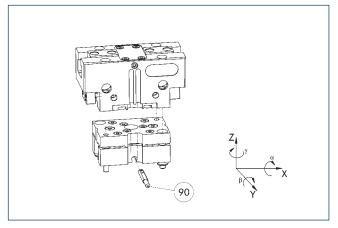


90 Monitoring of locking

Grippers can be directly mounted without an adapter plate. Tolerance compensation unit and gripper have an identical screw connection diagram. Therefore the tolerance compensation units can be assembled later. Please consider the additional assembly height of the tolerance compensation unit. For details please refer to our catalog robot accessories.

Description	ID	Locking	Deflection	Often combined
Compensation unit				
TCU-P-064-3-MV	0324774	yes	±1°/±1,5°/±2°	•
TCU-P-064-3-0V	0324775	no	±1°/±1,5°/±2°	

#### Adapter plate for PGN-plus 64

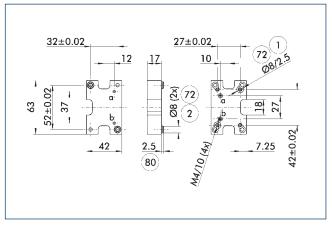


- (1) Robot-side connection
- 72) Fit for centering sleeves
- 2 Tool-side connection
- 80 Depth of the centering sleeve hole in the counter part

The adapter plate has integrated air feed-throughs in order to be able to use the hose-free direct connection of the appropriate gripper.

Description	ID	
Tool side		
A-CWA-080-064-P	0305784	

# Compact change system for grippers

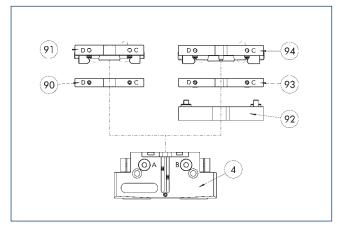


- (4) Grippers
- 90 CWA compact change adapter
- (91) CWK compact change master
- 92 A-CWA adapter plate
- **93** CWA compact change adapter
- **94** CWK compact change master

Grippers can be directly mounted without an adapter plate. For details see our catalog Gripping or Robot Accessories.

Description	ID
Tool side	
A-CWA-080-064-P	0305784
CWA compact change	adapter
CWA-064-P	0305765
CWK compact change	master
CWK-064-P	0305764

#### Add-on valves for single grippers

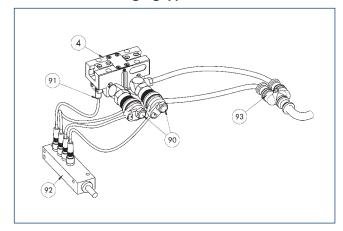

- 4 Grippers
- 92 Sensor distributor
- 90 Micro valves
- 93 Y distributor


(91) Sensor

The set of attachment valves reduces the compressed air consumption as there is no need to ventilate or bleed the supply lines. This can also reduce cycle time. The hose-free direct assembly of the micro valves reduces the hosing effort for the gripper. To further simplify electrical connection of the valves and sensors, their signals can be bundled via an optional distributor.

Description	ID	Often combined
Add-on valve set		
ABV-MV15-M5	0303323	
ABV-MV15-M5-V2-M8	0303386	
ABV-MV15-M5-V4-M8	0303356	•

A set of add-on valves ABV is required per actuator. The ABV set contains two 3/2 micro valves, an Y-distributor for compressed air supply and optionally a sensor distributor with two or four inputs or outputs. Sensors for monitoring the gripper need to be ordered separately. Pneumatic hoses are not included in the scope of delivery.

## Add-on valves for double grippers

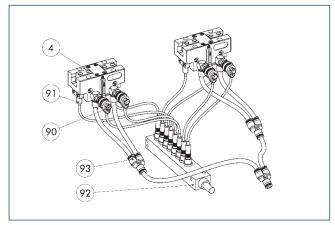

- 4 Grippers
- 90 Micro valves
- 90 Micio valves
- (91) Sensor


- 92 Sensor distributor
- 93 Y distributor

The add-on valve set reduces compressed air consumption as there is no need to ventilate or bleed the supply lines. This can also reduce cycle time. The hose-free direct assembly of the micro valves reduces the hosing effort for the gripper. To further simplify electrical connection of the valves and sensors, their signals can be bundled via a distributor.

Description	ID
Add-on valve set	
ABV-MV15-M5-V8-M8	0303357

A set of add-on valves ABV is required per double gripping unit. The ABV set contains four 3/2 microvalves, three Y-distributors for compressed air supply and a sensor distributor with eight inputs or outputs. Sensors for monitoring the gripper need to be ordered separately. Pneumatic hoses are not included in the scope of delivery.


#### **Modular Assembly Automation**

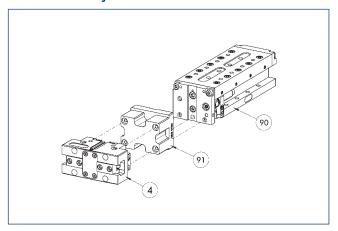

- 4 Grippers
- 91) ASG adapter plate
- 90 Linear module CLM/KLM/LM/ELP/ ELM/ELS/HLM

Grippers and linear modules can be combined with standard adapter plates from the modular assembly system. For more information see our main catalog "Modular Assembly Automation".

# **Inductive proximity switches**

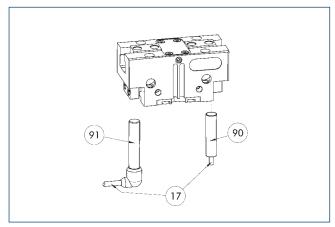


- (17) Cable outlet
- 91) Sensor IN..-SA
- 90 Sensor IN ...

Description	ID	Often combined
Inductive proximity switches		
IN 80-S-M12	0301578	
IN 80-S-M8	0301478	•
INK 80-S	0301550	
Inductive proximity switch with	lateral cable ou	ıtlet
IN 80-S-M12-SA	0301587	
IN 80-S-M8-SA	0301483	•
INK 80-S-SA	0301566	
Connection cables		
KA BG08-L 3P-0300-PNP	0301622	•
KA BG08-L 3P-0500-PNP	0301623	
KA BG12-L 3P-0500-PNP	30016369	
KA BW08-L 3P-0300-PNP	0301594	
KA BW08-L 3P-0500-PNP	0301502	
KA BW12-L 3P-0300-PNP	0301503	
KA BW12-L 3P-0500-PNP	0301507	
Clip for connector/socket		
CLI-M12	0301464	
CLI-M8	0301463	
Cable extension		
KV BG12-SG12 3P-0030-PNP	0301999	
KV BG12-SG12 3P-0060-PNP	0301998	
KV BW08-SG08 3P-0030-PNP	0301495	
KV BW08-SG08 3P-0100-PNP	0301496	
KV BW08-SG08 3P-0200-PNP	0301497	•
KV BW12-SG12 3P-0030-PNP	0301595	
KV BW12-SG12 3P-0100-PNP	0301596	
KV BW12-SG12 3P-0200-PNP	0301597	
Sensor distributor		
V2-M12	0301776	•
V2-M8	0301775	•
V4-M8	0301746	
V8-M8	0301751	

Two sensors are required per unit for monitoring two positions. On option, extension cables and sensor distributors are available. Additional product variants of the sensor, and further information and technical data can be found in the catalog chapter sensor system.

# Flexible position sensor

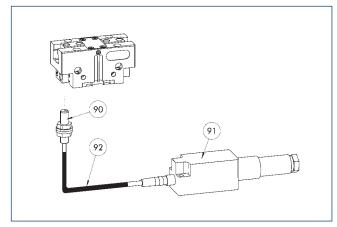


- 90 FPS-S sensor
- 92 Cable extension
- 91) FPS-F5 evaluation electronic

Flexible position monitoring of up to five positions.

Description	ID
Attachment kit for FPS	
AS-FPS-PGN-plus-P 64/80	1363890
Sensor	
FPS-S M8	0301704
Evaluation electronics	
FPS-F5	0301805
Cable extension	
KV BG08-SG08 3P-0050	0301598
KV BG08-SG08 3P-0100	0301599

When using an FPS system, an FPS sensor (FPS-S) as well as an electronic processor (FPS-F5 / F5 T) are required for each gripper as well as a mounting kit (AS), if listed. Cable extensions (KV) are optionally available – see catalog chapter "Accessories."

# **Electronic magnetic switch MMS**

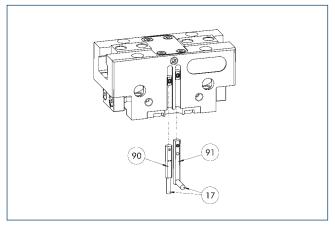


- (17) Cable outlet
- 91) Sensor MMS 22...-SA
- 90 Sensor MMS 22..

End position monitoring for mounting in the C-slot.

Description	ID	Often combined
Electronic magnetic switch		
MMS 22-S-M8-PNP	0301032	•
MMSK 22-S-PNP	0301034	
Electronic magnetic switches with	lateral cable o	outlet
MMS 22-S-M8-PNP-SA	0301042	•
MMSK 22-S-PNP-SA	0301044	
Connection cables		
KA BG08-L 3P-0300-PNP	0301622	•
KA BG08-L 3P-0500-PNP	0301623	
KA BW08-L 3P-0300-PNP	0301594	
KA BW08-L 3P-0500-PNP	0301502	
Clip for connector/socket		
CLI-M8	0301463	
Cable extension		
KV BW08-SG08 3P-0030-PNP	0301495	
KV BW08-SG08 3P-0100-PNP	0301496	
KV BW08-SG08 3P-0200-PNP	0301497	•
Sensor distributor		
V2-M8	0301775	•
V4-M8	0301746	
V8-M8	0301751	

Two sensors are required per unit for monitoring two positions. On option, extension cables and sensor distributors are available. Additional product variants of the sensor, and further information and technical data can be found in the catalog chapter sensor system.

#### Programmable magnetic switch MMS 22-PI1

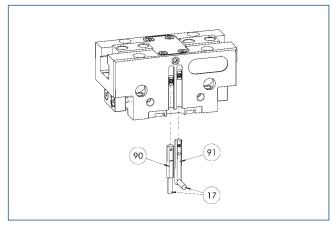


- (17) Cable outlet
- **91**) Sensor MMS 22 ..-PI1-...-SA
- 90 Sensor MMS 22 PI1-...

Position monitoring with one programmable position per sensor and integrated electronic system in the sensor. Can be programmed using MT magnetic teaching tool (included in the scope of delivery, ID 0301030) or ST plug teaching tool (optional). End position monitoring for mounting in the C-slot. If the ST plug teaching tools are listed in the table provided, teaching is only possible with the ST teaching tools.

		-
Description	ID	Often combined
Programmable magnetic switch		
MMS 22-PI1-S-M8-PNP	0301160	•
MMSK 22-PI1-S-PNP	0301162	
Programmable magnetic switch	with lateral o	able outlet
MMS 22-PI1-S-M8-PNP-SA	0301166	•
MMSK 22-PI1-S-PNP-SA	0301168	
Programmable magnetic switch	with stainles	s steel housing
MMS 22-PI1-S-M8-PNP-HD	0301110	•
MMSK 22-PI1-S-PNP-HD	0301112	

Two sensors are required per unit for monitoring two positions. On option, extension cables and sensor distributors are available.
Additional product variants of the sensor, and further information and technical data can be found in the catalog chapter sensor system.

## Programmable magnetic switch MMS 22-PI2

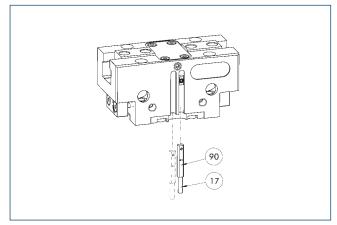

(17) Cable outlet


90 MMS 22...-PI2-... sensor

Positionsabfrage mit zwei programmierbaren Positionen je Sensor und in Sensor integrierter Elektronik. Programmierbar über Magnetteachwerkzeug MT (im Lieferumfang enthalten; Ident.–Nr.: 0301030) oder Steckerteachwerkzeug ST (optional). Endstellungsabfrage in C-Nut montiert. Sind die Steckerteachwerkzeuge ST in der aufgeführten Tabelle gelistet, kann ausschließlich mit den Steckerteachwerkzeugen ST geteacht werden.

Description	ID	Often combined
Programmable magnetic switch		
MMS 22-PI2-S-M8-PNP	0301180	•
MMSK 22-PI2-S-PNP	0301182	
Programmable magnetic switch	with lateral c	able outlet
MMS 22-PI2-S-M8-PNP-SA	0301186	•
MMSK 22-PI2-S-PNP-SA	0301188	
Programmable magnetic switch	with stainless	s steel housing
MMS 22-PI2-S-M8-PNP-HD	0301130	•
MMSK 22-PI2-S-PNP-HD	0301132	

① One sensor is required per unit for monitoring two positions. Extension cables and sensor distributors are optionally available. Additional product variants of the sensor, and further information and technical data can be found in the catalog chapter sensor systems.

## MMS-P programmable magnetic switch

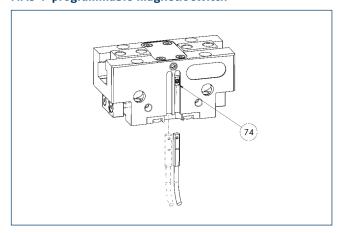


74) Limit stop for sensor

Position monitoring with two programmable positions per sensor. End position monitoring for mounting in the C-slot.

Description	ID	Often combined
Programmable magnetic switch	h	
MMSK-P 22-S-PNP	0301371	
MMS-P 22-S-M8-PNP	0301370	•
Connection cables		
KA GLN0804-LK-00500-A	0307767	•
KA GLN0804-LK-01000-A	0307768	
KA WLN0804-LK-00500-A	0307765	
KA WLN0804-LK-01000-A	0307766	
Clip for connector/socket		
CLI-M8	0301463	
Sensor distributor		
V2-M8-4P-2XM8-3P	0301380	

① One sensor is required per unit for monitoring two positions. Extension cables and sensor distributors are optionally available. Additional product variants of the sensor, and further information and technical data can be found in the catalog chapter sensor systems.

## Analog position sensor MMS-A

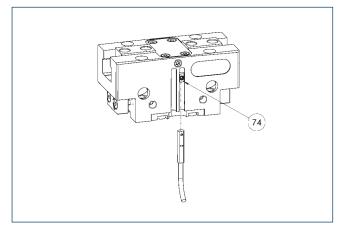


(74) Limit stop for sensor

Non-contact measuring, analog multi-position monitoring for any number of positions, easy to assemble in the C-slot. Can be programmed using MT magnetic teaching tool (included in the scope of delivery, ID 0301030) or ST plug teaching tool (optional). End position monitoring for mounting in the C-slot. If the ST plug teaching tools are listed in the chart provided, teaching is only possible with the ST teaching tools.

Description	ID
Analog position sensor	
MMS 22-A-10V-M08	0315825
MMS 22-A-10V-M12	0315828

① One sensor is required for each gripper. No additional mounting kit is required – the gripper is equipped for use of the sensor by default. Further information and technical data can be found in the catalog chapter sensor systems.

#### Flexible position sensor with MMS-A

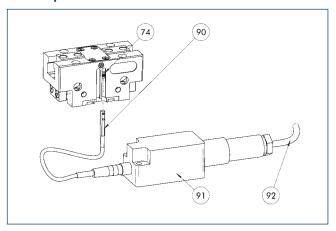


- (74) Limit stop for sensor
- (91) FPS-F5 evaluation electronic
- 90 MMS 22-A-... sensor
- (92) Connection cables

Flexible position monitoring of up to five positions. Sensor can be taught using MT magnetic teaching tool (included in the scope of delivery, ID 0301030) or ST plug teaching tool (optional). If the ST plug teaching tools are listed in the table provided, teaching is only possible with the ST teaching tools.

Description	ID		
Analog position sensor			
MMS 22-A-05V-M08	0315805		
Evaluation electronics			
FPS-F5	0301805		
Sensor Teaching Tool			
MT-MMS 22-PI	0301030		
Connection cables			
KA BG16-L 12P-1000	0301801		

 Beim Einsatz eines FPS-Systems wird pro Greifer ein MMS 22-A-05V sowie eine Auswerteelektronik (FPS-F5) benötigt sowie, falls aufgeführt, einen Anbausatz (AS). Kabelverlängerungen (KV) sind optional im Katalogteil "Zubehör" erhältlich.

# Programmable magnetic switch MMS-I0-Link

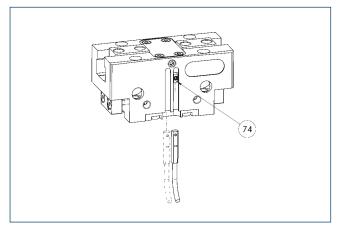


#### (74) Limit stop for sensor

Sensor zur Multi-Positionsabfrage durch Erfassung des kompletten Greiferhubs. Der Sensor wird direkt in der C-Nut des Greifers montiert. Die Programmierung des Sensors auf den Greifer erfolgt via IO-Link-Schnittselle, Magnetteachtool MT (im Lieferumfang enthalten; Ident.-Nr.: 0301030) oder Steckerteachwerkzeug ST (optional). Sind die Steckerteachwerkzeuge ST in der aufgeführten Tabelle gelistet, kann nicht mit dem Magnetteachtool MT geteacht werden. Zum Betrieb ist ein IO-Link-Master notwendig.

Description	ID
Programmable mag	netic switch
MMS 22-I0L-M08	0315830
MMS 22-I0I-M12	0315835

① One sensor is required for each gripper. No additional mounting kit is required – the gripper is equipped for use of the sensor by default. Further information and technical data can be found in the catalog chapter sensor systems.

## APS-Z80 analog position sensor

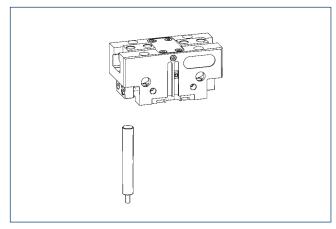


Non-contact measuring, analog multi-position monitoring for any number of positions.

Description	ID	Often combined
Mounting kit for APS-Z80		
AS-APS-Z80-PGN-plus-P 64-1	1366196	
AS-APS-Z80-PGN-plus-P 64-2	1366200	
Analog position sensor		
APS-Z80-K	0302072	
APS-Z80-M8	0302070	•

When using an APS system, one mounting kit (AS-APS-Z80) and one APS-Z80 sensor is required per gripper. The resolution of the sensor can be lower in the peripheral areas of the gripper. You can find further information on the product in the operating manual.

# APS-M1 analog position sensor

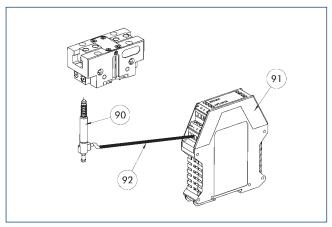

- 90 APS-M1S sensor
- **92** APS-K extension cable
- (91) APS-M1E electronic processor


Analog multi position monitoring for any desired positions

Description	ID
Mounting kit for APS-M1	
AS-APS-M1-PGN-plus-P 64-1	1363716
AS-APS-M1-PGN-plus-P 64-2	1363721
Analog position sensor	
APS-M1S	0302062
Connection cables	
APS-K0200	0302066
APS-K0700	0302068
Evaluation electronics	
APS-M1E	0302064


When using an APS system, for each gripper an attachment kit (AS-APS-M1), an APS-M1S sensor (incl. 3 m cable) as well as an electronics (APS-M1e) are required. An extension cable (APS-K) can be connected between the sensor and the electronics as an option. The max. cable length between the sensor and the electronics is 10 m, between the electronics and their control unit (PLC) it is max. 1 m.




# Gripping force O.D. gripping

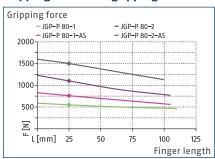

# **Gripping force I.D. gripping**

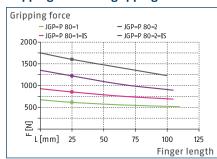

#### **Dimensions and maximum loads**

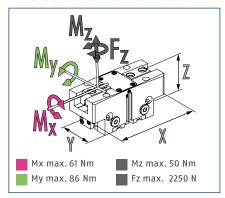


The indicated moments and forces are statical values, apply for each base jaw and may appear simultaneously. Loads may additionally occur to the moment produced by the gripping force itself.

# Technical data

Description		JGP-P 80-1	JGP-P 80-2	JGP-P 80-1-AS	JGP-P 80-2-AS	JGP-P 80-1-IS	JGP-P 80-2-IS
ID		1460262	1460263	1460264	1460265	1460266	1460267
Stroke per jaw	[mm]	8	4	8	4	8	4
Closing/opening force	[N]	550/610	1100/1220	760/-	1500/-	-/850	-/1600
Min. spring force	[N]			210	400	240	380
Weight	[kg]	0.51	0.51	0.63	0.63	0.63	0.63
Recommended workpiece weight	[kg]	2.75	5.5	2.75	5.5	2.75	5.5
Fluid consumption double stroke	[cm³]	29	29	44	44	52	52
Min./nom./max. operating pressure	[bar]	2.5/6/8	2.5/6/8	4/6/6.5	4/6/6.5	4/6/6.5	4/6/6.5
Min./max. air purge pressure	[bar]	0.5/1	0.5/1	0.5/1	0.5/1	0.5/1	0.5/1
Closing/opening time	[s]	0.035/0.035	0.035/0.035	0.03/0.05	0.03/0.05	0.05/0.03	0.05/0.03
Closing/opening time with spring	[s]			0.08	0.08	0.08	0.08
Max. permissible finger length	[mm]	110	105	105	100	105	100
Max. permissible weight per finger	[kg]	0.6	0.6	0.6	0.6	0.6	0.6
IP protection class		40	40	40	40	40	40
Min./max. ambient temperature	[°C]	5/90	5/90	5/90	5/90	5/90	5/90
Repeat accuracy	[mm]	0.01	0.01	0.01	0.01	0.01	0.01
Dimensions X x Y x Z	[mm]	96 x 42 x 49	96 x 42 x 49	96 x 42 x 67			

① It may take a few 100 gripping cycles until the full gripping force (as indicated in the data table) will be available.


#### Main view

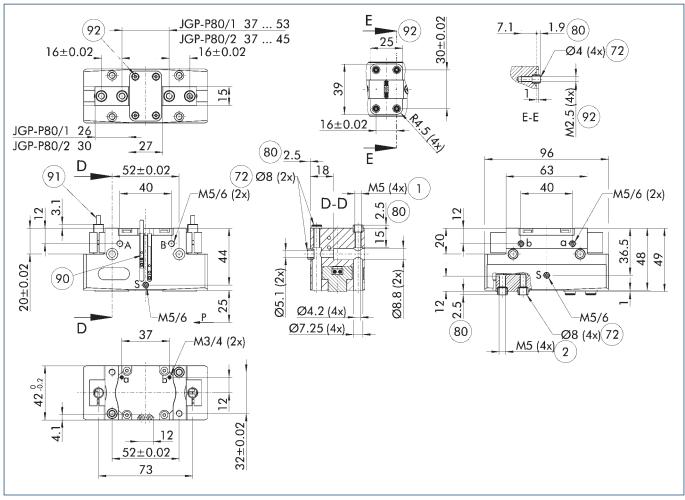


The drawing shows the gripper in the basic version with closed jaws, without dimensional consideration of the options described below.

- As an alternative/in addition to spring-assisted mechanical gripping force maintenance, the SDV-P pressure maintenance valve can be used for I.D. and O.D. gripping (see "Accessories" section of catalog).
- A, a Main / direct connection, gripper opening
- B, b Main / direct connection, gripper closing
- S Air purge connection
- (1) Gripper connection
- (2) Finger connection
- 72) Fit for centering sleeves
- 80 Depth of the centering sleeve hole in the counter part
- 90 Sensor MMS 22..
- (91) Sensor IN ...
- (92) Screw connection with centering for customized mounting (these centering sleeves are not included in the scope of delivery)


# Maximum permitted finger projection

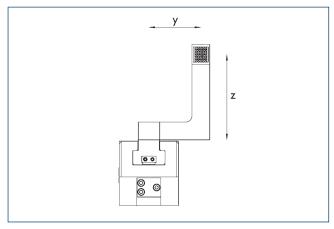

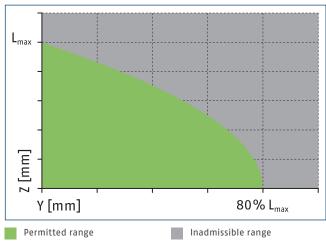


 $L^{\text{max}}$  is equivalent to the maximum permitted finger length, see the technical data table.

## Hose-free direct connection M3

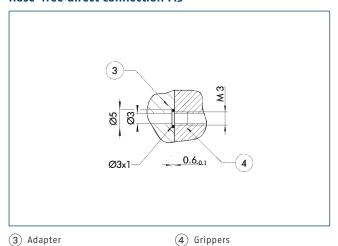

The direct connection is used for supplying compressed air without hoses. Instead, the pressure medium is fed through bore-holes in the mounting plate.


# **Gripping force maintenance version AS/IS**

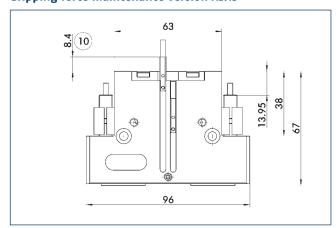

10 Projection applies only for AS version

The mechanical gripping force maintenance device ensures that a minimum clamping force will be applied even if there is a drop in pressure. In the AS/S variant this acts as a closing force, in the IS variant as an opening force. Besides this, gripping force maintenance can be used to increase gripping force or for single actuated gripping.

# **Electronic symbol according to DIN ISO 1219**

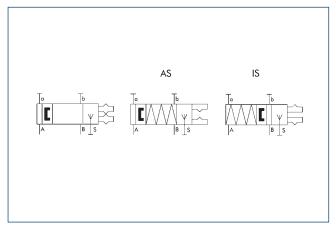


- A, a Main / direct connection, gripper opening
- B, b Main / direct connection, gripper closing
- S Air purge connection

The circuit symbol shows the connection options and the function of the pneumatic gripper. "A" and "B" are the main connections of the gripper for opening and closing. "a" and "b" are optional direct connections for opening and closing without interference–prone hosing. "S" describes the optional air purge connection, which impedes the ingress of dirt into the gripper.

SCHUNK also provides ECAD data for your design. You can choose between direct access via your EPLAN-Electric P8 software or download using the EPLAN Data Portal. Further information can be found on the SCHUNK website.

## SDV-P pressure maintenance valve

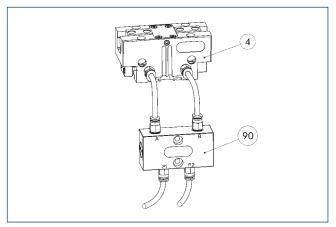

4 Grippers


90 SDV-P pressure maintenance

The SDV-P pressure maintenance valve ensures in emergency STOP situations that the pressure in the piston chamber of pneumatic gripper, swivel, linear, and quick-change modules is temporarily maintained.

Description	ID	Recommended hose diameter		
		[mm]		
Pressure maintenance valve				
SDV-P 04	0403130	6		
SDV-P 07	0403131	8		
Pressure maintenance valve with air bleed screw				
SDV-P 04-E	0300120	6		
SDV-P 07-E	0300121	8		

① In order to achieve the specified closing and opening time for each gripper variant, the recommended hose diameter must be used. The direct allocation of the respective variant of the gripper for the respective SDV-P can be found at schunk.com.

#### SDV-P E-P pressure maintenance valve

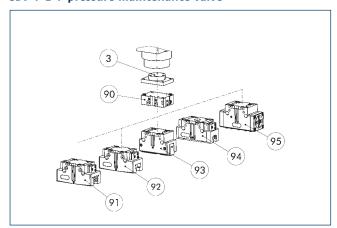


- (3) Adapter
- 90 SDV-P E-P pressure maintenance valve
- 91) 2-finger parallel gripper PGN-plus/PGN-plus-P
- 92 2-finger parallel gripper JGP-P
- 93) 2-finger angular gripper PWG-plus
- (94) 2-finger parallel gripper PGB
- 95) Sealed DPG-plus gripper

The SDV-P E-P pressure maintenance valves ensure that the pressure in the piston chamber is maintained temporarily during an emergency stop. SDV-P E-P can be directly connected to the listed grippers without the need for additional pneumatic hoses.

Description	ID
Pressure mainter	nance valve
SDV-P 80-E-P	0300125

## **Protective cover HUE PGN-plus 80**

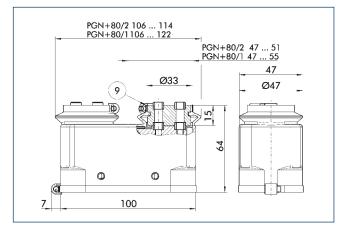


9 For mounting screw connection diagram, see basic version

The HUE protective cover fully protects the gripper against external influences. The cover is suitable for applications of up to IP65 if an additional sealing of the cover bottom is provided. For detailed information, please see the HUE series. The connection diagram shifts by the height of the intermediate jaw.

Description	ID	IP protection class
Protection cover		
HUE PGN-plus 80	0371481	65

The HUE protective cover is not suitable for use on grippers with gripping force maintenance. An inductive monitoring of the gripper in connection with the HUE protective cover is not possible. SCHUNK recommends the use of magnetic sensors that are approved for the respective gripper variant.

# BSWS jaw quick-change jaw systems

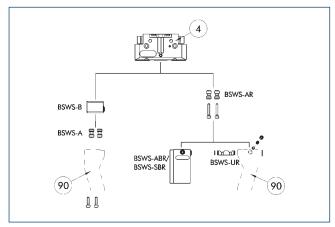

(4) Grippers

90 Customized gripper fingers

There are various jaw quick-change systems available for the gripper. For detailed information, please refer to the corresponding product.

Description	ID	Scope of delivery			
Jaw quick-change system ada	pter pin				
BSWS-A 80	0303024	2			
BSWS-AR 80	0300093	2			
Quick-change jaw system base	2				
BSWS-B 80	0303025	1			
Jaw quick-change system finger blank					
BSWS-ABR-PGZN-plus 80	0300073	1			
BSWS-SBR-PGZN-plus 80	0300083	1			
Jaw quick-change system locking mechanism					
BSWS-UR 80	0302992	1			


① If the operating pressure is higher than 6 bar, suitability for use beyond the application limits must be checked. Only systems that are listed in the table, can be used.

#### Fields of application

Series	Size	Variant	Suitability		
JGP-P	80	-1 (6 bar)			
JGP-P	80	-1-AS/1-IS (6 bar)			
JGP-P	80	-2 (6 bar)			
JGP-P	80	-2-AS/2-IS (6 bar)			
Legend					
	Can be combined without restrictions				
	Use with restrictions (see loading limits)				
0000	cannot be combined				

The load limits for describing the application limits can be found in the catalog chapter of the corresponding accessories.

## Jaw quick-change system BSWS-M

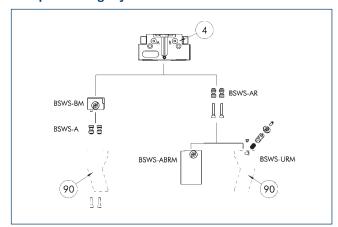

(4) Grippers

**90** Customized gripper fingers

There are various jaw quick-change systems available for the gripper. For detailed information, please refer to the corresponding product.

Description	ID	Scope of delivery				
Jaw quick-change system adapter pin						
BSWS-A 80	0303024	2				
BSWS-AR 80	0300093	2				
Quick-change jaw system base	Quick-change jaw system base					
BSWS-BM 80	1313901	1				
Jaw quick-change system finger blank						
BSWS-ABRM-PGZN-plus 80	1420852	1				
Jaw quick-change system locking mechanism						
BSWS-URM 80	1398402	1				


① If the operating pressure is higher than 6 bar, suitability for use beyond the application limits must be checked. Only systems that are listed in the table, can be used.

#### Fields of application

Series	Size	Variant	Suitability		
JGP-P	80	-1 (6 bar)			
JGP-P	80	-1-AS/1-IS (6 bar)			
JGP-P	80	-2 (6 bar)			
JGP-P	80	-2-AS/2-IS (6 bar)			
Legend					
	Can be combined without restrictions				
	Use with restrictions (see loading limits)				
0000	cannot be combined				

The load limits for describing the application limits can be found in the catalog chapter of the corresponding accessories.

## ZBA-L-plus 80 intermediate jaws

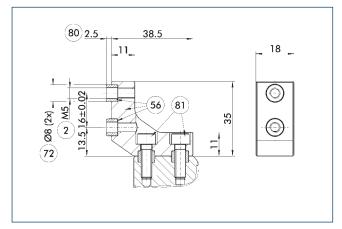


- 2 Finger connection
- 66 Included in the scope of delivery
- (72) Fit for centering sleeves
- 80 Depth of the centering sleeve hole in the counter part
- 81) Not included in the scope of delivery

The optional ZBA-L-plus intermediate jaws allow the screw connection diagram of the top jaws to be rotated by 90°. This makes it easier to design and produce top jaws (particularly for long versions) because no deep through-bores are required.

Description	ID		Finger interface	Scope of delivery
Intermediate jaw				
ZBA-L-plus 80	0311732	Aluminum	PGN-plus 80	1

## UZB 80 universal intermediate jaw

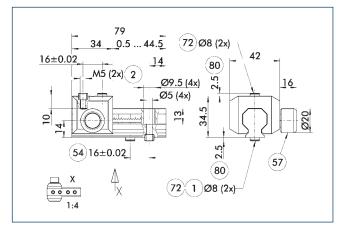

- 1 Gripper connection
- (2) Finger connection
- 54 Optional right or left connection
- 57 Locking
- (72) Fit for centering sleeves
- 80 Depth of the centering sleeve hole in the counter part

The drawing shows the UZB universal intermediate jaw. The fully removable UZB-S slide (can also be ordered separately) allows for a quick jaw change.

Description	ID	Grid dimension
		[mm]
Universal intermediate	jaw	
UZB 80	0300043	2
Finger blank		
ABR-PGZN-plus 80	0300011	
SBR-PGZN-plus 80	0300021	
Slide for universal inte	rmediate jaw	
UZB-S 80	5518271	2


① If the operating pressure is higher than 6 bar, suitability for use beyond the application limits must be checked.

#### Fields of application

Series	Size	Variant	Suitability
JGP-P	80	-1 (6 bar)	
JGP-P	80	-1-AS/1-IS (6 bar)	
JGP-P	80	-2 (6 bar)	
JGP-P	80	-2-AS/2-IS (6 bar)	0000
Legend			
	Can be combined w	rithout restrictions	
	Use with restriction	ns (see loading limit	s)
0000	cannot be combine	d	

The load limits for describing the application limits can be found in the catalog chapter of the corresponding accessories.

## Finger blanks ABR/SBR-PGZN-plus 80

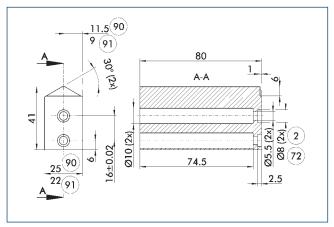


- (2) Finger connection
- 90 ABR-PGZN-plus
- 72) Fit for centering sleeves
- 91) SBR-PGZN-plus

The drawing shows the finger blank which can be reworked by the customer.

Description	ID	Material	Scope of delivery
Finger blank			
ABR-PGZN-plus 80	0300011	Aluminum (3.4365)	1
SBR-PGZN-plus 80	0300021	Steel (1.7131)	1

① In the PGL-plus-P gripper series, the use of finger blanks results in a limitation of the closing stroke. Please check this in detail in advance using the CAD data and adjust the reworking of the fingers accordingly.

## **Compensation unit AGE-F**

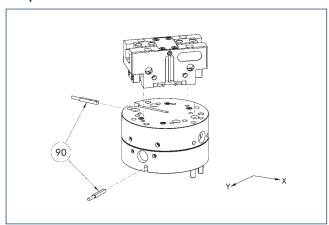


90 Monitoring

The unit has direct connection possibilities for different grippers of the PGN-plus, PGN-plus-P and PZN-plus series. For more detailed information, please refer to the main view.

Description	ID	Compensation XY	Reset force	Often combined
		[mm]	[N]	
Compensation unit				
AGE-F-XY-063-1	0324940	± 4	12	
AGE-F-XY-063-2	0324941	± 4	16	
AGE-F-XY-063-3	0324942	± 4	20	•

① Due to the interfering contour, monitoring of the gripper is not possible.

## Tolerance compensation unit TCU

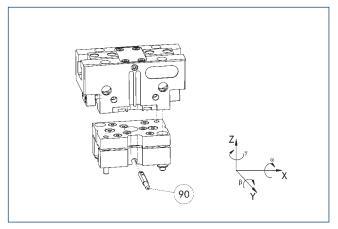


90 Monitoring of locking

Grippers can be directly mounted without an adapter plate. Tolerance compensation unit and gripper have an identical screw connection diagram. Therefore the tolerance compensation units can be assembled later. Please consider the additional assembly height of the tolerance compensation unit. For details please refer to our catalog robot accessories.

Description	ID	Locking	Deflection	Often combined
Compensation unit				
TCU-P-080-3-MV	0324792	yes	±1°/±1,5°/±2°	•
TCU-P-080-3-0V	0324793	no	±1°/±1,5°/±2°	

## Adapter plate PGN-plus 80

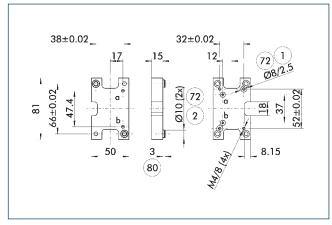


- (1) Robot-side connection
- 72 Fit for centering sleeves
- 2 Tool-side connection
- 80 Depth of the centering sleeve hole in the counter part

The adapter plate has integrated air feed-throughs in order to be able to use the hose-free direct connection of the appropriate gripper.

Description	ID	
Tool side		
A-CWA-100-080-P	0305804	

## Compact change system for grippers

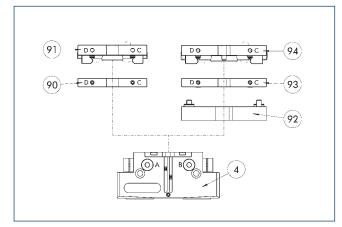


- (4) Grippers
- 90 CWA compact change adapter
- (91) CWK compact change master
- 92 A-CWA adapter plate
- **93** CWA compact change adapter
- **94** CWK compact change master

Grippers can be directly mounted without an adapter plate. For details see our catalog Gripping or Robot Accessories.

Description	ID
Tool side	
A-CWA-100-080-P	0305804
CWA compact change	adapter
CWA-080-P	0305781
CWK compact change	master
CWK-080-P	0305780

## Add-on valves for single grippers

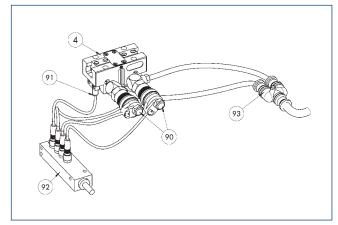


- 4 Grippers
- 92 Sensor distributor93 Y distributor
- 90 Micro valves91 Sensor

The set of attachment valves reduces the compressed air consumption as there is no need to ventilate or bleed the supply lines. This can also reduce cycle time. The hose-free direct assembly of the micro valves reduces the hosing effort for the gripper. To further simplify electrical connection of the valves and sensors, their signals can be bundled via an optional distributor.

Description	ID	Often combined
Add-on valve set		
ABV-MV25-M5	0303326	
ABV-MV25-M5-V2-M8	0303392	
ABV-MV25-M5-V4-M8	0303362	•

A set of add-on valves ABV is required per actuator. The ABV set contains two 3/2 micro valves, an Y-distributor for compressed air supply and optionally a sensor distributor with two or four inputs or outputs. Sensors for monitoring the gripper need to be ordered separately. Pneumatic hoses are not included in the scope of delivery.

## Add-on valves for double grippers

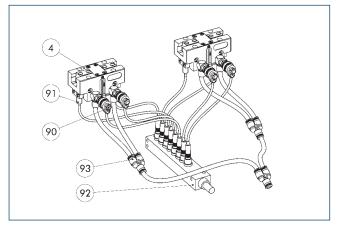


- 4 Grippers
- 90 Micro valves
- (91) Sensor
- 92 Sensor distributor
- 93 Y distributor

The add-on valve set reduces compressed air consumption as there is no need to ventilate or bleed the supply lines. This can also reduce cycle time. The hose-free direct assembly of the micro valves reduces the hosing effort for the gripper. To further simplify electrical connection of the valves and sensors, their signals can be bundled via a distributor.

Description	ID
Add-on valve set	
ABV-MV25-M5-V8-M8	0303363

A set of add-on valves ABV is required per double gripping unit. The ABV set contains four 3/2 microvalves, three Y-distributors for compressed air supply and a sensor distributor with eight inputs or outputs. Sensors for monitoring the gripper need to be ordered separately. Pneumatic hoses are not included in the scope of delivery.


#### **Modular Assembly Automation**

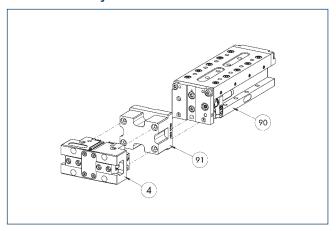

- 4 Grippers
- **91** ASG adapter plate
- 90 Linear module CLM/KLM/LM/ELP/ ELM/ELS/HLM

Grippers and linear modules can be combined with standard adapter plates from the modular assembly system. For more information see our main catalog "Modular Assembly Automation".

# **Inductive proximity switches**

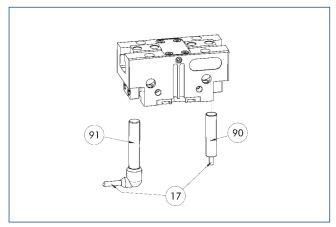


- (17) Cable outlet
- 91) Sensor IN..-SA
- 90 Sensor IN ...

Description	ID	Often combined
Inductive proximity switches		
IN 80-S-M12	0301578	
IN 80-S-M8	0301478	•
INK 80-S	0301550	
Inductive proximity switch with la	teral cable ou	tlet
IN 80-S-M12-SA	0301587	
IN 80-S-M8-SA	0301483	•
INK 80-S-SA	0301566	
Connection cables		
KA BG08-L 3P-0300-PNP	0301622	•
KA BG08-L 3P-0500-PNP	0301623	
KA BG12-L 3P-0500-PNP	30016369	
KA BW08-L 3P-0300-PNP	0301594	
KA BW08-L 3P-0500-PNP	0301502	
KA BW12-L 3P-0300-PNP	0301503	
KA BW12-L 3P-0500-PNP	0301507	
Clip for connector/socket		
CLI-M12	0301464	
CLI-M8	0301463	
Cable extension		
KV BG12-SG12 3P-0030-PNP	0301999	
KV BG12-SG12 3P-0060-PNP	0301998	
KV BW08-SG08 3P-0030-PNP	0301495	
KV BW08-SG08 3P-0100-PNP	0301496	
KV BW08-SG08 3P-0200-PNP	0301497	•
KV BW12-SG12 3P-0030-PNP	0301595	
KV BW12-SG12 3P-0100-PNP	0301596	
KV BW12-SG12 3P-0200-PNP	0301597	
Sensor distributor		
V2-M12	0301776	•
V2-M8	0301775	•
V4-M8	0301746	
V8-M8	0301751	

Two sensors are required per unit for monitoring two positions. On option, extension cables and sensor distributors are available. Additional product variants of the sensor, and further information and technical data can be found in the catalog chapter sensor system.

# Flexible position sensor

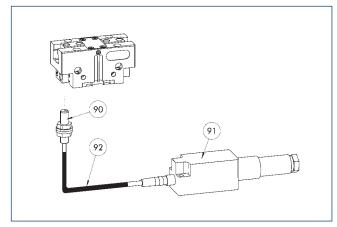


- 90 FPS-S sensor
- 92 Cable extension
- 91) FPS-F5 evaluation electronic

Flexible position monitoring of up to five positions.

Description	ID
Attachment kit for FPS	
AS-FPS-PGN-plus-P 64/80	1363890
Sensor	
FPS-S M8	0301704
Evaluation electronics	
FPS-F5	0301805
Cable extension	
KV BG08-SG08 3P-0050	0301598
KV BG08-SG08 3P-0100	0301599

When using an FPS system, an FPS sensor (FPS-S) as well as an electronic processor (FPS-F5 / F5 T) are required for each gripper as well as a mounting kit (AS), if listed. Cable extensions (KV) are optionally available – see catalog chapter "Accessories."

# **Electronic magnetic switch MMS**

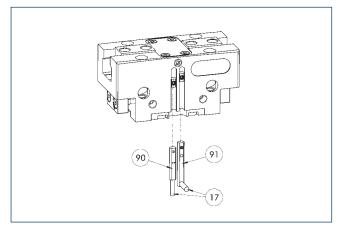


- (17) Cable outlet
- 91) Sensor MMS 22...-SA
- 90 Sensor MMS 22..

End position monitoring for mounting in the C-slot.

Description	ID	Often combined
Electronic magnetic switch		
MMS 22-S-M8-PNP	0301032	•
MMSK 22-S-PNP	0301034	
Electronic magnetic switches with	lateral cable o	outlet
MMS 22-S-M8-PNP-SA	0301042	•
MMSK 22-S-PNP-SA	0301044	
Connection cables		
KA BG08-L 3P-0300-PNP	0301622	•
KA BG08-L 3P-0500-PNP	0301623	
KA BW08-L 3P-0300-PNP	0301594	
KA BW08-L 3P-0500-PNP	0301502	
Clip for connector/socket		
CLI-M8	0301463	
Cable extension		
KV BW08-SG08 3P-0030-PNP	0301495	
KV BW08-SG08 3P-0100-PNP	0301496	
KV BW08-SG08 3P-0200-PNP	0301497	•
Sensor distributor		
V2-M8	0301775	•
V4-M8	0301746	
V8-M8	0301751	

Two sensors are required per unit for monitoring two positions. On option, extension cables and sensor distributors are available.
Additional product variants of the sensor, and further information and technical data can be found in the catalog chapter sensor system.

## Programmable magnetic switch MMS 22-PI1

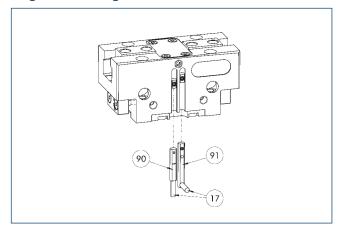


- (17) Cable outlet
- **91**) Sensor MMS 22 ..-PI1-...-SA
- 90 Sensor MMS 22 PI1-...

Position monitoring with one programmable position per sensor and integrated electronic system in the sensor. Can be programmed using MT magnetic teaching tool (included in the scope of delivery, ID 0301030) or ST plug teaching tool (optional). End position monitoring for mounting in the C-slot. If the ST plug teaching tools are listed in the table provided, teaching is only possible with the ST teaching tools.

		•
Description	ID	Often combined
Programmable magnetic switch		
MMS 22-PI1-S-M8-PNP	0301160	•
MMSK 22-PI1-S-PNP	0301162	
Programmable magnetic switch	with lateral o	able outlet
MMS 22-PI1-S-M8-PNP-SA	0301166	•
MMSK 22-PI1-S-PNP-SA	0301168	
Programmable magnetic switch	with stainles	s steel housing
MMS 22-PI1-S-M8-PNP-HD	0301110	•
MMSK 22-PI1-S-PNP-HD	0301112	

Two sensors are required per unit for monitoring two positions. On option, extension cables and sensor distributors are available.
Additional product variants of the sensor, and further information and technical data can be found in the catalog chapter sensor system.

## Programmable magnetic switch MMS 22-PI2

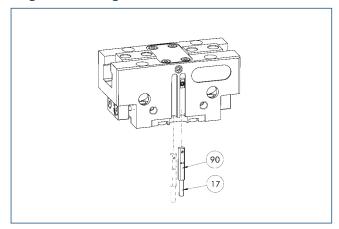

(17) Cable outlet


90 MMS 22...-PI2-... sensor

Positionsabfrage mit zwei programmierbaren Positionen je Sensor und in Sensor integrierter Elektronik. Programmierbar über Magnetteachwerkzeug MT (im Lieferumfang enthalten; Ident.–Nr.: 0301030) oder Steckerteachwerkzeug ST (optional). Endstellungsabfrage in C-Nut montiert. Sind die Steckerteachwerkzeuge ST in der aufgeführten Tabelle gelistet, kann ausschließlich mit den Steckerteachwerkzeugen ST geteacht werden.

Description	ID	Often combined
Programmable magnetic switch		
MMS 22-PI2-S-M8-PNP	0301180	•
MMSK 22-PI2-S-PNP	0301182	
Programmable magnetic switch	with lateral c	able outlet
MMS 22-PI2-S-M8-PNP-SA	0301186	•
MMSK 22-PI2-S-PNP-SA	0301188	
Programmable magnetic switch	with stainless	s steel housing
MMS 22-PI2-S-M8-PNP-HD	0301130	•
MMSK 22-PI2-S-PNP-HD	0301132	

① One sensor is required per unit for monitoring two positions. Extension cables and sensor distributors are optionally available. Additional product variants of the sensor, and further information and technical data can be found in the catalog chapter sensor systems.

## MMS-P programmable magnetic switch

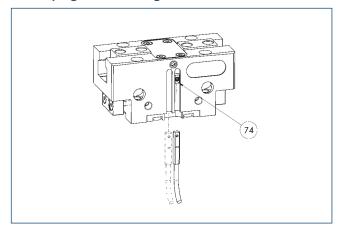


74) Limit stop for sensor

Position monitoring with two programmable positions per sensor. End position monitoring for mounting in the C-slot.

Description	ID	Often combined
Programmable magnetic switch	h	
MMSK-P 22-S-PNP	0301371	
MMS-P 22-S-M8-PNP	0301370	•
Connection cables		
KA GLN0804-LK-00500-A	0307767	•
KA GLN0804-LK-01000-A	0307768	
KA WLN0804-LK-00500-A	0307765	
KA WLN0804-LK-01000-A	0307766	
Clip for connector/socket		
CLI-M8	0301463	
Sensor distributor		
V2-M8-4P-2XM8-3P	0301380	

① One sensor is required per unit for monitoring two positions. Extension cables and sensor distributors are optionally available. Additional product variants of the sensor, and further information and technical data can be found in the catalog chapter sensor systems.

## Analog position sensor MMS-A

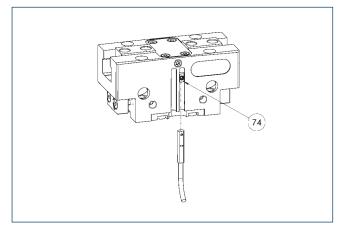


(74) Limit stop for sensor

Non-contact measuring, analog multi-position monitoring for any number of positions, easy to assemble in the C-slot. Can be programmed using MT magnetic teaching tool (included in the scope of delivery, ID 0301030) or ST plug teaching tool (optional). End position monitoring for mounting in the C-slot. If the ST plug teaching tools are listed in the chart provided, teaching is only possible with the ST teaching tools.

Descr	iption	ID
Analo	g position sensor	
MMS 2	22-A-10V-M08	0315825
MMS 2	22-A-10V-M12	0315828

① One sensor is required for each gripper. No additional mounting kit is required – the gripper is equipped for use of the sensor by default. Further information and technical data can be found in the catalog chapter sensor systems.

#### Flexible position sensor with MMS-A

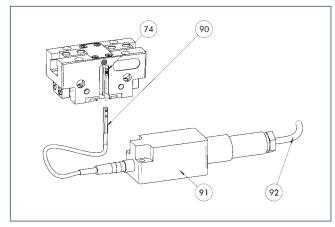


- (74) Limit stop for sensor
- (91) FPS-F5 evaluation electronic
- 90 MMS 22-A-... sensor
- (92) Connection cables

Flexible position monitoring of up to five positions. Sensor can be taught using MT magnetic teaching tool (included in the scope of delivery, ID 0301030) or ST plug teaching tool (optional). If the ST plug teaching tools are listed in the table provided, teaching is only possible with the ST teaching tools.

Description	ID
Analog position sensor	
MMS 22-A-05V-M08	0315805
Evaluation electronics	
FPS-F5	0301805
Sensor Teaching Tool	
MT-MMS 22-PI	0301030
Connection cables	
KA BG16-L 12P-1000	0301801

Beim Einsatz eines FPS-Systems wird pro Greifer ein MMS 22-A-05V sowie eine Auswerteelektronik (FPS-F5) benötigt sowie, falls aufgeführt, einen Anbausatz (AS). Kabelverlängerungen (KV) sind optional im Katalogteil "Zubehör" erhältlich.

## Programmable magnetic switch MMS-I0-Link

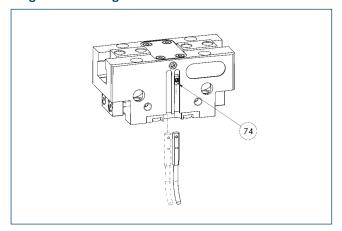


#### (74) Limit stop for sensor

Sensor zur Multi-Positionsabfrage durch Erfassung des kompletten Greiferhubs. Der Sensor wird direkt in der C-Nut des Greifers montiert. Die Programmierung des Sensors auf den Greifer erfolgt via IO-Link-Schnittselle, Magnetteachtool MT (im Lieferumfang enthalten; Ident.-Nr.: 0301030) oder Steckerteachwerkzeug ST (optional). Sind die Steckerteachwerkzeuge ST in der aufgeführten Tabelle gelistet, kann nicht mit dem Magnetteachtool MT geteacht werden. Zum Betrieb ist ein IO-Link-Master notwendig.

Description	ID
Programmable magi	netic switch
MMS 22-10L-M08	0315830
MMS 22-I0L-M12	0315835

① One sensor is required for each gripper. No additional mounting kit is required – the gripper is equipped for use of the sensor by default. Further information and technical data can be found in the catalog chapter sensor systems.

## APS-Z80 analog position sensor

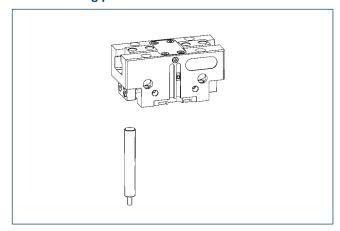


Non-contact measuring, analog multi-position monitoring for any number of positions.

Description	ID	Often combined
Mounting kit for APS-Z80		
AS-APS-Z80-PGN-plus-P 80-1	1366209	
AS-APS-Z80-PGN-plus-P 80-2	1366215	
Analog position sensor		
APS-Z80-K	0302072	
APS-Z80-M8	0302070	•

When using an APS system, one mounting kit (AS-APS-Z80) and one APS-Z80 sensor is required per gripper. The resolution of the sensor can be lower in the peripheral areas of the gripper. You can find further information on the product in the operating manual.

# APS-M1 analog position sensor

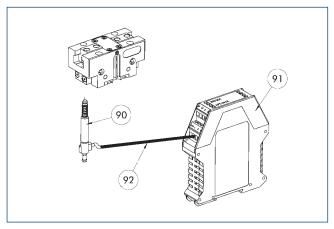

- 90 APS-M1S sensor
- **92** APS-K extension cable
- (91) APS-M1E electronic processor


Analog multi position monitoring for any desired positions

Description	ID	
Mounting kit for APS-M1		
AS-APS-M1-PGN-plus-P 80-1	1363725	
AS-APS-M1-PGN-plus-P 80-2	1363731	
Analog position sensor		
APS-M1S	0302062	
Connection cables		
APS-K0200	0302066	
APS-K0700	0302068	
Evaluation electronics		
APS-M1E	0302064	


When using an APS system, for each gripper an attachment kit (AS-APS-M1), an APS-M1S sensor (incl. 3 m cable) as well as an electronics (APS-M1e) are required. An extension cable (APS-K) can be connected between the sensor and the electronics as an option. The max. cable length between the sensor and the electronics is 10 m, between the electronics and their control unit (PLC) it is max. 1 m.




# Gripping force O.D. gripping

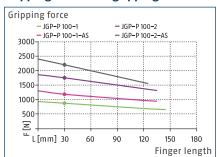

# **Gripping force I.D. gripping**

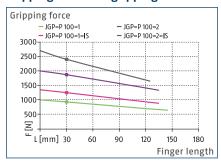

#### **Dimensions and maximum loads**

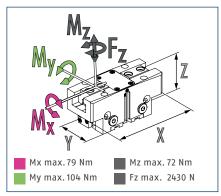


The indicated moments and forces are statical values, apply for each base jaw and may appear simultaneously. Loads may additionally occur to the moment produced by the gripping force itself.

# Technical data

Description		JGP-P 100-1	JGP-P 100-2	JGP-P 100-1-AS	JGP-P 100-2-AS	JGP-P 100-1-IS	JGP-P 100-2-IS
ID		1460268	1460269	1460270	1460272	1460273	1460274
Stroke per jaw	[mm]	10	5	10	5	10	5
Closing/opening force	[N]	870/930	1750/1870	1180/-	2200/-	-/1250	-/2400
Min. spring force	[N]			310	450	320	530
Weight	[kg]	0.9	0.9	1.1	1.1	1.1	1.1
Recommended workpiece weight	[kg]	4.35	8.75	4.35	8.75	4.35	8.75
Fluid consumption double stroke	[cm³]	55	55	84	84	92	92
Min./nom./max. operating pressure	[bar]	2.5/6/8	2.5/6/8	4/6/6.5	4/6/6.5	4/6/6.5	4/6/6.5
Min./max. air purge pressure	[bar]	0.5/1	0.5/1	0.5/1	0.5/1	0.5/1	0.5/1
Closing/opening time	[s]	0.06/0.06	0.06/0.06	0.05/0.09	0.05/0.09	0.09/0.05	0.09/0.05
Closing/opening time with spring	[s]			0.10	0.10	0.10	0.10
Max. permissible finger length	[mm]	145	135	135	125	135	125
Max. permissible weight per finger	[kg]	1.1	1.1	1.1	1.1	1.1	1.1
IP protection class		40	40	40	40	40	40
Min./max. ambient temperature	[°C]	5/90	5/90	5/90	5/90	5/90	5/90
Repeat accuracy	[mm]	0.01	0.01	0.01	0.01	0.01	0.01
Dimensions X x Y x Z	[mm]	120 x 50 x 55	120 x 50 x 55	120 x 50 x 81			

① It may take a few 100 gripping cycles until the full gripping force (as indicated in the data table) will be available.


#### Main view

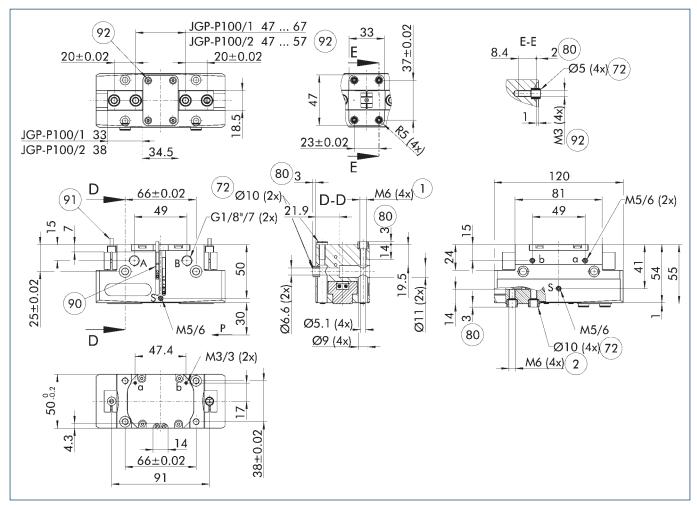


The drawing shows the gripper in the basic version with closed jaws, without dimensional consideration of the options described below.

- As an alternative/in addition to spring-assisted mechanical gripping force maintenance, the SDV-P pressure maintenance valve can be used for I.D. and O.D. gripping (see "Accessories" section of catalog).
- A, a Main / direct connection, gripper opening
- B, b Main / direct connection, gripper closing
- S Air purge connection
- (1) Gripper connection
- (2) Finger connection
- (72) Fit for centering sleeves
- 80 Depth of the centering sleeve hole in the counter part
- 90 Sensor MMS 22..
- (91) Sensor IN ...
- (92) Screw connection with centering for customized mounting (these centering sleeves are not included in the scope of delivery)


## Maximum permitted finger projection

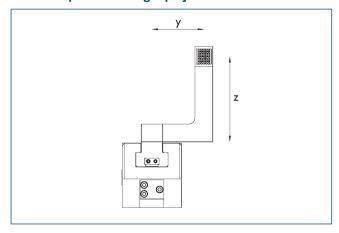

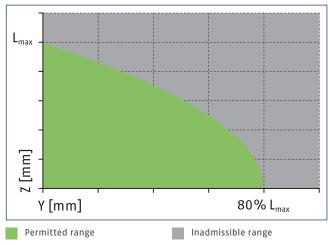


 $L^{\text{max}}$  is equivalent to the maximum permitted finger length, see the technical data table.

## Hose-free direct connection M4

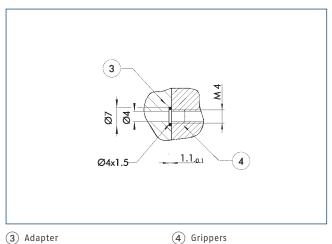

The direct connection is used for supplying compressed air without hoses. Instead, the pressure medium is fed through bore-holes in the mounting plate.


# **Gripping force maintenance version AS/IS**

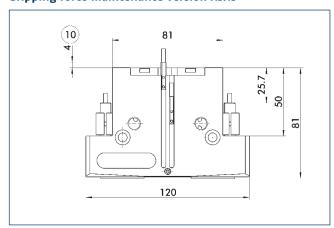

10 Projection applies only for AS version

The mechanical gripping force maintenance device ensures that a minimum clamping force will be applied even if there is a drop in pressure. In the AS/S variant this acts as a closing force, in the IS variant as an opening force. Besides this, gripping force maintenance can be used to increase gripping force or for single actuated gripping.

# **Electronic symbol according to DIN ISO 1219**

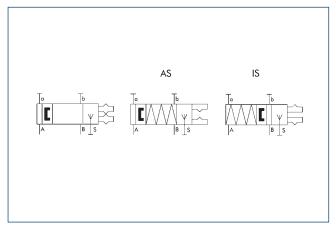


- A, a Main / direct connection, gripper opening
- B, b Main / direct connection, gripper closing
- S Air purge connection

The circuit symbol shows the connection options and the function of the pneumatic gripper. "A" and "B" are the main connections of the gripper for opening and closing. "a" and "b" are optional direct connections for opening and closing without interference–prone hosing. "S" describes the optional air purge connection, which impedes the ingress of dirt into the gripper.

SCHUNK also provides ECAD data for your design. You can choose between direct access via your EPLAN-Electric P8 software or download using the EPLAN Data Portal. Further information can be found on the SCHUNK website.

#### SDV-P pressure maintenance valve

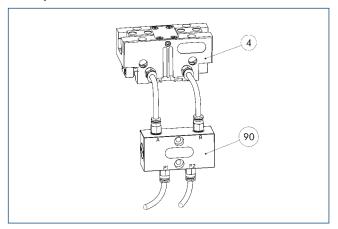

4 Grippers


90 SDV-P pressure maintenance valve

The SDV-P pressure maintenance valve ensures in emergency STOP situations that the pressure in the piston chamber of pneumatic gripper, swivel, linear, and quick-change modules is temporarily maintained.

Description	ID	Recommended hose diameter
		[mm]
Pressure maintenance	e valve	
SDV-P 04	0403130	6
SDV-P 07	0403131	8
Pressure maintenance	e valve with a	ir bleed screw
SDV-P 04-E	0300120	6
SDV-P 07-E	0300121	8

① In order to achieve the specified closing and opening time for each gripper variant, the recommended hose diameter must be used. The direct allocation of the respective variant of the gripper for the respective SDV-P can be found at schunk.com.

#### SDV-P E-P pressure maintenance valve

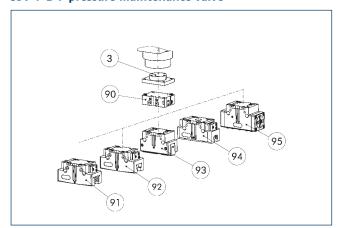


- (3) Adapter
- 90 SDV-P E-P pressure maintenance valve
- 91) 2-finger parallel gripper PGN-plus/PGN-plus-P
- 92 2-finger parallel gripper JGP-P
- 93 2-finger angular gripper PWG-plus
- (94) 2-finger parallel gripper PGB
- 95) Sealed DPG-plus gripper

The SDV-P E-P pressure maintenance valves ensure that the pressure in the piston chamber is maintained temporarily during an emergency stop. SDV-P E-P can be directly connected to the listed grippers without the need for additional pneumatic hoses.

Description	ID
Pressure maintena	ance valve
SDV-P 100-E-P	0300126

## **Protective cover HUE PGN-plus 100**

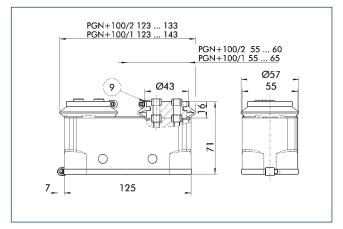


9 For mounting screw connection diagram, see basic version

The HUE protective cover fully protects the gripper against external influences. The cover is suitable for applications of up to IP65 if an additional sealing of the cover bottom is provided. For detailed information, please see the HUE series. The connection diagram shifts by the height of the intermediate jaw.

Description	ID	IP protection class
Protection cover		
HUE PGN-plus 100	0371482	65

① The HUE protective cover is not suitable for use on grippers with gripping force maintenance. An inductive monitoring of the gripper in connection with the HUE protective cover is not possible. SCHUNK recommends the use of magnetic sensors that are approved for the respective gripper variant.

# BSWS jaw quick-change jaw systems

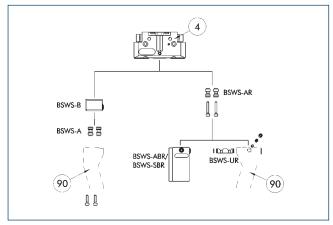

(4) Grippers

90 Customized gripper fingers

There are various jaw quick-change systems available for the gripper. For detailed information, please refer to the corresponding product.

Description	ID	Scope of delivery				
Jaw quick-change system adapt	Jaw quick-change system adapter pin					
BSWS-A 100	0303026	2				
BSWS-AR 100	0300094	2				
Quick-change jaw system base						
BSWS-B 100	0303027	1				
Jaw quick-change system finger blank						
BSWS-ABR-PGZN-plus 100	0300074	1				
BSWS-SBR-PGZN-plus 100	0300084	1				
Jaw quick-change system locking mechanism						
BSWS-UR 100	0302993	1				


① If the operating pressure is higher than 6 bar, suitability for use beyond the application limits must be checked. Only systems that are listed in the table, can be used.

#### Fields of application

Series	Size	Variant	Suitability		
JGP-P	100	-1 (6 bar)			
JGP-P	100	-1-AS/1-IS (6 bar)			
JGP-P	100	-2 (6 bar)			
JGP-P	100	-2-AS/2-IS (6 bar)			
Legend					
	Can be combined without restrictions				
	Use with restrictions (see loading limits)				
0000	cannot be combined				

The load limits for describing the application limits can be found in the catalog chapter of the corresponding accessories.

## Jaw quick-change system BSWS-M

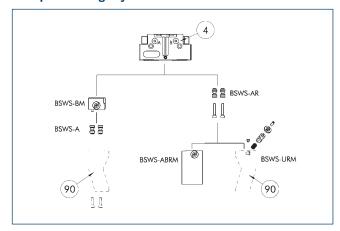

(4) Grippers

**90** Customized gripper fingers

There are various jaw quick-change systems available for the gripper. For detailed information, please refer to the corresponding product.

Description	ID	Scope of delivery			
Jaw quick-change system adapter pin					
BSWS-A 100	0303026	2			
BSWS-AR 100	0300094	2			
Quick-change jaw system base					
BSWS-BM 100	1313902	1			
Jaw quick-change system finger blank					
BSWS-ABRM-PGZN-plus 100	1420853	1			
Jaw quick-change system locking mechanism					
BSWS-URM 100	1398403	1			


① If the operating pressure is higher than 6 bar, suitability for use beyond the application limits must be checked. Only systems that are listed in the table, can be used.

#### Fields of application

Series	Size	Variant	Suitability		
JGP-P	100	-1 (6 bar)			
JGP-P	100	-1-AS/1-IS (6 bar)			
JGP-P	100	-2 (6 bar)			
JGP-P	100	-2-AS/2-IS (6 bar)			
Legend					
	Can be combined without restrictions				
	Use with restrictions (see loading limits)				
0000	cannot be combined				

The load limits for describing the application limits can be found in the catalog chapter of the corresponding accessories.

# ZBA-L-plus 100 intermediate jaws

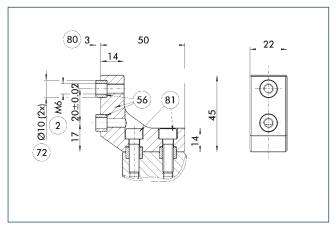


- 2 Finger connection
- (56) Included in the scope of delivery
- (72) Fit for centering sleeves
- 80 Depth of the centering sleeve hole in the counter part
- 81) Not included in the scope of delivery

The optional ZBA-L-plus intermediate jaws allow the screw connection diagram of the top jaws to be rotated by 90°. This makes it easier to design and produce top jaws (particularly for long versions) because no deep through-bores are required.

Description	ID	Material	Finger interface	Scope of delivery
Intermediate jaw				
ZBA-L-plus 100	0311742	Aluminum	PGN-plus 100	1

# UZB 100 universal intermediate jaw

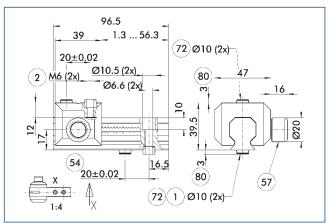

- 1 Gripper connection
- (2) Finger connection
- (54) Optional right or left connection
- 57 Locking
- (72) Fit for centering sleeves
- 80 Depth of the centering sleeve hole in the counter part

The drawing shows the UZB universal intermediate jaw. The fully removable UZB-S slide (can also be ordered separately) allows for a quick jaw change.

Description	ID	Grid dimension	
		[mm]	
Universal intermediate jaw			
UZB 100	0300044	2.5	
Finger blank			
ABR-PGZN-plus 100	0300012		
SBR-PGZN-plus 100	0300022		
Slide for universal intermediate jaw			
UZB-S 100	5518272	2.5	


① If the operating pressure is higher than 6 bar, suitability for use beyond the application limits must be checked.

#### Fields of application

Series	Size	Variant	Suitability		
JGP-P	100	-1 (6 bar)			
JGP-P	100	-1-AS/1-IS (6 bar)			
JGP-P	100	-2 (6 bar)			
JGP-P	100	-2-AS/2-IS (6 bar)	0000		
Legend					
	Can be combined without restrictions				
	Use with restrictions (see loading limits)				
0000	cannot be combined				

The load limits for describing the application limits can be found in the catalog chapter of the corresponding accessories.

## Finger blanks ABR/SBR-PGZN-plus 100

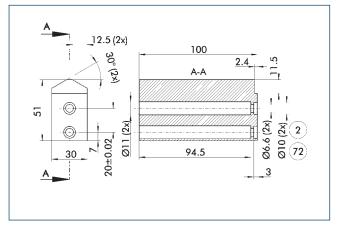

(2) Finger connection


(72) Fit for centering sleeves

The drawing shows the finger blank which can be reworked by the customer.

Description	ID	Material	Scope of delivery
Finger blank			
ABR-PGZN-plus 100	0300012	Aluminum (3.4365)	1
SBR-PGZN-plus 100	0300022	Steel (1.7131)	1

① In the PGL-plus-P gripper series, the use of finger blanks results in a limitation of the closing stroke. Please check this in detail in advance using the CAD data and adjust the reworking of the fingers accordingly.

### Compensation unit AGE-F

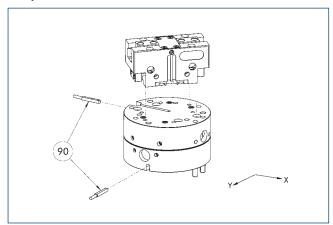


90 Monitoring

The unit has direct connection possibilities for different grippers of the PGN-plus, PGN-plus-P and PZN-plus series. For more detailed information, please refer to the main view.

Description	ID	Compensation XY	Reset force	Often combined
		[mm]	[N]	
Compensation unit				
AGE-F-XY-080-1	0324960	± 5	39	
AGE-F-XY-080-2	0324961	± 5	85	
AGE-F-XY-080-3	0324962	± 5	90	•

① Due to the interfering contour, monitoring of the gripper is not possible.

### Tolerance compensation unit TCU

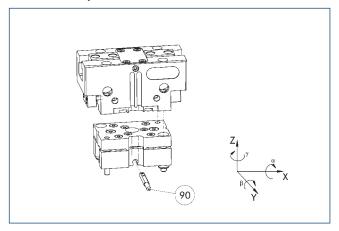


90 Monitoring of locking

Grippers can be directly mounted without an adapter plate. Tolerance compensation unit and gripper have an identical screw connection diagram. Therefore the tolerance compensation units can be assembled later. Please consider the additional assembly height of the tolerance compensation unit. For details please refer to our catalog robot accessories.

Description	ID	Locking	Deflection	Often combined
Compensation unit				
TCU-P-100-2-MV	0324808	yes	±1°/±1,5°/±1,2°	•
TCU-P-100-3-0V	0324811	no	±1°/±1.5°/±1.2°	

### Adapter plate for PGN-plus 100

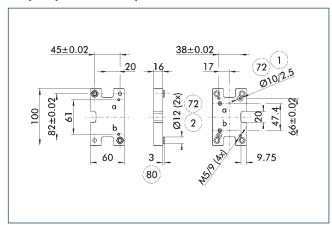


- (1) Robot-side connection
- (72) Fit for centering sleeves
- 2 Tool-side connection
- Depth of the centering sleeve hole in the counter part

The adapter plate has integrated air feed-throughs in order to be able to use the hose-free direct connection of the appropriate gripper.

Description	ID	
Tool side		
A-CWA-125-100-P	0305829	

# Compact change system for grippers

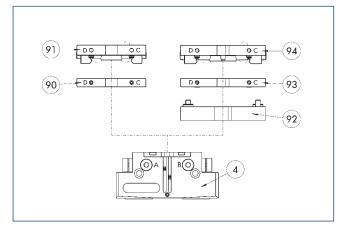


- (4) Grippers
- 90 CWA compact change adapter
- (91) CWK compact change master
- 92 A-CWA adapter plate
- **93** CWA compact change adapter
- **94** CWK compact change master

Grippers can be directly mounted without an adapter plate. For details see our catalog Gripping or Robot Accessories.

Description	ID
Tool side	
A-CWA-125-100-P	0305829
CWA compact change	adapter
CWA-100-P	0305801
CWK compact change	master
CWK-100-P	0305800

## Add-on valves for single grippers

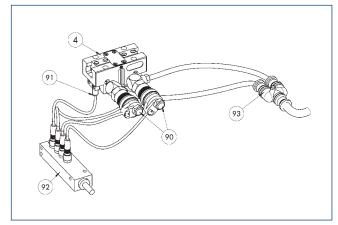

- 4 Grippers
- 90 Micro valves
- (91) Sensor


- 92 Sensor distributor
- 93 Y distributor

The set of attachment valves reduces the compressed air consumption as there is no need to ventilate or bleed the supply lines. This can also reduce cycle time. The hose-free direct assembly of the micro valves reduces the hosing effort for the gripper. To further simplify electrical connection of the valves and sensors, their signals can be bundled via an optional distributor.

Description	ID	Often combined
Add-on valve set		
ABV-MV30-G1/8	0303328	
ABV-MV30-G1/8-V2-M8	0303396	
ABV-MV30-G1/8-V4-M8	0303366	•

A set of add-on valves ABV is required per actuator. The ABV set contains two 3/2 micro valves, an Y-distributor for compressed air supply and optionally a sensor distributor with two or four inputs or outputs. Sensors for monitoring the gripper need to be ordered separately. Pneumatic hoses are not included in the scope of delivery.

## Add-on valves for double grippers

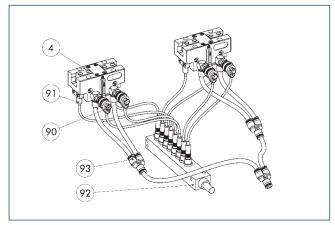


- 4 Grippers
- 90 Micro valves
- (91) Sensor
- 92 Sensor distributor
- 93 Y distributor

The add-on valve set reduces compressed air consumption as there is no need to ventilate or bleed the supply lines. This can also reduce cycle time. The hose-free direct assembly of the micro valves reduces the hosing effort for the gripper. To further simplify electrical connection of  $% \left( 1\right) =\left( 1\right) \left( 1\right$ the valves and sensors, their signals can be bundled via a distributor.

Description	ID
Add-on valve set	
ABV-MV30-G1/8-V8-M8	0303367

① A set of add-on valves ABV is required per double gripping unit. The ABV set contains four 3/2 microvalves, three Y-distributors for compressed air supply and a sensor distributor with eight inputs or outputs. Sensors for monitoring the gripper need to be ordered separately. Pneumatic hoses are not included in the scope of delivery.  $% \label{eq:condition}%$ 


### **Modular Assembly Automation**

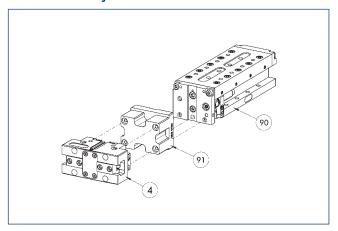

- 4 Grippers
- 91) ASG adapter plate
- 90 Linear module CLM/KLM/LM/ELP/ ELM/ELS/HLM

Grippers and linear modules can be combined with standard adapter plates from the modular assembly system. For more information see our main catalog "Modular Assembly Automation".

# **Inductive proximity switches**

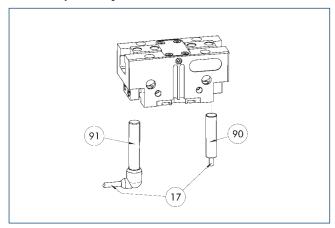


- (17) Cable outlet
- 91) Sensor IN..-SA
- 90 Sensor IN ...

Description	ID	Often combined			
Inductive proximity switches	Inductive proximity switches				
IN 80-S-M12	0301578				
IN 80-S-M8	0301478	•			
INK 80-S	0301550				
Inductive proximity switch with la	teral cable ou	tlet			
IN 80-S-M12-SA	0301587				
IN 80-S-M8-SA	0301483	•			
INK 80-S-SA	0301566				
Connection cables					
KA BG08-L 3P-0300-PNP	0301622	•			
KA BG08-L 3P-0500-PNP	0301623				
KA BG12-L 3P-0500-PNP	30016369				
KA BW08-L 3P-0300-PNP	0301594				
KA BW08-L 3P-0500-PNP	0301502				
KA BW12-L 3P-0300-PNP	0301503				
KA BW12-L 3P-0500-PNP	0301507				
Clip for connector/socket					
CLI-M12	0301464				
CLI-M8	0301463				
Cable extension					
KV BG12-SG12 3P-0030-PNP	0301999				
KV BG12-SG12 3P-0060-PNP	0301998				
KV BW08-SG08 3P-0030-PNP	0301495				
KV BW08-SG08 3P-0100-PNP	0301496				
KV BW08-SG08 3P-0200-PNP	0301497	•			
KV BW12-SG12 3P-0030-PNP	0301595				
KV BW12-SG12 3P-0100-PNP	0301596				
KV BW12-SG12 3P-0200-PNP	0301597				
Sensor distributor					
V2-M12	0301776	•			
V2-M8	0301775	•			
V4-M8	0301746				
V8-M8	0301751				

Two sensors are required per unit for monitoring two positions. On option, extension cables and sensor distributors are available. Additional product variants of the sensor, and further information and technical data can be found in the catalog chapter sensor system.

## Flexible position sensor

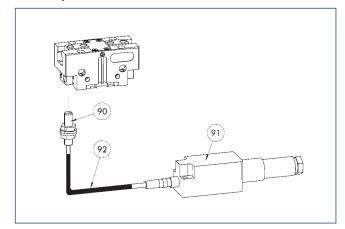


- 90 FPS-S sensor
- 92 Cable extension
- 91) FPS-F5 evaluation electronic

Flexible position monitoring of up to five positions.

Description	ID
Attachment kit for FPS	
AS-FPS-PGN-plus-P 100	1363897
Sensor	
FPS-S M8	0301704
Evaluation electronics	
FPS-F5	0301805
Cable extension	
KV BG08-SG08 3P-0050	0301598
KV BG08-SG08 3P-0100	0301599

When using an FPS system, an FPS sensor (FPS-S) as well as an electronic processor (FPS-F5 / F5 T) are required for each gripper as well as a mounting kit (AS), if listed. Cable extensions (KV) are optionally available – see catalog chapter "Accessories."

# **Electronic magnetic switch MMS**

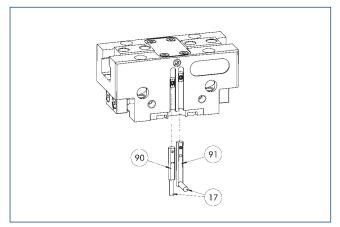


- (17) Cable outlet
- 91) Sensor MMS 22...-SA
- 90 Sensor MMS 22..

End position monitoring for mounting in the C-slot.

Description	ID	Often combined
Electronic magnetic switch		
MMS 22-S-M8-PNP	0301032	•
MMSK 22-S-PNP	0301034	
Electronic magnetic switches with	lateral cable o	outlet
MMS 22-S-M8-PNP-SA	0301042	•
MMSK 22-S-PNP-SA	0301044	
Connection cables		
KA BG08-L 3P-0300-PNP	0301622	•
KA BG08-L 3P-0500-PNP	0301623	
KA BW08-L 3P-0300-PNP	0301594	
KA BW08-L 3P-0500-PNP	0301502	
Clip for connector/socket		
CLI-M8	0301463	
Cable extension		
KV BW08-SG08 3P-0030-PNP	0301495	
KV BW08-SG08 3P-0100-PNP	0301496	
KV BW08-SG08 3P-0200-PNP	0301497	•
Sensor distributor		
V2-M8	0301775	•
V4-M8	0301746	
V8-M8	0301751	

Two sensors are required per unit for monitoring two positions. On option, extension cables and sensor distributors are available.
Additional product variants of the sensor, and further information and technical data can be found in the catalog chapter sensor system.

## Programmable magnetic switch MMS 22-PI1

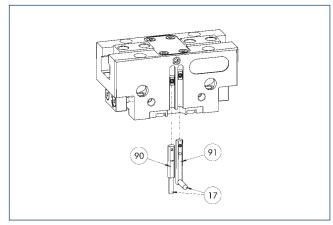


- (17) Cable outlet
- **91** Sensor MMS 22 ..-PI1-...-SA
- 90 Sensor MMS 22 PI1-...

Position monitoring with one programmable position per sensor and integrated electronic system in the sensor. Can be programmed using MT magnetic teaching tool (included in the scope of delivery, ID 0301030) or ST plug teaching tool (optional). End position monitoring for mounting in the C-slot. If the ST plug teaching tools are listed in the table provided, teaching is only possible with the ST teaching tools.

		· ·		
Description	ID	Often combined		
Programmable magnetic switch				
MMS 22-PI1-S-M8-PNP	0301160	•		
MMSK 22-PI1-S-PNP	0301162			
Programmable magnetic switch with lateral cable outlet				
MMS 22-PI1-S-M8-PNP-SA	0301166	•		
MMSK 22-PI1-S-PNP-SA	0301168			
Programmable magnetic switch with stainless steel housing				
MMS 22-PI1-S-M8-PNP-HD	0301110	•		
MMSK 22-PI1-S-PNP-HD	0301112			

Two sensors are required per unit for monitoring two positions. On option, extension cables and sensor distributors are available.
Additional product variants of the sensor, and further information and technical data can be found in the catalog chapter sensor system.

## Programmable magnetic switch MMS 22-PI2

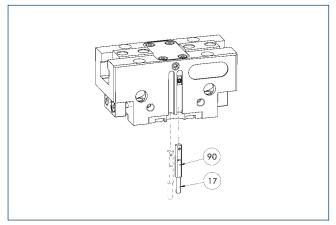

(17) Cable outlet


90 MMS 22...-PI2-... sensor

Positionsabfrage mit zwei programmierbaren Positionen je Sensor und in Sensor integrierter Elektronik. Programmierbar über Magnetteachwerkzeug MT (im Lieferumfang enthalten; Ident.–Nr.: 0301030) oder Steckerteachwerkzeug ST (optional). Endstellungsabfrage in C-Nut montiert. Sind die Steckerteachwerkzeuge ST in der aufgeführten Tabelle gelistet, kann ausschließlich mit den Steckerteachwerkzeugen ST geteacht werden.

		0 0
Description	ID	Often combined
Programmable magnetic switch		
MMS 22-PI2-S-M8-PNP	0301180	•
MMSK 22-PI2-S-PNP	0301182	
Programmable magnetic switch	with lateral c	able outlet
MMS 22-PI2-S-M8-PNP-SA	0301186	•
MMSK 22-PI2-S-PNP-SA	0301188	
Programmable magnetic switch	with stainless	s steel housing
MMS 22-PI2-S-M8-PNP-HD	0301130	•
MMSK 22-PI2-S-PNP-HD	0301132	

① One sensor is required per unit for monitoring two positions. Extension cables and sensor distributors are optionally available. Additional product variants of the sensor, and further information and technical data can be found in the catalog chapter sensor systems.

## MMS-P programmable magnetic switch

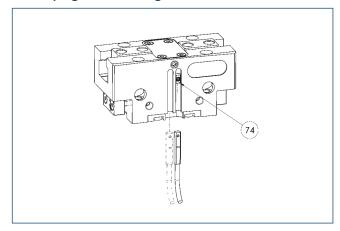


74) Limit stop for sensor

Position monitoring with two programmable positions per sensor. End position monitoring for mounting in the C-slot.

Description	ID	Often combined					
Programmable magnetic switch	Programmable magnetic switch						
MMSK-P 22-S-PNP	0301371						
MMS-P 22-S-M8-PNP	0301370	•					
Connection cables							
KA GLN0804-LK-00500-A	0307767	•					
KA GLN0804-LK-01000-A	0307768						
KA WLN0804-LK-00500-A	0307765						
KA WLN0804-LK-01000-A	0307766						
Clip for connector/socket							
CLI-M8	0301463						
Sensor distributor							
V2-M8-4P-2XM8-3P	0301380						

① One sensor is required per unit for monitoring two positions. Extension cables and sensor distributors are optionally available. Additional product variants of the sensor, and further information and technical data can be found in the catalog chapter sensor systems.

## Analog position sensor MMS-A

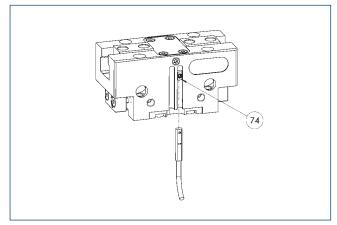


(74) Limit stop for sensor

Non-contact measuring, analog multi-position monitoring for any number of positions, easy to assemble in the C-slot. Can be programmed using MT magnetic teaching tool (included in the scope of delivery, ID 0301030) or ST plug teaching tool (optional). End position monitoring for mounting in the C-slot. If the ST plug teaching tools are listed in the chart provided, teaching is only possible with the ST teaching tools.

Descr	iption	ID
Analo	g position sensor	
MMS 2	22-A-10V-M08	0315825
MMS 2	22-A-10V-M12	0315828

① One sensor is required for each gripper. No additional mounting kit is required – the gripper is equipped for use of the sensor by default. Further information and technical data can be found in the catalog chapter sensor systems.

### Flexible position sensor with MMS-A

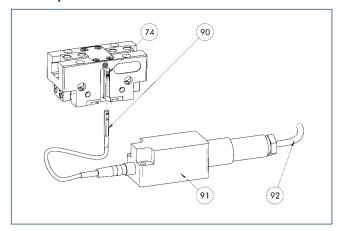


- (74) Limit stop for sensor
- (91) FPS-F5 evaluation electronic
- 90 MMS 22-A-... sensor
- (92) Connection cables

Flexible position monitoring of up to five positions. Sensor can be taught using MT magnetic teaching tool (included in the scope of delivery, ID 0301030) or ST plug teaching tool (optional). If the ST plug teaching tools are listed in the table provided, teaching is only possible with the ST teaching tools.

Description	ID		
Analog position sensor			
MMS 22-A-05V-M08	0315805		
Evaluation electronics			
FPS-F5	0301805		
Sensor Teaching Tool			
MT-MMS 22-PI	0301030		
Connection cables			
KA BG16-L 12P-1000	0301801		

 Beim Einsatz eines FPS-Systems wird pro Greifer ein MMS 22-A-05V sowie eine Auswerteelektronik (FPS-F5) benötigt sowie, falls aufgeführt, einen Anbausatz (AS). Kabelverlängerungen (KV) sind optional im Katalogteil "Zubehör" erhältlich.

# Programmable magnetic switch MMS-I0-Link

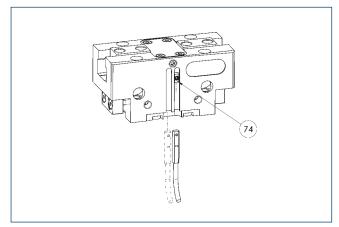


# (74) Limit stop for sensor

Sensor zur Multi-Positionsabfrage durch Erfassung des kompletten Greiferhubs. Der Sensor wird direkt in der C-Nut des Greifers montiert. Die Programmierung des Sensors auf den Greifer erfolgt via IO-Link-Schnittselle, Magnetteachtool MT (im Lieferumfang enthalten; Ident.-Nr.: 0301030) oder Steckerteachwerkzeug ST (optional). Sind die Steckerteachwerkzeuge ST in der aufgeführten Tabelle gelistet, kann nicht mit dem Magnetteachtool MT geteacht werden. Zum Betrieb ist ein IO-Link-Master notwendig.

Description	ID
Programmable mag	netic switch
MMS 22-I0L-M08	0315830
MMS 22-101-M12	0315835

① One sensor is required for each gripper. No additional mounting kit is required – the gripper is equipped for use of the sensor by default. Further information and technical data can be found in the catalog chapter sensor systems.

## APS-Z80 analog position sensor

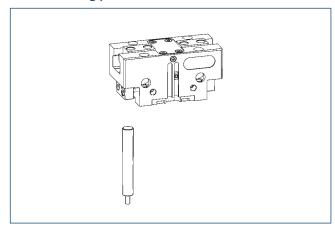


Non-contact measuring, analog multi-position monitoring for any number of positions.

Description	ID	Often combined
Mounting kit for APS-Z80		
AS-APS-Z80-PGN-plus-P 100-1	1366219	
AS-APS-Z80-PGN-plus-P 100-2	1366224	
Analog position sensor		
APS-Z80-K	0302072	
APS-Z80-M8	0302070	•

When using an APS system, one mounting kit (AS-APS-Z80) and one APS-Z80 sensor is required per gripper. The resolution of the sensor can be lower in the peripheral areas of the gripper. You can find further information on the product in the operating manual.

# APS-M1 analog position sensor

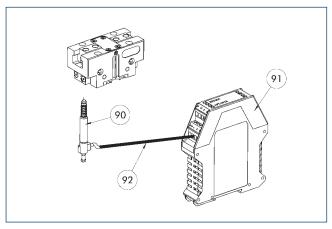

- 90 APS-M1S sensor
- **92** APS-K extension cable
- (91) APS-M1E electronic processor


Analog multi position monitoring for any desired positions

Description	ID
Mounting kit for APS-M1	
AS-APS-M1-PGN-plus-P 100-1	1363733
AS-APS-M1-PGN-plus-P 100-2	1363737
Analog position sensor	
APS-M1S	0302062
Connection cables	
APS-K0200	0302066
APS-K0700	0302068
Evaluation electronics	
APS-M1E	0302064


When using an APS system, for each gripper an attachment kit (AS-APS-M1), an APS-M1S sensor (incl. 3 m cable) as well as an electronics (APS-M1e) are required. An extension cable (APS-K) can be connected between the sensor and the electronics as an option. The max. cable length between the sensor and the electronics is 10 m, between the electronics and their control unit (PLC) it is max. 1 m.




# Gripping force O.D. gripping

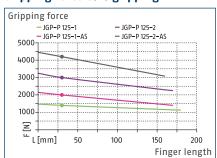

# **Gripping force I.D. gripping**

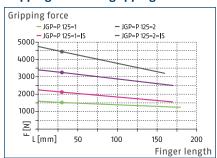

### **Dimensions and maximum loads**

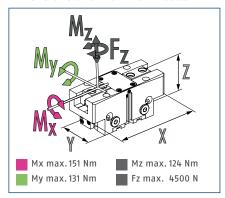


The indicated moments and forces are statical values, apply for each base jaw and may appear simultaneously. Loads may additionally occur to the moment produced by the gripping force itself.

# Technical data

Description		JGP-P 125-1	JGP-P 125-2	JGP-P 125-1-AS	JGP-P 125-2-AS	JGP-P 125-1-IS	JGP-P 125-2-IS
ID		1460275	1460276	1460277	1460278	1460279	1460281
Stroke per jaw	[mm]	13	6	13	6	13	6
Closing/opening force	[N]	1400/1520	3000/3250	2000/-	4200/-	-/2120	-/4450
Min. spring force	[N]			600	1200	600	1200
Weight	[kg]	1.4	1.4	1.9	1.9	1.9	1.9
Recommended workpiece weight	[kg]	7	15	7	15	7	15
Fluid consumption double stroke	[cm³]	110	110	160	160	185	185
Min./nom./max. operating pressure	[bar]	2.5/6/8	2.5/6/8	4/6/6.5	4/6/6.5	4/6/6.5	4/6/6.5
Min./max. air purge pressure	[bar]	0.5/1	0.5/1	0.5/1	0.5/1	0.5/1	0.5/1
Closing/opening time	[s]	0.09/0.09	0.09/0.09	0.08/0.12	0.08/0.12	0.12/0.08	0.12/0.08
Closing/opening time with spring	[s]			0.15	0.15	0.15	0.15
Max. permissible finger length	[mm]	180	170	170	160	170	160
Max. permissible weight per finger	[kg]	2.1	2.1	2.1	2.1	2.1	2.1
IP protection class		40	40	40	40	40	40
Min./max. ambient temperature	[°C]	5/90	5/90	5/90	5/90	5/90	5/90
Repeat accuracy	[mm]	0.01	0.01	0.01	0.01	0.01	0.01
Dimensions X x Y x Z	[mm]	151 x 60 x 63	151 x 60 x 63	151 x 60 x 93			

① It may take a few 100 gripping cycles until the full gripping force (as indicated in the data table) will be available.


### Main view

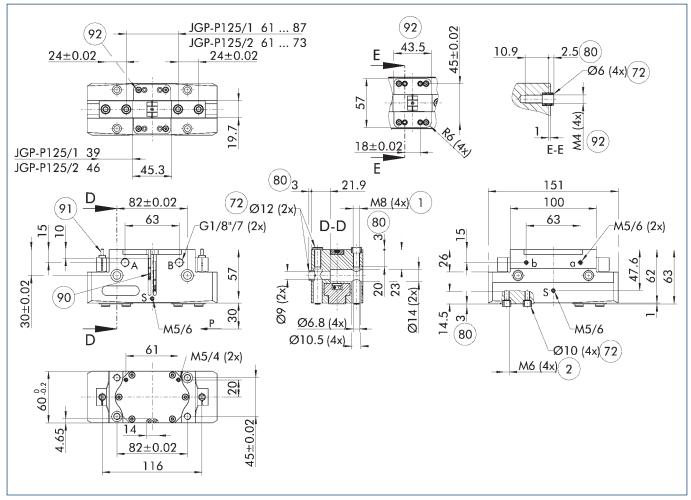


The drawing shows the gripper in the basic version with closed jaws, without dimensional consideration of the options described below.

- As an alternative/in addition to spring-assisted mechanical gripping force maintenance, the SDV-P pressure maintenance valve can be used for I.D. and O.D. gripping (see "Accessories" section of catalog).
- A, a Main / direct connection, gripper opening
- B, b Main / direct connection, gripper closing
- S Air purge connection
- (1) Gripper connection
- (2) Finger connection
- 72) Fit for centering sleeves
- 80 Depth of the centering sleeve hole in the counter part
- 90 Sensor MMS 22..
- (91) Sensor IN ...
- (92) Screw connection with centering for customized mounting (these centering sleeves are not included in the scope of delivery)


## Maximum permitted finger projection

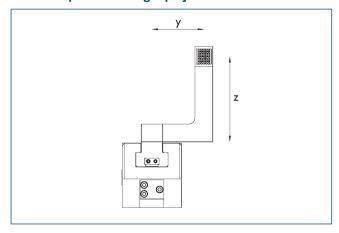

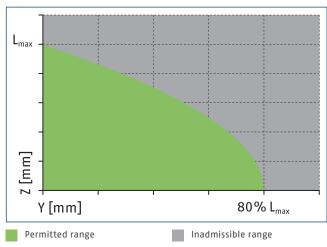


 $L^{\text{max}}$  is equivalent to the maximum permitted finger length, see the technical data table.

## Hose-free direct connection M5

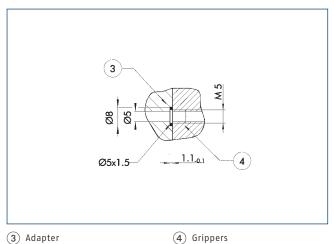

The direct connection is used for supplying compressed air without hoses. Instead, the pressure medium is fed through bore-holes in the mounting plate.


# **Gripping force maintenance version AS/IS**

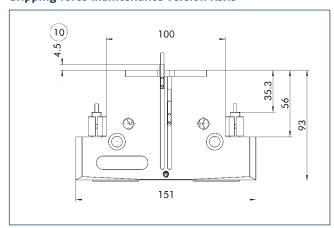

10 Projection applies only for AS version

The mechanical gripping force maintenance device ensures that a minimum clamping force will be applied even if there is a drop in pressure. In the AS/S variant this acts as a closing force, in the IS variant as an opening force. Besides this, gripping force maintenance can be used to increase gripping force or for single actuated gripping.

## **Electronic symbol according to DIN ISO 1219**

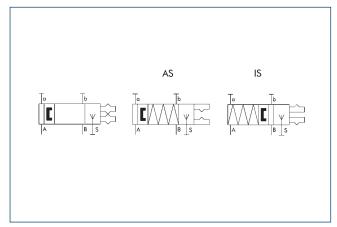


- A, a Main / direct connection, gripper opening
- B, b Main / direct connection, gripper closing
- S Air purge connection

The circuit symbol shows the connection options and the function of the pneumatic gripper. "A" and "B" are the main connections of the gripper for opening and closing. "a" and "b" are optional direct connections for opening and closing without interference–prone hosing. "S" describes the optional air purge connection, which impedes the ingress of dirt into the gripper.

SCHUNK also provides ECAD data for your design. You can choose between direct access via your EPLAN-Electric P8 software or download using the EPLAN Data Portal. Further information can be found on the SCHUNK website.

## SDV-P E-P pressure maintenance valve

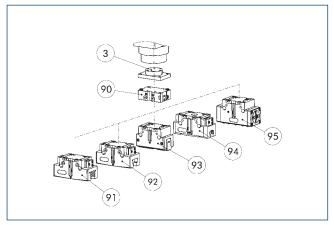


- 3 Adapter
- 90 SDV-P E-P pressure maintenance valve
- 91) 2-finger parallel gripper PGN-plus/PGN-plus-P
- (92) 2-finger parallel gripper JGP-P
- 93) 2-finger angular gripper PWG-plus
- 94) 2-finger parallel gripper PGB
- 95 Sealed DPG-plus gripper

The SDV-P E-P pressure maintenance valves ensure that the pressure in the piston chamber is maintained temporarily during an emergency stop. SDV-P E-P can be directly connected to the listed grippers without the need for additional pneumatic hoses.

Description	ID
Pressure maintena	nce valve
SDV-P 125-E-P	0300127

### SDV-P pressure maintenance valve

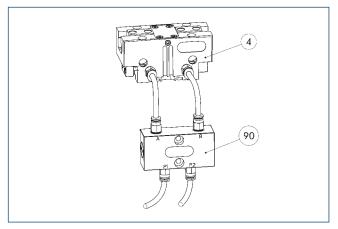

(4) Grippers


90 SDV-P pressure maintenance

The SDV-P pressure maintenance valve ensures in emergency STOP situations that the pressure in the piston chamber of pneumatic gripper, swivel, linear, and quick-change modules is temporarily maintained.

Description	ID	Recommended hose diameter		
		[mm]		
Pressure maintenance valve				
SDV-P 07	0403131	8		
Pressure maintenance valve with air bleed screw				
SDV-P 07-E	0300121	8		

① In order to achieve the specified closing and opening time for each gripper variant, the recommended hose diameter must be used. The direct allocation of the respective variant of the gripper for the respective SDV-P can be found at schunk.com.

## **Protective cover HUE PGN-plus 125**

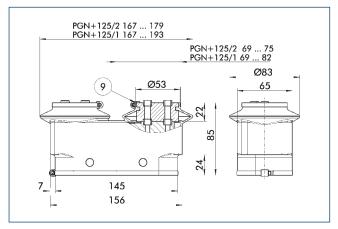


9 For mounting screw connection diagram, see basic version

The HUE protective cover fully protects the gripper against external influences. The cover is suitable for applications of up to IP65 if an additional sealing of the cover bottom is provided. For detailed information, please see the HUE series. The connection diagram shifts by the height of the intermediate jaw.

Description	ID	IP protection class
Protection cover		
HUE PGN-plus 125	0371483	65

① The HUE protective cover is not suitable for use on grippers with gripping force maintenance. An inductive monitoring of the gripper in connection with the HUE protective cover is not possible. SCHUNK recommends the use of magnetic sensors that are approved for the respective gripper variant.

# BSWS jaw quick-change jaw systems

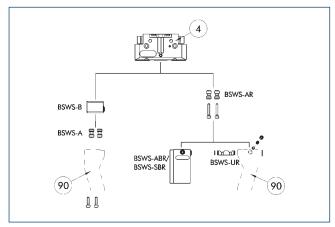

(4) Grippers

90 Customized gripper fingers

There are various jaw quick-change systems available for the gripper. For detailed information, please refer to the corresponding product.

		- · · · · · · · · · · · · · · · · · · ·					
Description	ID	Scope of delivery					
Jaw quick-change system adapt	Jaw quick-change system adapter pin						
BSWS-A 125	0303028	2					
BSWS-AR 125	0300095	2					
Quick-change jaw system base							
BSWS-B 125	0303029	1					
Jaw quick-change system finger blank							
BSWS-ABR-PGZN-plus 125	0300075	1					
BSWS-SBR-PGZN-plus 125	0300085	1					
Jaw quick-change system locking mechanism							
BSWS-UR 125	0302994	1					


① If the operating pressure is higher than 6 bar, suitability for use beyond the application limits must be checked. Only systems that are listed in the table, can be used.

#### Fields of application

Series	Size	Variant	Suitability			
JGP-P	125	-1 (6 bar)				
JGP-P	125	-1-AS/1-IS (6 bar)				
JGP-P	125	-2 (6 bar)				
JGP-P	125	-2-AS/2-IS (6 bar)				
Legend						
	Can be combined without restrictions					
	Use with restrictions (see loading limits)					
0000	cannot be combined					

The load limits for describing the application limits can be found in the catalog chapter of the corresponding accessories.

## Jaw quick-change system BSWS-M

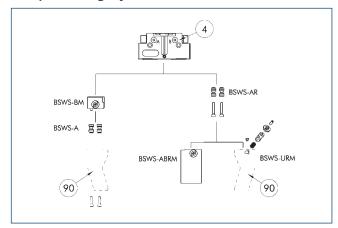

(4) Grippers

90 Customized gripper fingers

There are various jaw quick-change systems available for the gripper. For detailed information, please refer to the corresponding product.

Description	ID	Scope of delivery			
Jaw quick-change system adapter pin					
BSWS-A 125	0303028	2			
BSWS-AR 125	0300095	2			
Quick-change jaw system base					
BSWS-BM 125	1302006	1			
Jaw quick-change system finge	r blank				
BSWS-ABRM-PGZN-plus 125	1420854	1			
Jaw quick-change system locking mechanism					
BSWS-URM 125	1398404	1			


① If the operating pressure is higher than 6 bar, suitability for use beyond the application limits must be checked. Only systems that are listed in the table, can be used.

### Fields of application

Series	Size	Variant	Suitability
JGP-P	125	-1 (6 bar)	
JGP-P	125	-1-AS/1-IS (6 bar)	
JGP-P	125	-2 (6 bar)	
JGP-P	125	-2-AS/2-IS (6 bar)	
Legend			
	Can be combined without restrictions		
	Use with restrictions (see loading limits)		
0000	cannot be combined		

The load limits for describing the application limits can be found in the catalog chapter of the corresponding accessories.

# ZBA-L-plus 125 intermediate jaws

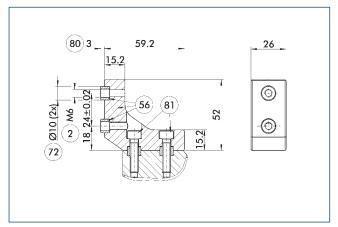


- 2 Finger connection
- 66 Included in the scope of delivery
- 72) Fit for centering sleeves
- 80 Depth of the centering sleeve hole in the counter part
- 81) Not included in the scope of delivery

The optional ZBA-L-plus intermediate jaws allow the screw connection diagram of the top jaws to be rotated by 90°. This makes it easier to design and produce top jaws (particularly for long versions) because no deep through-bores are required.

Description	ID	Material	Finger interface	Scope of delivery
Intermediate jaw				
ZBA-L-plus 125	0311752	Aluminum	PGN-plus 125	1

## UZB 125 universal intermediate jaw

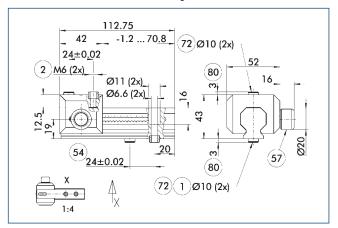

- 1 Gripper connection
- (2) Finger connection
- (54) Optional right or left connection
- 57 Locking
- 72) Fit for centering sleeves
- 80 Depth of the centering sleeve hole in the counter part

The drawing shows the UZB universal intermediate jaw. The fully removable UZB-S slide (can also be ordered separately) allows for a quick jaw change.

Description	ID	Grid dimension
		[mm]
Universal intermediate j	aw	
UZB 125	0300045	3
Finger blank		
ABR-PGZN-plus 125	0300013	
SBR-PGZN-plus 125	0300023	
Slide for universal interr	mediate jaw	
UZB-S 125	5518273	3


① If the operating pressure is higher than 6 bar, suitability for use beyond the application limits must be checked.

#### Fields of application

Series	Size	Variant	Suitability	
JGP-P	125	-1 (6 bar)		
JGP-P	125	-1-AS/1-IS (6 bar)		
JGP-P	125	-2 (6 bar)		
JGP-P	125	-2-AS/2-IS (6 bar)	0000	
Legend				
	Can be combined without restrictions			
	Use with restrictions (see loading limits)			
0000	cannot be combined			

The load limits for describing the application limits can be found in the catalog chapter of the corresponding accessories.

## Finger blanks ABR/SBR-PGZN-plus 125

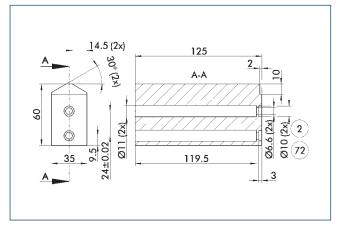

(2) Finger connection


(72) Fit for centering sleeves

The drawing shows the finger blank which can be reworked by the customer.

Description	ID	Material	Scope of delivery
Finger blank			
ABR-PGZN-plus 125	0300013	Aluminum (3.4365)	1
SBR-PGZN-plus 125	0300023	Steel (1.7131)	1

① In the PGL-plus-P gripper series, the use of finger blanks results in a limitation of the closing stroke. Please check this in detail in advance using the CAD data and adjust the reworking of the fingers accordingly.

### Compensation unit AGE-F

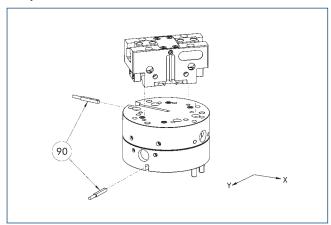


90 Monitoring

The unit has direct connection possibilities for different grippers of the PGN-plus, PGN-plus-P and PZN-plus series. For more detailed information, please refer to the main view.

Description	ID	Compensation XY	Reset force	Often combined
		[mm]	[N]	
Compensation unit				
AGE-F-XY-080-1	0324960	± 5	39	
AGE-F-XY-080-2	0324961	± 5	85	
AGE-F-XY-080-3	0324962	± 5	90	•

① Due to the interfering contour, monitoring of the gripper is not possible.

## Tolerance compensation unit TCU

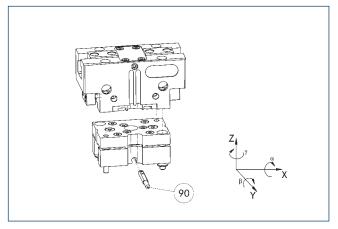


90 Monitoring of locking

Grippers can be directly mounted without an adapter plate. Tolerance compensation unit and gripper have an identical screw connection diagram. Therefore the tolerance compensation units can be assembled later. Please consider the additional assembly height of the tolerance compensation unit. For details please refer to our catalog robot accessories.

Description	ID	Locking	Deflection	Often combined
Compensation unit				
TCU-P-125-3-MV	0324828	yes	±1°/±1,5°/±1,5°	•
TCU-P-125-3-0V	0324829	no	±1°/±1,5°/±1,5°	

## **Compact change system for grippers**

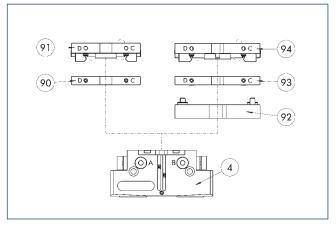

(4) Grippers

(92) A-CWA adapter plate


90 CWA compact change adapter91) CWK compact change master

- 93 CWA compact change adapter
- (94) CWK compact change master

Grippers can be directly mounted without an adapter plate. For details see our catalog Gripping or Robot Accessories.

Description	ID
CWA compact change	adapter
CWA-125-P	0305826
CWK compact change master	
CWK-125-P	0305825

## Add-on valves for single grippers

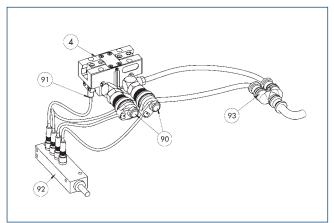

- (4) Grippers
- 90 Micro valves
- 90 MICIO Valve
- (91) Sensor


- **92** Sensor distributor
- 93 Y distributor

The set of attachment valves reduces the compressed air consumption as there is no need to ventilate or bleed the supply lines. This can also reduce cycle time. The hose-free direct assembly of the micro valves reduces the hosing effort for the gripper. To further simplify electrical connection of the valves and sensors, their signals can be bundled via an optional distributor.

Description	ID	Often combined
Add-on valve set		
ABV-MV30-G1/8	0303328	
ABV-MV30-G1/8-V2-M8	0303396	
ABV-MV30-G1/8-V4-M8	0303366	•

A set of add-on valves ABV is required per actuator. The ABV set contains two 3/2 micro valves, an Y-distributor for compressed air supply and optionally a sensor distributor with two or four inputs or outputs. Sensors for monitoring the gripper need to be ordered separately. Pneumatic hoses are not included in the scope of delivery.


### **Modular Assembly Automation**

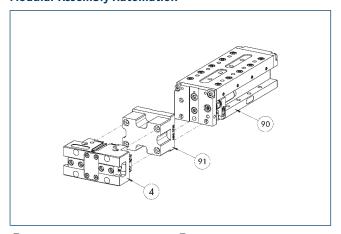

- 4 Grippers
- (91) ASG adapter plate
- © Linear module CLM/KLM/LM/ELP/ ELM/ELS/HLM

Grippers and linear modules can be combined with standard adapter plates from the modular assembly system. For more information see our main catalog "Modular Assembly Automation".

## Add-on valves for double grippers

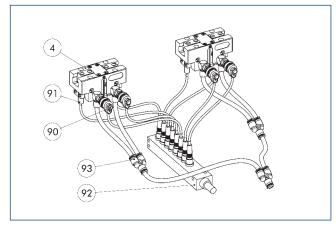


- (4) Grippers
- 90 Micro valves
- 92 Sensor distributor93 Y distributor
- 91) Sensor

The add-on valve set reduces compressed air consumption as there is no need to ventilate or bleed the supply lines. This can also reduce cycle time. The hose-free direct assembly of the micro valves reduces the hosing effort for the gripper. To further simplify electrical connection of the valves and sensors, their signals can be bundled via a distributor.

Description	ID	
Add-on valve set		
ABV-MV30-G1/8-V8-M8	0303367	

A set of add-on valves ABV is required per double gripping unit. The ABV set contains four 3/2 microvalves, three Y-distributors for compressed air supply and a sensor distributor with eight inputs or outputs. Sensors for monitoring the gripper need to be ordered separately. Pneumatic hoses are not included in the scope of delivery.

# **Inductive proximity switches**

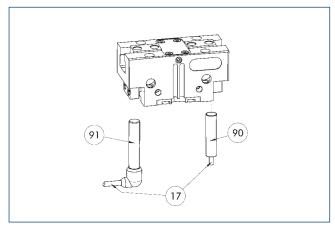


- 17) Cable outlet
- 91) Sensor IN..-SA
- 90 Sensor IN ...

Description	ID	Often combined
Inductive proximity switches	,	
IN 80-S-M12	0301578	
IN 80-S-M8	0301478	•
INK 80-S	0301550	
Inductive proximity switch with la	teral cable ou	tlet
IN 80-S-M12-SA	0301587	
IN 80-S-M8-SA	0301483	•
INK 80-S-SA	0301566	
Connection cables		
KA BG08-L 3P-0300-PNP	0301622	•
KA BG08-L 3P-0500-PNP	0301623	
KA BG12-L 3P-0500-PNP	30016369	
KA BW08-L 3P-0300-PNP	0301594	
KA BW08-L 3P-0500-PNP	0301502	
KA BW12-L 3P-0300-PNP	0301503	
KA BW12-L 3P-0500-PNP	0301507	
Clip for connector/socket		
CLI-M12	0301464	
CLI-M8	0301463	
Cable extension		
KV BG12-SG12 3P-0030-PNP	0301999	
KV BG12-SG12 3P-0060-PNP	0301998	
KV BW08-SG08 3P-0030-PNP	0301495	
KV BW08-SG08 3P-0100-PNP	0301496	
KV BW08-SG08 3P-0200-PNP	0301497	•
KV BW12-SG12 3P-0030-PNP	0301595	
KV BW12-SG12 3P-0100-PNP	0301596	
KV BW12-SG12 3P-0200-PNP	0301597	
Sensor distributor		
V2-M12	0301776	•
V2-M8	0301775	•
V4-M8	0301746	
V8-M8	0301751	

Two sensors are required per unit for monitoring two positions. On option, extension cables and sensor distributors are available. Additional product variants of the sensor, and further information and technical data can be found in the catalog chapter sensor system.

## Flexible position sensor

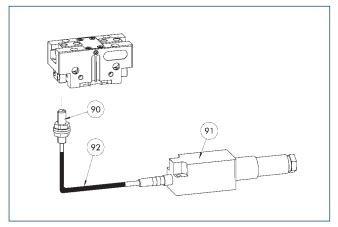


- 90 FPS-S sensor
- 92 Cable extension
- (91) FPS-F5 evaluation electronic

Flexible position monitoring of up to five positions.

Description	ID
Attachment kit for FPS	
AS-FPS-PGN-plus-P 125-1	1363894
AS-FPS-PGN-plus-P 125-2	1366173
Sensor	
FPS-S M8	0301704
Evaluation electronics	
FPS-F5	0301805
Cable extension	
KV BG08-SG08 3P-0050	0301598
KV BG08-SG08 3P-0100	0301599

When using an FPS system, an FPS sensor (FPS-S) as well as an electronic processor (FPS-F5 / F5 T) are required for each gripper as well as a mounting kit (AS), if listed. Cable extensions (KV) are optionally available – see catalog chapter "Accessories."

# **Electronic magnetic switch MMS**

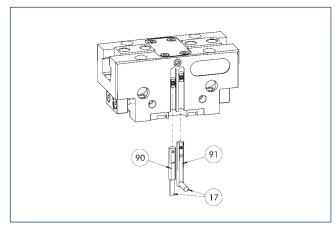


- 17) Cable outlet
- 91) Sensor MMS 22...-SA
- 90 Sensor MMS 22...

End position monitoring for mounting in the C-slot.

Description         ID           Electronic magnetic switch         0301032           MMS 22-S-M8-PNP         0301034           Electronic magnetic switches with lateral cabl         0301042           MMS 22-S-M8-PNP-SA         0301042           MMSK 22-S-PNP-SA         0301044           Connection cables         0301044	le outlet
MMSK 22-S-PNP         0301034           Electronic magnetic switches with lateral cabl           MMS 22-S-M8-PNP-SA         0301042           MMSK 22-S-PNP-SA         0301044	le outlet
Electronic magnetic switches with lateral cabl MMS 22-S-M8-PNP-SA 0301042 MMSK 22-S-PNP-SA 0301044	le outlet
MMS 22-S-M8-PNP-SA 0301042 MMSK 22-S-PNP-SA 0301044	le outlet  •
MMSK 22-S-PNP-SA 0301044	•
Connection cables	
KA BG08-L 3P-0300-PNP 0301622	•
KA BG08-L 3P-0500-PNP 0301623	
KA BW08-L 3P-0300-PNP 0301594	
KA BW08-L 3P-0500-PNP 0301502	
Clip for connector/socket	
CLI-M8 0301463	
Cable extension	
KV BW08-SG08 3P-0030-PNP 0301495	
KV BW08-SG08 3P-0100-PNP 0301496	
KV BW08-SG08 3P-0200-PNP 0301497	•
Sensor distributor	
V2-M8 0301775	•
V4-M8 0301746	
V8-M8 0301751	

Two sensors are required per unit for monitoring two positions. On option, extension cables and sensor distributors are available. Additional product variants of the sensor, and further information and technical data can be found in the catalog chapter sensor system.

## Programmable magnetic switch MMS 22-PI1

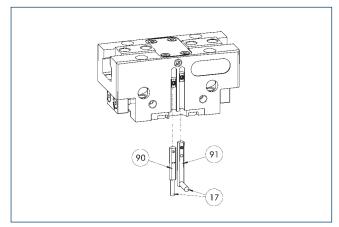

(17) Cable outlet

(91) Sensor MMS 22 ..-PI1-...-SA


90 Sensor MMS 22 PI1-...

Position monitoring with one programmable position per sensor and integrated electronic system in the sensor. Can be programmed using MT magnetic teaching tool (included in the scope of delivery, ID 0301030) or ST plug teaching tool (optional). End position monitoring for mounting in the C-slot. If the ST plug teaching tools are listed in the table provided, teaching is only possible with the ST teaching tools.

Description	ID	Often combined
Programmable magnetic switch		
MMS 22-PI1-S-M8-PNP	0301160	•
MMSK 22-PI1-S-PNP	0301162	
Programmable magnetic switch	with lateral c	able outlet
MMS 22-PI1-S-M8-PNP-SA	0301166	•
MMSK 22-PI1-S-PNP-SA	0301168	
Programmable magnetic switch	with stainles	s steel housing
MMS 22-PI1-S-M8-PNP-HD	0301110	•
MMSK 22-PI1-S-PNP-HD	0301112	

Two sensors are required per unit for monitoring two positions. On option, extension cables and sensor distributors are available. Additional product variants of the sensor, and further information and technical data can be found in the catalog chapter sensor system.

### Programmable magnetic switch MMS 22-PI2

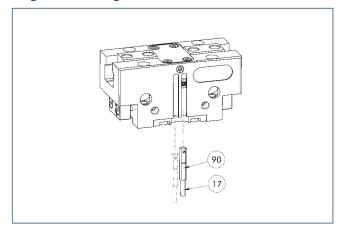

(17) Cable outlet


90 MMS 22...-PI2-... sensor

Positionsabfrage mit zwei programmierbaren Positionen je Sensor und in Sensor integrierter Elektronik. Programmierbar über Magnetteachwerkzeug MT (im Lieferumfang enthalten; Ident.-Nr.: 0301030) oder Steckerteachwerkzeug ST (optional). Endstellungsabfrage in C-Nut montiert. Sind die Steckerteachwerkzeuge ST in der aufgeführten Tabelle gelistet, kann ausschließlich mit den Steckerteachwerkzeugen ST geteacht werden.

Description	ID	Often combined			
Programmable magnetic switch					
MMS 22-PI2-S-M8-PNP	0301180	•			
MMSK 22-PI2-S-PNP	0301182				
Programmable magnetic switch with lateral cable outlet					
MMS 22-PI2-S-M8-PNP-SA	0301186	•			
MMSK 22-PI2-S-PNP-SA	0301188				
Programmable magnetic switch	with stainles	s steel housing			
MMS 22-PI2-S-M8-PNP-HD	0301130	•			
MMSK 22-PI2-S-PNP-HD	0301132				

① One sensor is required per unit for monitoring two positions. Extension cables and sensor distributors are optionally available. Additional product variants of the sensor, and further information and technical data can be found in the catalog chapter sensor systems.

### MMS-P programmable magnetic switch

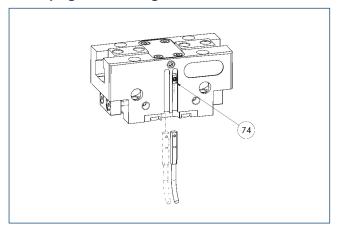

## (74) Limit stop for sensor

Position monitoring with two programmable positions per sensor. End position monitoring for mounting in the C-slot.


	_				
Description	ID	Often combined			
Programmable magnetic switch					
MMSK-P 22-S-PNP	0301371				
MMS-P 22-S-M8-PNP	0301370	•			
Connection cables					
KA GLN0804-LK-00500-A	0307767	•			
KA GLN0804-LK-01000-A	0307768				
KA WLN0804-LK-00500-A	0307765				
KA WLN0804-LK-01000-A	0307766				
Clip for connector/socket					
CLI-M8	0301463				
Sensor distributor					
V2-M8-4P-2XM8-3P	0301380				

① One sensor is required per unit for monitoring two positions.

Extension cables and sensor distributors are optionally available.

Additional product variants of the sensor, and further information and technical data can be found in the catalog chapter sensor systems.

### Analog position sensor MMS-A

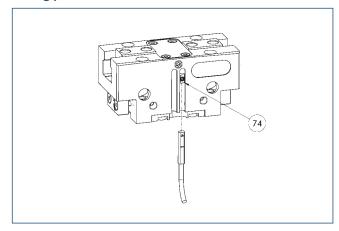


74) Limit stop for sensor

Non-contact measuring, analog multi-position monitoring for any number of positions, easy to assemble in the C-slot. Can be programmed using MT magnetic teaching tool (included in the scope of delivery, ID 0301030) or ST plug teaching tool (optional). End position monitoring for mounting in the C-slot. If the ST plug teaching tools are listed in the chart provided, teaching is only possible with the ST teaching tools.

Description	ID
Analog position sensor	
MMS 22-A-10V-M08	0315825
MMS 22-A-10V-M12	0315828

① One sensor is required for each gripper. No additional mounting kit is required – the gripper is equipped for use of the sensor by default. Further information and technical data can be found in the catalog chapter sensor systems.

## Flexible position sensor with MMS-A

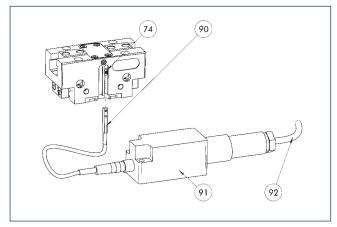


- (74) Limit stop for sensor
- (91) FPS-F5 evaluation electronic
- 90 MMS 22-A-... sensor
- (92) Connection cables

Flexible position monitoring of up to five positions. Sensor can be taught using MT magnetic teaching tool (included in the scope of delivery, ID 0301030) or ST plug teaching tool (optional). If the ST plug teaching tools are listed in the table provided, teaching is only possible with the ST teaching tools.

Description	ID
Analog position sensor	
MMS 22-A-05V-M08	0315805
Evaluation electronics	
FPS-F5	0301805
Sensor Teaching Tool	
MT-MMS 22-PI	0301030
Connection cables	
KA BG16-L 12P-1000	0301801

Beim Einsatz eines FPS-Systems wird pro Greifer ein MMS 22-A-05V sowie eine Auswerteelektronik (FPS-F5) benötigt sowie, falls aufgeführt, einen Anbausatz (AS). Kabelverlängerungen (KV) sind optional im Katalogteil "Zubehör" erhältlich.

### Programmable magnetic switch MMS-I0-Link

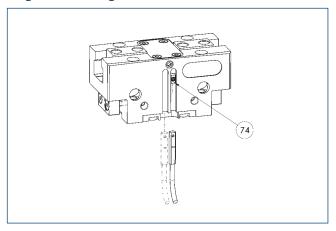


74) Limit stop for sensor

Sensor zur Multi-Positionsabfrage durch Erfassung des kompletten Greiferhubs. Der Sensor wird direkt in der C-Nut des Greifers montiert. Die Programmierung des Sensors auf den Greifer erfolgt via IO-Link-Schnittstelle, Magnetteachtool MT (im Lieferumfang enthalten; Ident.-Nr.: 0301030) oder Steckerteachwerkzeug ST (optional). Sind die Steckerteachwerkzeuge ST in der aufgeführten Tabelle gelistet, kann nicht mit dem Magnetteachtool MT geteacht werden. Zum Betrieb ist ein IO-Link-Master notwendig.

Description	ID
Programmable mag	netic switch
MMS 22-I0L-M08	0315830
MMS 22-I0L-M12	0315835

① One sensor is required for each gripper. No additional mounting kit is required – the gripper is equipped for use of the sensor by default. Further information and technical data can be found in the catalog chapter sensor systems.

# APS-Z80 analog position sensor

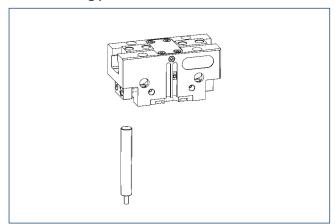


Non-contact measuring, analog multi-position monitoring for any number of positions.

Description	ID	Often combined
Mounting kit for APS-Z80		
AS-APS-Z80-PGN-plus-P 125-1	1366226	
AS-APS-Z80-PGN-plus-P 125-2	1366228	
Analog position sensor		
APS-Z80-K	0302072	
APS-Z80-M8	0302070	•

When using an APS system, one mounting kit (AS-APS-Z80) and one APS-Z80 sensor is required per gripper. The resolution of the sensor can be lower in the peripheral areas of the gripper. You can find further information on the product in the operating manual.

## APS-M1 analog position sensor

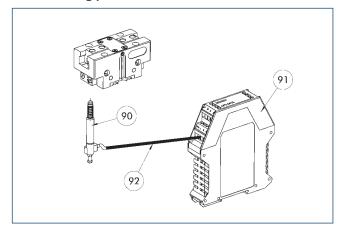

- 90 APS-M1S sensor
- **92** APS-K extension cable
- 91) APS-M1E electronic processor


Analog multi position monitoring for any desired positions

Description	ID
Mounting kit for APS-M1	
AS-APS-M1-PGN-plus-P 125-1	1363743
AS-APS-M1-PGN-plus-P 125-2	1363745
Analog position sensor	
APS-M1S	0302062
Connection cables	
APS-K0200	0302066
APS-K0700	0302068
Evaluation electronics	
APS-M1E	0302064


When using an APS system, for each gripper an attachment kit (AS-APS-M1), an APS-M1S sensor (incl. 3 m cable) as well as an electronics (APS-M1e) are required. An extension cable (APS-K) can be connected between the sensor and the electronics as an option. The max. cable length between the sensor and the electronics is 10 m, between the electronics and their control unit (PLC) it is max. 1 m.




# Gripping force O.D. gripping

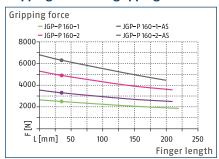

# **Gripping force I.D. gripping**

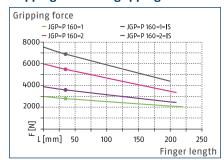

### **Dimensions and maximum loads**

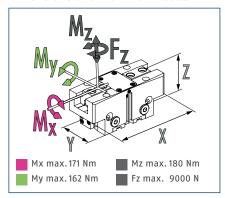


The indicated moments and forces are statical values, apply for each base jaw and may appear simultaneously. Loads may additionally occur to the moment produced by the gripping force itself.

# Technical data

Description		JGP-P 160-1	JGP-P 160-2	JGP-P 160-1-AS	JGP-P 160-2-AS	JGP-P 160-1-IS	JGP-P 160-2-IS
ID		1460282	1460283	1460284	1460287	1460288	1460289
Stroke per jaw	[mm]	16	8	16	8	16	8
Closing/opening force	[N]	2500/2800	4900/5500	3300/-	6300/-	-/3600	-/6900
Min. spring force	[N]			800	1400	800	1400
Weight	[kg]	3	3	3.8	3.8	3.8	3.8
Recommended workpiece weight	[kg]	12.5	24.5	12.5	24.5	12.5	24.5
Fluid consumption double stroke	[cm³]	200	200	355	355	380	380
Min./nom./max. operating pressure	[bar]	2.5/6/8	2.5/6/8	4/6/6.5	4/6/6.5	4/6/6.5	4/6/6.5
Min./max. air purge pressure	[bar]	0.5/1	0.5/1	0.5/1	0.5/1	0.5/1	0.5/1
Closing/opening time	[s]	0.1/0.1	0.1/0.1	0.1/0.2	0.1/0.2	0.2/0.1	0.2/0.1
Closing/opening time with spring	[s]			0.20	0.20	0.20	0.20
Max. permissible finger length	[mm]	220	210	210	200	210	200
Max. permissible weight per finger	[kg]	3.5	3.5	3.5	3.5	3.5	3.5
IP protection class		40	40	40	40	40	40
Min./max. ambient temperature	[°C]	5/90	5/90	5/90	5/90	5/90	5/90
Repeat accuracy	[mm]	0.01	0.01	0.01	0.01	0.01	0.01
Dimensions X x Y x Z	[mm]	192 x 72 x 77	192 x 72 x 77	192 x 72 x 117			

① It may take a few 100 gripping cycles until the full gripping force (as indicated in the data table) will be available.


### Main view

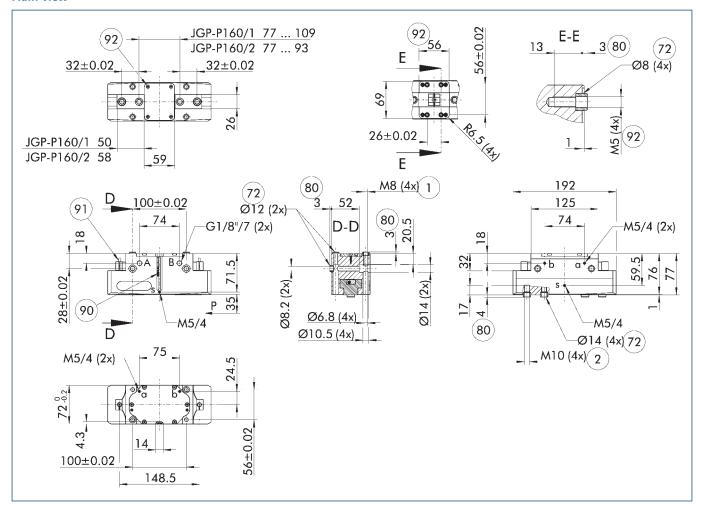


The drawing shows the gripper in the basic version with closed jaws, without dimensional consideration of the options described below.

- As an alternative/in addition to spring-assisted mechanical gripping force maintenance, the SDV-P pressure maintenance valve can be used for I.D. and O.D. gripping (see "Accessories" section of catalog).
- A, a Main / direct connection, gripper opening
- B, b Main / direct connection, gripper closing
- S Air purge connection
- (1) Gripper connection
- (2) Finger connection
- (72) Fit for centering sleeves
- 80 Depth of the centering sleeve hole in the counter part
- 90 Sensor MMS 22..
- (91) Sensor IN ...
- (92) Screw connection with centering for customized mounting (these centering sleeves are not included in the scope of delivery)


# Maximum permitted finger projection

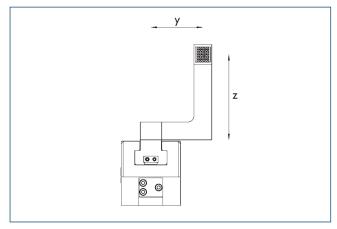

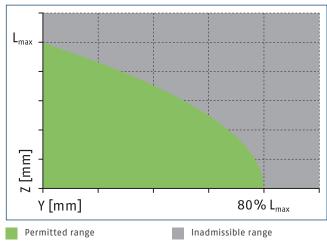


 $L^{\text{max}}$  is equivalent to the maximum permitted finger length, see the technical data table.

## Hose-free direct connection M5

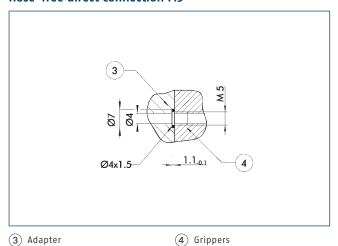


The direct connection is used for supplying compressed air without hoses. Instead, the pressure medium is fed through bore-holes in the mounting plate.

# **Gripping force maintenance version AS/IS**

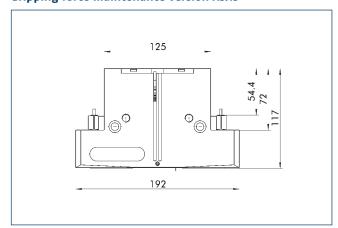

The mechanical gripping force maintenance device ensures that a minimum clamping force will be applied even if there is a drop in pressure. In the AS/S variant this acts as a closing force, in the IS variant as an opening force. Besides this, gripping force maintenance can be used to increase gripping force or for single actuated gripping.

# **Electronic symbol according to DIN ISO 1219**

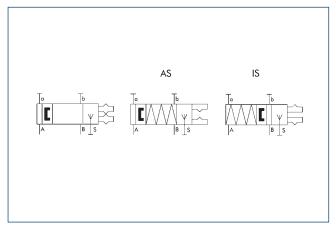


- A, a Main / direct connection, gripper opening
- B, b Main / direct connection, gripper closing
- S Air purge connection

The circuit symbol shows the connection options and the function of the pneumatic gripper. "A" and "B" are the main connections of the gripper for opening and closing. "a" and "b" are optional direct connections for opening and closing without interference–prone hosing. "S" describes the optional air purge connection, which impedes the ingress of dirt into the gripper.

SCHUNK also provides ECAD data for your design. You can choose between direct access via your EPLAN-Electric P8 software or download using the EPLAN Data Portal. Further information can be found on the SCHUNK website.

### SDV-P pressure maintenance valve

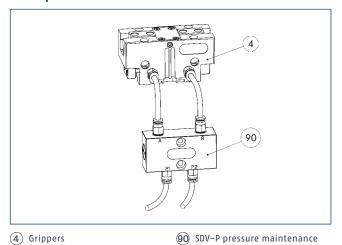


The SDV-P pressure maintenance valve ensures in emergency STOP situations that the pressure in the piston chamber of pneumatic gripper, swivel, linear, and quick-change modules is temporarily maintained.

Description	ID	Recommended hose diameter
		[mm]
Pressure maintenance	valve	
SDV-P 07	0403131	8
Pressure maintenance	valve with a	ir bleed screw
SDV-P 07-E	0300121	8
SDV-P 10-E	0300109	10

① In order to achieve the specified closing and opening time for each gripper variant, the recommended hose diameter must be used. The direct allocation of the respective variant of the gripper for the respective SDV-P can be found at schunk.com.

## **Protective cover HUE PGN-plus 160**

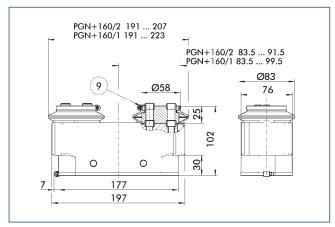


(9) For mounting screw connection diagram, see basic version

The HUE protective cover fully protects the gripper against external influences. The cover is suitable for applications of up to IP65 if an additional sealing of the cover bottom is provided. For detailed information, please see the HUE series. The connection diagram shifts by the height of the intermediate jaw.

Description	ID	IP protection class
Protection cover		
HIIF DGN-nlus 160	0371484	65

The HUE protective cover is not suitable for use on grippers with gripping force maintenance. An inductive monitoring of the gripper in connection with the HUE protective cover is not possible. SCHUNK recommends the use of magnetic sensors that are approved for the respective gripper variant.

# BSWS jaw quick-change jaw systems

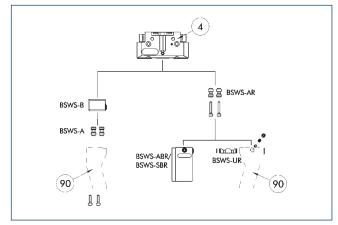

(4) Grippers

(90) Customized gripper fingers

There are various jaw quick-change systems available for the gripper. For detailed information, please refer to the corresponding product.

Description	ID	Scope of delivery
Jaw quick-change system adapt	ter pin	
BSWS-A 160	0303030	2
BSWS-AR 160	0300096	2
Quick-change jaw system base		
BSWS-B 160	0303031	1
Jaw quick-change system finge	r blank	
BSWS-ABR-PGZN-plus 160	0300076	1
BSWS-SBR-PGZN-plus 160	0300086	1
Jaw quick-change system lockir	ng mechanism	ı
BSWS-UR 160	0302995	1


① If the operating pressure is higher than 6 bar, suitability for use beyond the application limits must be checked. Only systems that are listed in the table, can be used.

#### Fields of application

Series	Size	Variant	Suitability
JGP-P	160	-1 (6 bar)	
JGP-P	160	-1-AS/1-IS (6 bar)	
JGP-P	160	-2 (6 bar)	
JGP-P	160	-2-AS/2-IS (6 bar)	
Legend			
	Can be combined v	vithout restrictions	
	Use with restrictio	ns (see loading limit	s)
0000	cannot be combine	ed	

The load limits for describing the application limits can be found in the catalog chapter of the corresponding accessories.

# Jaw quick-change system BSWS-M

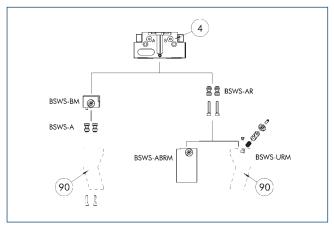

(4) Grippers

90 Customized gripper fingers

There are various jaw quick-change systems available for the gripper. For detailed information, please refer to the corresponding product.

, p		
Description	ID	Scope of delivery
Jaw quick-change system adapte	r pin	
BSWS-A 160	0303030	2
BSWS-AR 160	0300096	2
Quick-change jaw system base		
BSWS-BM 160	1418962	1
Jaw quick-change system finger	blank	
BSWS-ABRM-PGZN-plus 160	1420855	1
Jaw quick-change system locking	mechanism	
BSWS-URM 160	1420541	1


① If the operating pressure is higher than 6 bar, suitability for use beyond the application limits must be checked. Only systems that are listed in the table, can be used.

### Fields of application

Series	Size	Variant	Suitability
JGP-P	160	-1 (6 bar)	
JGP-P	160	-1-AS/1-IS (6 bar)	
JGP-P	160	-2 (6 bar)	
JGP-P	160	-2-AS/2-IS (6 bar)	
Legend			
	Can be combined w	ithout restrictions	
	Use with restriction	ns (see loading limit	s)
0000	cannot be combine	d	

The load limits for describing the application limits can be found in the catalog chapter of the corresponding accessories.

## ZBA-L-plus 160 intermediate jaws

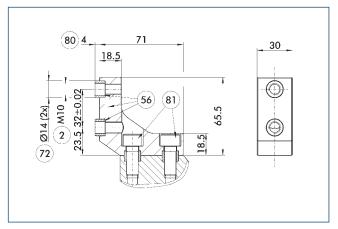


- (2) Finger connection
- (56) Included in the scope of delivery
- 72) Fit for centering sleeves
- 80 Depth of the centering sleeve hole in the counter part
- 81) Not included in the scope of delivery

The optional ZBA-L-plus intermediate jaws allow the screw connection diagram of the top jaws to be rotated by 90°. This makes it easier to design and produce top jaws (particularly for long versions) because no deep through-bores are required.

Description	ID	Material	Finger interface	Scope of delivery
Intermediate jaw				
ZBA-L-plus 160	0311762	Aluminum	PGN-plus 160	1

## UZB 160 universal intermediate jaw

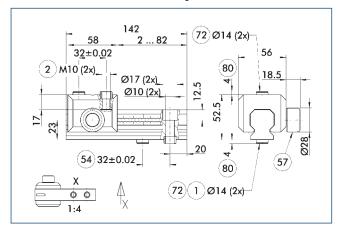

- 1 Gripper connection
- 2 Finger connection
- (54) Optional right or left connection
- (57) Locking
- 72) Fit for centering sleeves
- 80 Depth of the centering sleeve hole in the counter part

The drawing shows the UZB universal intermediate jaw. The fully removable UZB-S slide (can also be ordered separately) allows for a quick jaw change.

Description	ID	Grid dimension
		[mm]
Universal intermediate j	aw	
UZB 160	0300046	4
Finger blank		
ABR-PGZN-plus 160	0300014	
SBR-PGZN-plus 160	0300024	
Slide for universal intern	nediate jaw	
UZB-S 160	5518274	4
SBR-PGZN-plus 160 Slide for universal intern	0300024 nediate jaw	4


① If the operating pressure is higher than 6 bar, suitability for use beyond the application limits must be checked.

### Fields of application

Series	Size	Variant	Suitability
JGP-P	160	-1 (6 bar)	
JGP-P	160	-1-AS/1-IS (6 bar)	
JGP-P	160	-2 (6 bar)	
JGP-P	160	-2-AS/2-IS (6 bar)	0000
Legend			
	Can be combined w	rithout restrictions	
	Use with restriction	ns (see loading limit	s)
0000	cannot be combine	d	

The load limits for describing the application limits can be found in the catalog chapter of the corresponding accessories.

### Finger blanks ABR/SBR-PGZN-plus 160

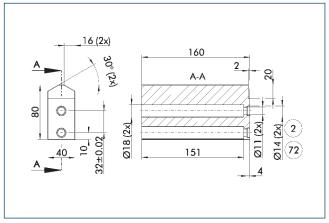


- (2) Finger connection
- (72) Fit for centering sleeves

The drawing shows the finger blank which can be reworked by the customer.

Description	ID	Material	Scope of delivery
Finger blank			
ABR-PGZN-plus 160	0300014	Aluminum (3.4365)	1
SBR-PGZN-plus 160	0300024	Steel (1.7131)	1

① In the PGL-plus-P gripper series, the use of finger blanks results in a limitation of the closing stroke. Please check this in detail in advance using the CAD data and adjust the reworking of the fingers accordingly.

## Tolerance compensation unit TCU

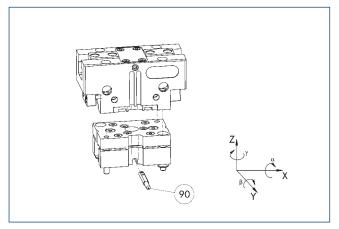


90 Monitoring of locking

Grippers can be directly mounted without an adapter plate. Tolerance compensation unit and gripper have an identical screw connection diagram. Therefore the tolerance compensation units can be assembled later. Please consider the additional assembly height of the tolerance compensation unit. For details please refer to our catalog robot accessories.

Description	ID	Locking	Deflection	Often combined
Compensation unit				
TCU-P-160-3-MV	0324846	yes	±1°/±2°/±1,5°	•
TCU-P-160-3-0V	0324847	no	±1°/±2°/±1.5°	

## Add-on valves for single grippers

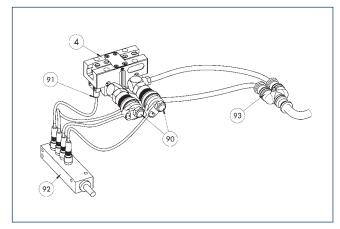

- 4 Grippers
- (92) Sensor distributor
- 90 Micro valves
- 93 Y distributor


(91) Sensor

The set of attachment valves reduces the compressed air consumption as there is no need to ventilate or bleed the supply lines. This can also reduce cycle time. The hose-free direct assembly of the micro valves reduces the hosing effort for the gripper. To further simplify electrical connection of the valves and sensors, their signals can be bundled via an optional distributor.

Description	ID	Often combined
Add-on valve set		
ABV-MV30-G1/8	0303328	
ABV-MV30-G1/8-V2-M8	0303396	
ABV-MV30-G1/8-V4-M8	0303366	•

(i) A set of add-on valves ABV is required per actuator. The ABV set contains two 3/2 micro valves, an Y-distributor for compressed air supply and optionally a sensor distributor with two or four inputs or outputs. Sensors for monitoring the gripper need to be ordered separately. Pneumatic hoses are not included in the scope of delivery.

### Add-on valves for double grippers

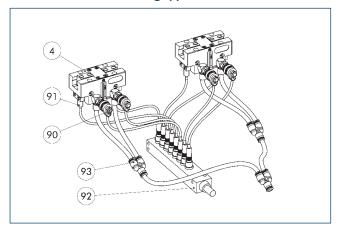

- 4 Grippers
- 90 Micro valves
- (91) Sensor


- 92 Sensor distributor
- 93 Y distributor

The add-on valve set reduces compressed air consumption as there is no need to ventilate or bleed the supply lines. This can also reduce cycle time. The hose-free direct assembly of the micro valves reduces the hosing effort for the gripper. To further simplify electrical connection of the valves and sensors, their signals can be bundled via a distributor.

Description	ID
Add-on valve set	
ABV-MV30-G1/8-V8-M8	0303367

A set of add-on valves ABV is required per double gripping unit. The ABV set contains four 3/2 microvalves, three Y-distributors for compressed air supply and a sensor distributor with eight inputs or outputs. Sensors for monitoring the gripper need to be ordered separately. Pneumatic hoses are not included in the scope of delivery.


## **Modular Assembly Automation**

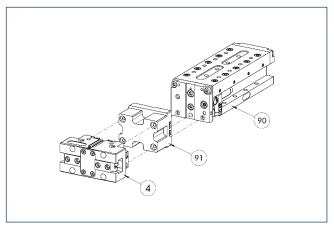

- 4 Grippers
- 91) ASG adapter plate
- 90 Linear module CLM/KLM/LM/ELP/ ELM/ELS/HLM

Grippers and linear modules can be combined with standard adapter plates from the modular assembly system. For more information see our main catalog "Modular Assembly Automation".

# **Inductive proximity switches**

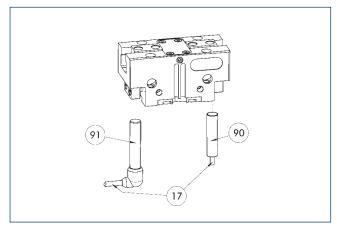


- 17 Cable outlet
- 91) Sensor IN..-SA
- 90 Sensor IN ...

Description	ID	Often combined				
Inductive proximity switches						
IN 80-S-M12	0301578					
IN 80-S-M8	0301478	•				
INK 80-S	0301550					
Inductive proximity switch with lateral cable outlet						
IN 80-S-M12-SA	0301587					
IN 80-S-M8-SA	0301483	•				
INK 80-S-SA	0301566					
Connection cables	Connection cables					
KA BG08-L 3P-0300-PNP	0301622	•				
KA BG08-L 3P-0500-PNP	0301623					
KA BG12-L 3P-0500-PNP	30016369					
KA BW08-L 3P-0300-PNP	0301594					
KA BW08-L 3P-0500-PNP	0301502					
KA BW12-L 3P-0300-PNP	0301503					
KA BW12-L 3P-0500-PNP	0301507					
Clip for connector/socket						
CLI-M12	0301464					
CLI-M8	0301463					
Cable extension						
KV BG12-SG12 3P-0030-PNP	0301999					
KV BG12-SG12 3P-0060-PNP	0301998					
KV BW08-SG08 3P-0030-PNP	0301495					
KV BW08-SG08 3P-0100-PNP	0301496					
KV BW08-SG08 3P-0200-PNP	0301497	•				
KV BW12-SG12 3P-0030-PNP	0301595					
KV BW12-SG12 3P-0100-PNP	0301596					
KV BW12-SG12 3P-0200-PNP	0301597					
Sensor distributor						
V2-M12	0301776	•				
V2-M8	0301775	•				
V4-M8	0301746					
V8-M8	0301751					

Two sensors are required per unit for monitoring two positions. On option, extension cables and sensor distributors are available. Additional product variants of the sensor, and further information and technical data can be found in the catalog chapter sensor system.

## Flexible position sensor

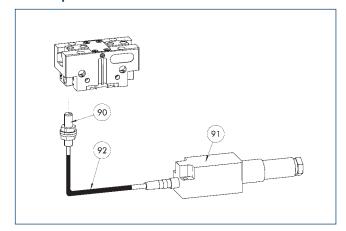


- 90 FPS-S sensor
- 92 Cable extension
- 91) FPS-F5 evaluation electronic

Flexible position monitoring of up to five positions.

Description	ID
Attachment kit for FPS	
AS-FPS-PGN-plus-P 160-1	1388823
AS-FPS-PGN-plus-P 160-2	1388826
Sensor	
FPS-S M8	0301704
Evaluation electronics	
FPS-F5	0301805
Cable extension	
KV BG08-SG08 3P-0050	0301598
KV BG08-SG08 3P-0100	0301599

When using an FPS system, an FPS sensor (FPS-S) as well as an electronic processor (FPS-F5 / F5 T) are required for each gripper as well as a mounting kit (AS), if listed. Cable extensions (KV) are optionally available – see catalog chapter "Accessories."

# **Electronic magnetic switch MMS**

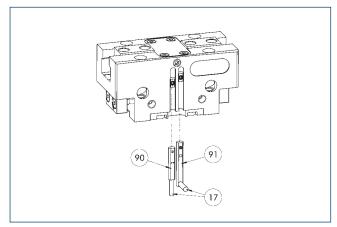


- (17) Cable outlet
- 91) Sensor MMS 22...-SA
- 90 Sensor MMS 22..

End position monitoring for mounting in the C-slot.

Description	ID	Often combined		
Electronic magnetic switch				
MMS 22-S-M8-PNP	0301032	•		
MMSK 22-S-PNP	0301034			
Electronic magnetic switches with lateral cable outlet				
MMS 22-S-M8-PNP-SA	0301042	•		
MMSK 22-S-PNP-SA	0301044			
Connection cables				
KA BG08-L 3P-0300-PNP	0301622	•		
KA BG08-L 3P-0500-PNP	0301623			
KA BW08-L 3P-0300-PNP	0301594			
KA BW08-L 3P-0500-PNP	0301502			
Clip for connector/socket				
CLI-M8	0301463			
Cable extension				
KV BW08-SG08 3P-0030-PNP	0301495			
KV BW08-SG08 3P-0100-PNP	0301496			
KV BW08-SG08 3P-0200-PNP	0301497	•		
Sensor distributor				
V2-M8	0301775	•		
V4-M8	0301746			
V8-M8	0301751			

Two sensors are required per unit for monitoring two positions. On option, extension cables and sensor distributors are available.
Additional product variants of the sensor, and further information and technical data can be found in the catalog chapter sensor system.

## Programmable magnetic switch MMS 22-PI1

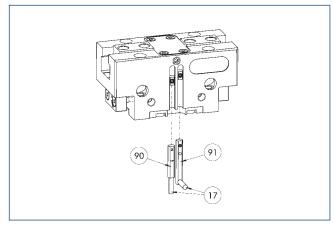


- (17) Cable outlet
- **91**) Sensor MMS 22 ..-PI1-...-SA
- 90 Sensor MMS 22 PI1-...

Position monitoring with one programmable position per sensor and integrated electronic system in the sensor. Can be programmed using MT magnetic teaching tool (included in the scope of delivery, ID 0301030) or ST plug teaching tool (optional). End position monitoring for mounting in the C-slot. If the ST plug teaching tools are listed in the table provided, teaching is only possible with the ST teaching tools.

		· ·		
Description	ID	Often combined		
Programmable magnetic switch				
MMS 22-PI1-S-M8-PNP	0301160	•		
MMSK 22-PI1-S-PNP	0301162			
Programmable magnetic switch with lateral cable outlet				
MMS 22-PI1-S-M8-PNP-SA	0301166	•		
MMSK 22-PI1-S-PNP-SA	0301168			
Programmable magnetic switch with stainless steel housing				
MMS 22-PI1-S-M8-PNP-HD	0301110	•		
MMSK 22-PI1-S-PNP-HD	0301112			

Two sensors are required per unit for monitoring two positions. On option, extension cables and sensor distributors are available. Additional product variants of the sensor, and further information and technical data can be found in the catalog chapter sensor system.

### Programmable magnetic switch MMS 22-PI2

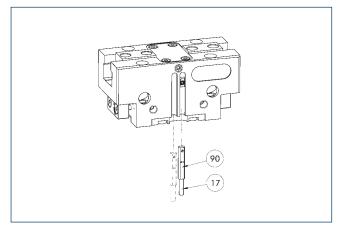

(17) Cable outlet


90 MMS 22...-PI2-... sensor

Positionsabfrage mit zwei programmierbaren Positionen je Sensor und in Sensor integrierter Elektronik. Programmierbar über Magnetteachwerkzeug MT (im Lieferumfang enthalten; Ident.–Nr.: 0301030) oder Steckerteachwerkzeug ST (optional). Endstellungsabfrage in C-Nut montiert. Sind die Steckerteachwerkzeuge ST in der aufgeführten Tabelle gelistet, kann ausschließlich mit den Steckerteachwerkzeugen ST geteacht werden.

Description	ID	Often combined
Programmable magnetic switch		
MMS 22-PI2-S-M8-PNP	0301180	•
MMSK 22-PI2-S-PNP	0301182	
Programmable magnetic switch	with lateral c	able outlet
MMS 22-PI2-S-M8-PNP-SA	0301186	•
MMSK 22-PI2-S-PNP-SA	0301188	
Programmable magnetic switch	with stainless	s steel housing
MMS 22-PI2-S-M8-PNP-HD	0301130	•
MMSK 22-PI2-S-PNP-HD	0301132	

① One sensor is required per unit for monitoring two positions. Extension cables and sensor distributors are optionally available. Additional product variants of the sensor, and further information and technical data can be found in the catalog chapter sensor systems.

### MMS-P programmable magnetic switch

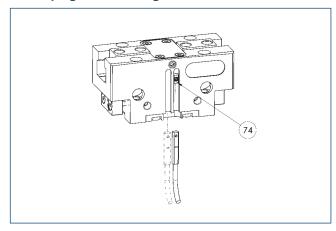


74) Limit stop for sensor

Position monitoring with two programmable positions per sensor. End position monitoring for mounting in the C-slot.

Description	ID	Often combined			
Programmable magnetic switc	h				
MMSK-P 22-S-PNP	0301371				
MMS-P 22-S-M8-PNP	0301370	•			
Connection cables					
KA GLN0804-LK-00500-A	0307767	•			
KA GLN0804-LK-01000-A	0307768				
KA WLN0804-LK-00500-A	0307765				
KA WLN0804-LK-01000-A	0307766				
Clip for connector/socket					
CLI-M8	0301463				
Sensor distributor					
V2-M8-4P-2XM8-3P	0301380				

① One sensor is required per unit for monitoring two positions. Extension cables and sensor distributors are optionally available. Additional product variants of the sensor, and further information and technical data can be found in the catalog chapter sensor systems.

### Analog position sensor MMS-A

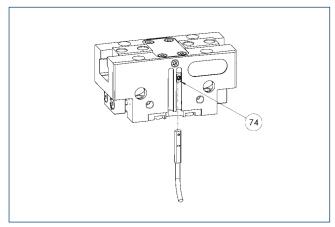


(74) Limit stop for sensor

Non-contact measuring, analog multi-position monitoring for any number of positions, easy to assemble in the C-slot. Can be programmed using MT magnetic teaching tool (included in the scope of delivery, ID 0301030) or ST plug teaching tool (optional). End position monitoring for mounting in the C-slot. If the ST plug teaching tools are listed in the chart provided, teaching is only possible with the ST teaching tools.

Description	ID
Analog position sensor	
MMS 22-A-10V-M08	0315825
MMS 22-A-10V-M12	0315828

① One sensor is required for each gripper. No additional mounting kit is required – the gripper is equipped for use of the sensor by default. Further information and technical data can be found in the catalog chapter sensor systems.

#### Flexible position sensor with MMS-A

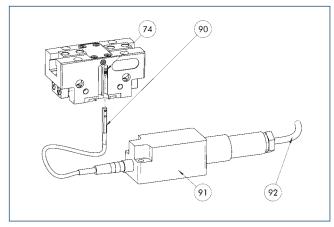


- (74) Limit stop for sensor
- (91) FPS-F5 evaluation electronic
- 90 MMS 22-A-... sensor
- (92) Connection cables

Flexible position monitoring of up to five positions. Sensor can be taught using MT magnetic teaching tool (included in the scope of delivery, ID 0301030) or ST plug teaching tool (optional). If the ST plug teaching tools are listed in the table provided, teaching is only possible with the ST teaching tools.

Description	ID
Analog position sensor	
MMS 22-A-05V-M08	0315805
Evaluation electronics	
FPS-F5	0301805
Sensor Teaching Tool	
MT-MMS 22-PI	0301030
Connection cables	
KA BG16-L 12P-1000	0301801

Beim Einsatz eines FPS-Systems wird pro Greifer ein MMS 22-A-05V sowie eine Auswerteelektronik (FPS-F5) benötigt sowie, falls aufgeführt, einen Anbausatz (AS). Kabelverlängerungen (KV) sind optional im Katalogteil "Zubehör" erhältlich.

## Programmable magnetic switch MMS-I0-Link

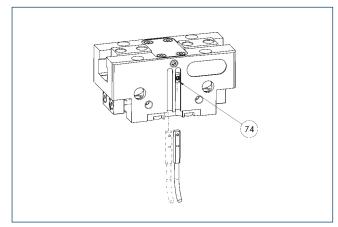


## (74) Limit stop for sensor

Sensor zur Multi-Positionsabfrage durch Erfassung des kompletten Greiferhubs. Der Sensor wird direkt in der C-Nut des Greifers montiert. Die Programmierung des Sensors auf den Greifer erfolgt via IO-Link-Schnittselle, Magnetteachtool MT (im Lieferumfang enthalten; Ident.-Nr.: 0301030) oder Steckerteachwerkzeug ST (optional). Sind die Steckerteachwerkzeuge ST in der aufgeführten Tabelle gelistet, kann nicht mit dem Magnetteachtool MT geteacht werden. Zum Betrieb ist ein IO-Link-Master notwendig.

Description	ID
Programmable mag	netic switch
MMS 22-I0L-M08	0315830
MMS 22-I0L-M12	0315835

① One sensor is required for each gripper. No additional mounting kit is required – the gripper is equipped for use of the sensor by default. Further information and technical data can be found in the catalog chapter sensor systems.

## APS-Z80 analog position sensor

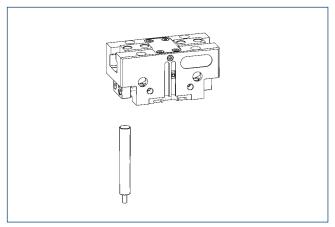


Non-contact measuring, analog multi-position monitoring for any number of positions.

Description	ID	Often combined
Mounting kit for APS-Z80		
AS-APS-Z80-PGN-plus-P 160-1	1374181	
AS-APS-Z80-PGN-plus-P 160-2	1374182	
Analog position sensor		
APS-Z80-K	0302072	
APS-Z80-M8	0302070	•

When using an APS system, one mounting kit (AS-APS-Z80) and one APS-Z80 sensor is required per gripper. The resolution of the sensor can be lower in the peripheral areas of the gripper. You can find further information on the product in the operating manual.

## APS-M1 analog position sensor

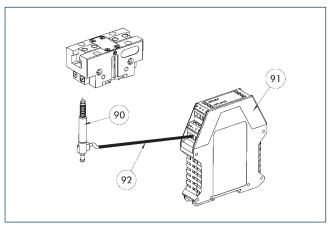

- 90 APS-M1S sensor
- **92** APS-K extension cable
- 91) APS-M1E electronic processor


Analog multi position monitoring for any desired positions

Description	ID
Mounting kit for APS-M1	
AS-APS-M1-PGN-plus-P 160-1	1374144
AS-APS-M1-PGN-plus-P 160-2	1374159
Analog position sensor	
APS-M1S	0302062
Connection cables	
APS-K0200	0302066
APS-K0700	0302068
Evaluation electronics	
APS-M1E	0302064


When using an APS system, for each gripper an attachment kit (AS-APS-M1), an APS-M1S sensor (incl. 3 m cable) as well as an electronics (APS-M1e) are required. An extension cable (APS-K) can be connected between the sensor and the electronics as an option. The max. cable length between the sensor and the electronics is 10 m, between the electronics and their control unit (PLC) it is max. 1 m.




## Gripping force O.D. gripping

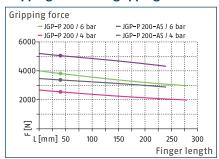

## **Gripping force I.D. gripping**

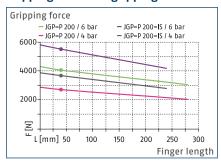

#### **Dimensions and maximum loads**

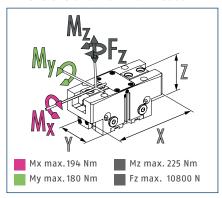


The indicated moments and forces are statical values, apply for each base jaw and may appear simultaneously. Loads may additionally occur to the moment produced by the gripping force itself.

### **Technical data**

Description		JGP-P 200-1	JGP-P 200-1-AS	JGP-P 200-1-IS
ID		1460291	1460292	1460293
Stroke per jaw	[mm]	25	25	25
Closing/opening force	[N]	3800/4050	5050/-	-/5500
Min. spring force	[N]		1250	1450
Weight	[kg]	5.4	7	6.8
Recommended workpiece weight	[kg]	19	19	19
Fluid consumption double stroke	[cm³]	510	810	890
Min./nom./max. operating pressure	[bar]	2.5/6/8	4/6/6.5	4/6/6.5
Min./max. air purge pressure	[bar]	0.5/1	0.5/1	0.5/1
Closing/opening time	[s]	0.28/0.28	0.24/0.55	0.55/0.24
Closing/opening time with spring	[s]		0.40	0.40
Max. permissible finger length	[mm]	280	240	240
Max. permissible weight per finger	[kg]	6.5	6.5	6.5
IP protection class		40	40	40
Min./max. ambient temperature	[°C]	5/90	5/90	5/90
Repeat accuracy	[mm]	0.02	0.02	0.02
Dimensions X x Y x Z	[mm]	234 x 100 x 91	234 x 100 x 141	234 x 100 x 141

① It may take a few 100 gripping cycles until the full gripping force (as indicated in the data table) will be available.


#### Main view

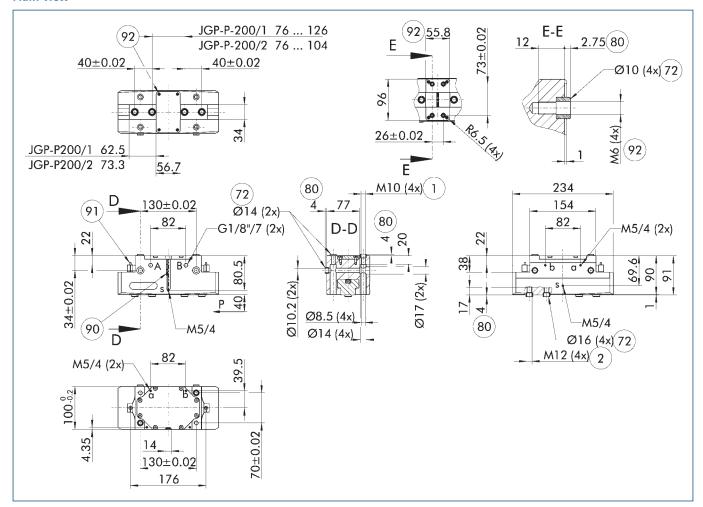


The drawing shows the gripper in the basic version with closed jaws, without dimensional consideration of the options described below.

- As an alternative/in addition to spring-assisted mechanical gripping force maintenance, the SDV-P pressure maintenance valve can be used for I.D. and O.D. gripping (see "Accessories" section of catalog).
- A, a Main / direct connection, gripper opening
- B, b Main / direct connection, gripper closing
- S Air purge connection
- (1) Gripper connection
- (2) Finger connection
- (72) Fit for centering sleeves
- 80 Depth of the centering sleeve hole in the counter part
- 90 Sensor MMS 22..
- (91) Sensor IN ...
- (92) Screw connection with centering for customized mounting (these centering sleeves are not included in the scope of delivery)


## Maximum permitted finger projection

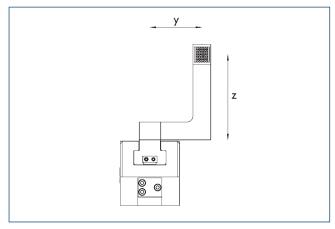

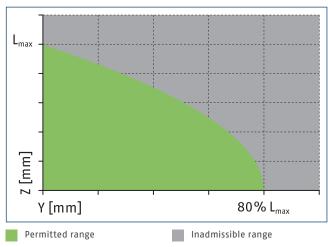


 $L^{\text{max}}$  is equivalent to the maximum permitted finger length, see the technical data table.

### Hose-free direct connection M5

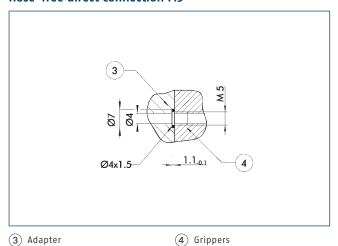


The direct connection is used for supplying compressed air without hoses. Instead, the pressure medium is fed through bore-holes in the mounting plate.

## **Gripping force maintenance version AS/IS**

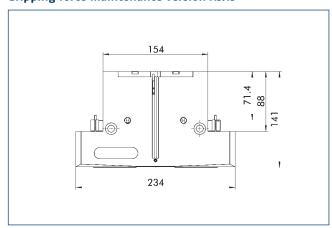

The mechanical gripping force maintenance device ensures that a minimum clamping force will be applied even if there is a drop in pressure. In the AS/S variant this acts as a closing force, in the IS variant as an opening force. Besides this, gripping force maintenance can be used to increase gripping force or for single actuated gripping.

## **Electronic symbol according to DIN ISO 1219**

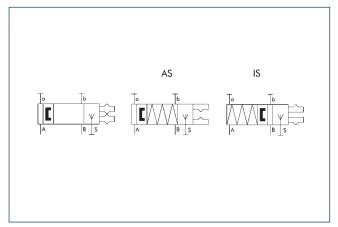


- A, a Main / direct connection, gripper opening
- B, b Main / direct connection, gripper closing
- S Air purge connection

The circuit symbol shows the connection options and the function of the pneumatic gripper. "A" and "B" are the main connections of the gripper for opening and closing. "a" and "b" are optional direct connections for opening and closing without interference–prone hosing. "S" describes the optional air purge connection, which impedes the ingress of dirt into the gripper.

SCHUNK also provides ECAD data for your design. You can choose between direct access via your EPLAN-Electric P8 software or download using the EPLAN Data Portal. Further information can be found on the SCHUNK website.

### SDV-P pressure maintenance valve

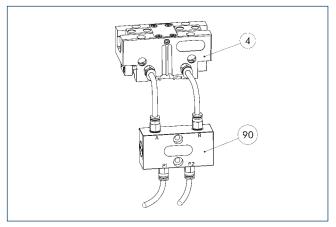

4 Grippers


90 SDV-P pressure maintenance valve

The SDV-P pressure maintenance valve ensures in emergency STOP situations that the pressure in the piston chamber of pneumatic gripper, swivel, linear, and quick-change modules is temporarily maintained.

Description	ID	Recommended hose diameter
		[mm]
Pressure maintenance	e valve	
SDV-P 07	0403131	8
Pressure maintenance valve with air bleed screw		
SDV-P 07-E	0300121	8
SDV-P 10-E	0300109	10

① In order to achieve the specified closing and opening time for each gripper variant, the recommended hose diameter must be used. The direct allocation of the respective variant of the gripper for the respective SDV-P can be found at schunk.com.

### BSWS jaw quick-change jaw systems

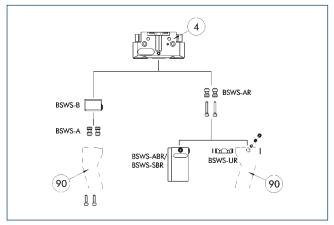

(4) Grippers

90 Customized gripper fingers

There are various jaw quick-change systems available for the gripper. For detailed information, please refer to the corresponding product.

Description	ID	Scope of delivery
Quick-change jaw	system base	
BSWS-B 200	0303033	1
Jaw quick-change system adapter pin		
BSWS-A 200	0303032	2


① If the operating pressure is higher than 6 bar, suitability for use beyond the application limits must be checked. Only systems that are listed in the table, can be used.

#### Fields of application

Series	Size	Variant	Suitability
JGP-P	200	-1 (6 bar)	
JGP-P	200	-1-AS/1-IS (6 bar)	
JGP-P	200	-2 (6 bar)	
JGP-P	200	-2-AS/2-IS (6 bar)	
Legend			
	Can be combined without restrictions		
	Use with restrictions (see loading limits)		
0000	cannot be combined		

The load limits for describing the application limits can be found in the catalog chapter of the corresponding accessories.

### Jaw quick-change system BSWS-M

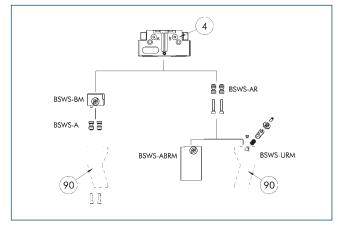

(4) Grippers

90 Customized gripper fingers

There are various jaw quick-change systems available for the gripper. For detailed information, please refer to the corresponding product.

Description	ID	Scope of delivery	
Quick-change jaw system base			
BSWS-BM 200	1419306	1	
Jaw quick-change system adapter pin			
BSWS-A 200	0303032	2	


① If the operating pressure is higher than 6 bar, suitability for use beyond the application limits must be checked. Only systems that are listed in the table, can be used.

#### Fields of application

Series	Size	Variant	Suitability		
JGP-P	200	-1 (6 bar)			
JGP-P	200	-1-AS/1-IS (6 bai	)		
JGP-P	200	-2 (6 bar)			
JGP-P	200	-2-AS/2-IS (6 ba	r) <b>===</b>		
Legend					
	Can be combi	Can be combined without restrictions			
	Use with rest	Use with restrictions (see loading limits)			
0000	cannot be co	cannot be combined			

The load limits for describing the application limits can be found in the catalog chapter of the corresponding accessories.

### ZBA-L-plus 200 intermediate jaws

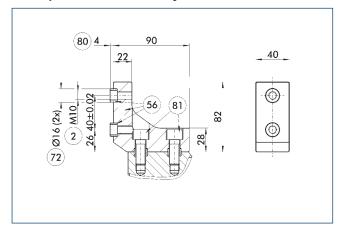


- 2 Finger connection
- (56) Included in the scope of delivery
- (72) Fit for centering sleeves
- 80 Depth of the centering sleeve hole in the counter part
- 81) Not included in the scope of delivery

Optionally intermediate jaws can be used, enabling direct connection and alignment of top jaws and various standard accessories in Z-direction.

Description	ID	Material	Finger interface	Scope of delivery
Intermediate jaw				
ZBA-L-plus 200	0311772	Aluminum	PGN-plus 200	1

## UZB 200 universal intermediate jaw

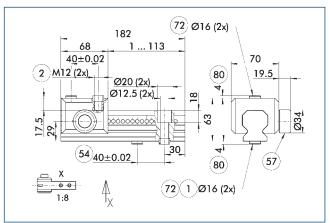

- 1 Gripper connection
- (2) Finger connection
- (54) Optional right or left connection
- 57 Locking
- 72) Fit for centering sleeves
- 80 Depth of the centering sleeve hole in the counter part

The drawing shows the UZB universal intermediate jaw. The fully removable UZB-S slide (can also be ordered separately) allows for a quick jaw change.

Description	ID	Grid dimension	
		[mm]	
Universal intermediate j	aw		
UZB 200	0300047	7	
Finger blank			
ABR-PGZN-plus 200	0300015		
SBR-PGZN-plus 200	0300025		
Slide for universal intermediate jaw			
UZB-S 200	5518275	7	


① If the operating pressure is higher than 6 bar, suitability for use beyond the application limits must be checked.

#### Fields of application

Series	Size	Variant	Suitability	
JGP-P	200	-1 (6 bar)		
JGP-P	200	-1-AS/1-IS (6 bar)		
JGP-P	200	-2 (6 bar)		
JGP-P	200	-2-AS/2-IS (6 bar)	0000	
Legend				
	Can be combined without restrictions			
	Use with restrictions (see loading limits)			
0000	cannot be combined			

The load limits for describing the application limits can be found in the catalog chapter of the corresponding accessories.

### Finger blanks ABR/SBR-PGZN-plus 200

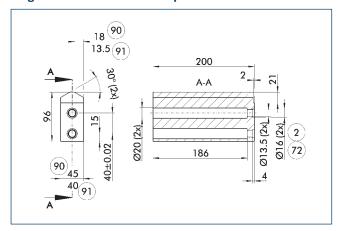


- (2) Finger connection
- 72) Fit for centering sleeves
- 90 ABR-PGZN-plus
- 91) SBR-PGZN-plus

The drawing shows the finger blank which can be reworked by the customer.

Description	ID	Material	Scope of delivery
Finger blank			
ABR-PGZN-plus 200	0300015	Aluminum (3.4365)	1
SRR-PG7N-nlus 200	0300025	Steel (1 7131)	1

### Tolerance compensation unit TCU

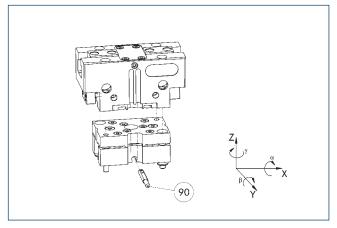


90 Monitoring of locking

Grippers can be directly mounted without an adapter plate. Tolerance compensation unit and gripper have an identical screw connection diagram. Therefore the tolerance compensation units can be assembled later. Please consider the additional assembly height of the tolerance compensation unit. For details please refer to our catalog robot accessories.

Description	ID	Locking	Deflection	Often combined
Compensation unit				
TCU-P-200-3-MV	0324864	yes	±1°/±2°/±1,5°	•
TCU-P-200-3-0V	0324865	no	±1°/±2°/±1.5°	


## **Modular Assembly Automation**

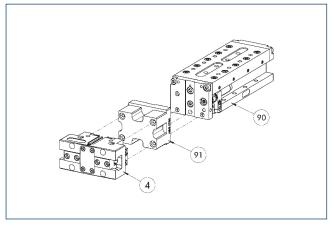

- (4) Grippers
- (91) ASG adapter plate
- 90 Linear module CLM/KLM/LM/ELP/ ELM/ELS/HLM

Grippers and linear modules can be combined with standard adapter plates from the modular assembly system. For more information see our main catalog "Modular Assembly Automation".

# **Inductive proximity switches**

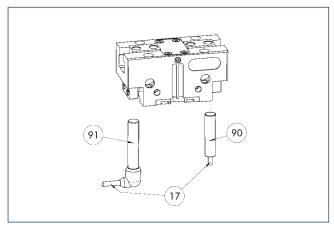


- 17) Cable outlet
- 91) Sensor IN..-SA
- 90 Sensor IN ...

IN 80-S-M12 0301578 IN 80-S-M8 0301478 • INK 80-S 0301550 Inductive proximity switch with lateral cable outlet IN 80-S-M8-SA 0301587 IN 80-S-M8-SA 0301587 IN 80-S-M8-SA 0301483 • INK 80-S-SA 0301566 Connection cables KA BG08-L 3P-0300-PNP 0301622 • KA BG08-L 3P-0500-PNP 0301623 KA BG08-L 3P-0500-PNP 0301594 KA BW08-L 3P-0500-PNP 0301594 KA BW08-L 3P-0500-PNP 0301502 KA BW12-L 3P-0500-PNP 0301503 KA BW12-L 3P-0500-PNP 0301507 Clip for connector/socket CLI-M12 0301464 CLI-M8 0301463 Cable extension KV BG12-SG12 3P-0030-PNP 0301999 KV BG12-SG12 3P-0030-PNP 0301999 KV BW08-SG08 3P-0100-PNP 0301495 KV BW08-SG08 3P-0200-PNP 0301497 KV BW08-SG08 3P-0200-PNP 0301597 SV BW12-SG12 3P-0030-PNP 0301595 KV BW12-SG12 3P-0030-PNP 0301497 KV BW12-SG12 3P-0030-PNP 0301595 KV BW08-SG08 3P-0200-PNP 0301595 KV BW12-SG12 3P-0030-PNP 0301595 KV BW12-SG12 3P-0000-PNP 0301597 Sensor distributor V2-M12 0301776 V2-M8 0301775 V4-M8 0301776	Description	ID	Often combined
IN 80-S-M8  INK 80-S  Inductive proximity switch with lateral cable outlet  IN 80-S-M12-SA  IN 80-S-M8-SA  IN 80-S-M8-SA  INK 80-S-SA  O301566  Connection cables  KA BG08-L 3P-0300-PNP  KA BG08-L 3P-0500-PNP  MA BG08-L 3P-0500-PNP  WA BW08-L 3P-0500-PNP  WA BW08-L 3P-0500-PNP  WA BW08-L 3P-0500-PNP  WA BW12-L 3P-0500-PNP  WA BW12-SG12 3P-0030-PNP  WA BW12-SG12 3P-0300-PNP  WA BW14-SG18 3W17-ST  WA BW14-SG18 3W17-ST  WA BW14-SG18 3W17-ST  WA BW14-SG18 3W17-ST  WA BW14-SG18 3W18-ST  WA BW14-SG18 3W17-ST  WA BW14-SG18 3W17-ST  WA BW14-SG18 3W17-ST  WA BW14	Inductive proximity switches		
INK 80-S Inductive proximity switch with lateral cable outlet IN 80-S-M12-SA IN 80-S-M8-SA INK 80-S-SA INK 80-S-SO	IN 80-S-M12	0301578	
Inductive proximity switch with lateral cable outlet  IN 80-S-M12-SA  IN 80-S-M8-SA  IN 80-S-M8-SA  INK 80-S-SA  O301566  Connection cables  KA BG08-L 3P-0300-PNP  O301622  KA BG08-L 3P-0500-PNP  O301623  KA BG12-L 3P-0500-PNP  O3016369  KA BW08-L 3P-0500-PNP  O301594  KA BW08-L 3P-0500-PNP  O301502  KA BW12-L 3P-0500-PNP  O301503  KA BW12-L 3P-0500-PNP  O301507  Clip for connector/socket  CLI-M12  O301464  CLI-M8  O301463  Cable extension  KV BG12-SG12 3P-0030-PNP  O301999  KV BG12-SG12 3P-0030-PNP  O301998  KV BW08-SG08 3P-0100-PNP  O301495  KV BW08-SG08 3P-0100-PNP  O301497  KV BW12-SG12 3P-0030-PNP  O301595  KV BW12-SG12 3P-0030-PNP  O301596  KV BW12-SG12 3P-0030-PNP  O301597  Sensor distributor  V2-M12  V2-M8  O301776  • V4-M8	IN 80-S-M8	0301478	•
IN 80-S-M12-SA 0301587 IN 80-S-M8-SA 0301483 INK 80-S-SA 0301566 Connection cables KA BG08-L 3P-0300-PNP 0301622 KA BG08-L 3P-0500-PNP 0301623 KA BG12-L 3P-0500-PNP 0301594 KA BW08-L 3P-0500-PNP 0301594 KA BW08-L 3P-0500-PNP 0301502 KA BW12-L 3P-0500-PNP 0301503 KA BW12-L 3P-0500-PNP 0301507 Clip for connector/socket CLI-M12 0301464 CLI-M8 0301463 Cable extension KV BG12-SG12 3P-0030-PNP 0301999 KV BW08-SG08 3P-0030-PNP 0301999 KV BW08-SG08 3P-0100-PNP 0301495 KV BW08-SG08 3P-0100-PNP 0301496 KV BW08-SG08 3P-0200-PNP 0301497 KV BW12-SG12 3P-0030-PNP 0301595 KV BW12-SG12 3P-0030-PNP 0301595 KV BW12-SG12 3P-0100-PNP 0301596 KV BW12-SG12 3P-0200-PNP 0301597 Sensor distributor V2-M12 0301776 • V2-M8 0301775 • V4-M8	INK 80-S	0301550	
IN 80-S-M8-SA 0301483 INK 80-S-SA 0301566  Connection cables  KA BG08-L 3P-0300-PNP 0301622  KA BG08-L 3P-0500-PNP 0301623  KA BG12-L 3P-0500-PNP 0301594  KA BW08-L 3P-0500-PNP 0301502  KA BW08-L 3P-0500-PNP 0301503  KA BW12-L 3P-0500-PNP 0301507  Clip for connector/socket  CLI-M12 0301464  CLI-M8 0301463  Cable extension  KV BG12-SG12 3P-0030-PNP 0301999  KV BW08-SG08 3P-0030-PNP 0301998  KV BW08-SG08 3P-0100-PNP 0301495  KV BW08-SG08 3P-0100-PNP 0301496  KV BW08-SG08 3P-0200-PNP 0301595  KV BW12-SG12 3P-0030-PNP 0301595  KV BW12-SG12 3P-0030-PNP 0301596  KV BW12-SG12 3P-0200-PNP 0301597  Sensor distributor  V2-M12 0301776  V2-M8 0301775  • V4-M8	Inductive proximity switch with la	teral cable ou	tlet
INK 80-S-SA 0301566  Connection cables  KA BG08-L 3P-0300-PNP 0301622  KA BG08-L 3P-0500-PNP 0301623  KA BG12-L 3P-0500-PNP 30016369  KA BW08-L 3P-0500-PNP 0301594  KA BW08-L 3P-0500-PNP 0301502  KA BW12-L 3P-0500-PNP 0301503  KA BW12-L 3P-0500-PNP 0301507  Clip for connector/socket  CLI-M12 0301464  CLI-M8 0301463  Cable extension  KV BG12-SG12 3P-0030-PNP 0301999  KV BG12-SG12 3P-0030-PNP 0301998  KV BW08-SG08 3P-0030-PNP 0301495  KV BW08-SG08 3P-0100-PNP 0301496  KV BW08-SG08 3P-0200-PNP 0301497  KV BW12-SG12 3P-0030-PNP 0301595  KV BW12-SG12 3P-0030-PNP 0301595  KV BW12-SG12 3P-0100-PNP 0301596  KV BW12-SG12 3P-0200-PNP 0301597  Sensor distributor  V2-M12 0301776  V2-M8 0301775  • V4-M8	IN 80-S-M12-SA	0301587	
Connection cables  KA BG08-L 3P-0300-PNP 0301622  KA BG08-L 3P-0500-PNP 0301623  KA BG12-L 3P-0500-PNP 30016369  KA BW08-L 3P-0500-PNP 0301594  KA BW08-L 3P-0500-PNP 0301502  KA BW12-L 3P-0300-PNP 0301507  Clip for connector/socket  CLI-M12 0301464  CLI-M8 0301463  Cable extension  KV BG12-SG12 3P-0030-PNP 0301999  KV BG12-SG12 3P-0060-PNP 0301998  KV BW08-SG08 3P-0100-PNP 0301495  KV BW08-SG08 3P-0100-PNP 0301496  KV BW08-SG08 3P-0200-PNP 0301497  KV BW12-SG12 3P-0030-PNP 0301595  KV BW12-SG12 3P-0030-PNP 0301595  KV BW12-SG12 3P-0100-PNP 0301596  KV BW12-SG12 3P-0200-PNP 0301597  Sensor distributor  V2-M12 0301776  V2-M8 0301775  V4-M8 0301775	IN 80-S-M8-SA	0301483	•
KA BG08-L 3P-0300-PNP 0301622  KA BG08-L 3P-0500-PNP 0301623  KA BG12-L 3P-0500-PNP 30016369  KA BW08-L 3P-0500-PNP 0301594  KA BW08-L 3P-0500-PNP 0301502  KA BW12-L 3P-0300-PNP 0301503  KA BW12-L 3P-0500-PNP 0301507  Clip for connector/socket  CLI-M12 0301464  CLI-M8 0301463  Cable extension  KV BG12-SG12 3P-0030-PNP 0301999  KV BG12-SG12 3P-0060-PNP 0301998  KV BW08-SG08 3P-0030-PNP 0301495  KV BW08-SG08 3P-0100-PNP 0301496  KV BW08-SG08 3P-0200-PNP 0301497  KV BW12-SG12 3P-0030-PNP 0301595  KV BW12-SG12 3P-0100-PNP 0301596  KV BW12-SG12 3P-0200-PNP 0301597  Sensor distributor  V2-M12 0301776  V2-M8 0301775  V4-M8 0301776	INK 80-S-SA	0301566	
KA BG08-L 3P-0500-PNP	Connection cables		
KA BG12-L 3P-0500-PNP	KA BG08-L 3P-0300-PNP	0301622	•
KA BW08-L 3P-0300-PNP 0301594  KA BW08-L 3P-0300-PNP 0301502  KA BW12-L 3P-0300-PNP 0301503  KA BW12-L 3P-0500-PNP 0301507  Clip for connector/socket  CLI-M12 0301464  CLI-M8 0301463  Cable extension  KV BG12-SG12 3P-0030-PNP 0301999  KV BG12-SG12 3P-0060-PNP 0301998  KV BW08-SG08 3P-0030-PNP 0301495  KV BW08-SG08 3P-0100-PNP 0301496  KV BW08-SG08 3P-0200-PNP 0301497  KV BW12-SG12 3P-0030-PNP 0301595  KV BW12-SG12 3P-0100-PNP 0301596  KV BW12-SG12 3P-0200-PNP 0301597  Sensor distributor  V2-M12 0301776  V2-M8 0301775  V4-M8 0301775	KA BG08-L 3P-0500-PNP	0301623	
KA BW08-L 3P-0500-PNP 0301502  KA BW12-L 3P-0300-PNP 0301507  Clip for connector/socket  CLI-M12 0301464  CLI-M8 0301463  Cable extension  KV BG12-SG12 3P-0030-PNP 0301999  KV BG12-SG12 3P-0060-PNP 0301998  KV BW08-SG08 3P-0030-PNP 0301495  KV BW08-SG08 3P-0100-PNP 0301496  KV BW08-SG08 3P-0200-PNP 0301497  KV BW12-SG12 3P-0030-PNP 0301595  KV BW12-SG12 3P-0100-PNP 0301596  KV BW12-SG12 3P-0100-PNP 0301597  Sensor distributor  V2-M12 0301775  V4-M8 0301775  • 0301776	KA BG12-L 3P-0500-PNP	30016369	
KA BW12-L 3P-0300-PNP 0301503  KA BW12-L 3P-0500-PNP 0301507  Clip for connector/socket  CLI-M12 0301464  CLI-M8 0301463  Cable extension  KV BG12-SG12 3P-0030-PNP 0301999  KV BG12-SG12 3P-0060-PNP 0301998  KV BW08-SG08 3P-0030-PNP 0301495  KV BW08-SG08 3P-0100-PNP 0301496  KV BW08-SG08 3P-0200-PNP 0301497  KV BW12-SG12 3P-0030-PNP 0301595  KV BW12-SG12 3P-0100-PNP 0301595  KV BW12-SG12 3P-0200-PNP 0301597  Sensor distributor  V2-M12 0301776  V2-M8 0301775  V4-M8 0301746	KA BW08-L 3P-0300-PNP	0301594	
KA BW12-L 3P-0500-PNP 0301507  Clip for connector/socket  CLI-M12 0301464  CLI-M8 0301463  Cable extension  KV BG12-SG12 3P-0030-PNP 0301999  KV BG12-SG12 3P-0060-PNP 0301998  KV BW08-SG08 3P-0030-PNP 0301495  KV BW08-SG08 3P-0100-PNP 0301496  KV BW08-SG08 3P-0200-PNP 0301497  KV BW12-SG12 3P-0030-PNP 0301595  KV BW12-SG12 3P-0100-PNP 0301596  KV BW12-SG12 3P-0200-PNP 0301597  Sensor distributor  V2-M12 0301776  V2-M8 0301775  V4-M8 0301776	KA BW08-L 3P-0500-PNP	0301502	
Clip for connector/socket  CLI-M12 0301464  CLI-M8 0301463  Cable extension  KV BG12-SG12 3P-0030-PNP 0301999  KV BG12-SG12 3P-0060-PNP 0301998  KV BW08-SG08 3P-0030-PNP 0301495  KV BW08-SG08 3P-0100-PNP 0301496  KV BW08-SG08 3P-0200-PNP 0301497  KV BW12-SG12 3P-0030-PNP 0301595  KV BW12-SG12 3P-0100-PNP 0301596  KV BW12-SG12 3P-0200-PNP 0301597  Sensor distributor  V2-M12 0301776  V2-M8 0301775  V4-M8 0301776	KA BW12-L 3P-0300-PNP	0301503	
CLI-M12 0301464  CLI-M8 0301463  Cable extension  KV BG12-SG12 3P-0030-PNP 0301999  KV BG12-SG12 3P-0060-PNP 0301998  KV BW08-SG08 3P-0030-PNP 0301495  KV BW08-SG08 3P-0100-PNP 0301496  KV BW08-SG08 3P-0200-PNP 0301595  KV BW12-SG12 3P-0030-PNP 0301595  KV BW12-SG12 3P-0100-PNP 0301596  KV BW12-SG12 3P-0200-PNP 0301597  Sensor distributor  V2-M12 0301776  V2-M8 0301775  V4-M8 0301746	KA BW12-L 3P-0500-PNP	0301507	
CLI-M8 0301463  Cable extension  KV BG12-SG12 3P-0030-PNP 0301999  KV BG12-SG12 3P-0060-PNP 0301998  KV BW08-SG08 3P-0030-PNP 0301495  KV BW08-SG08 3P-0100-PNP 0301496  KV BW08-SG08 3P-0200-PNP 0301595  KV BW12-SG12 3P-0030-PNP 0301595  KV BW12-SG12 3P-0100-PNP 0301596  KV BW12-SG12 3P-0200-PNP 0301597  Sensor distributor  V2-M12 0301776  V2-M8 0301775  V4-M8 0301746	Clip for connector/socket		
Cable extension  KV BG12-SG12 3P-0030-PNP 0301999  KV BG12-SG12 3P-0060-PNP 0301998  KV BW08-SG08 3P-0030-PNP 0301495  KV BW08-SG08 3P-0100-PNP 0301496  KV BW08-SG08 3P-0200-PNP 0301595  KV BW12-SG12 3P-0030-PNP 0301595  KV BW12-SG12 3P-0100-PNP 0301596  KV BW12-SG12 3P-0200-PNP 0301597  Sensor distributor  V2-M12 0301776 • V2-M8 0301775 • V4-M8 0301746	CLI-M12	0301464	
KV BG12-SG12 3P-0030-PNP 0301999 KV BG12-SG12 3P-0060-PNP 0301998 KV BW08-SG08 3P-0030-PNP 0301495 KV BW08-SG08 3P-0100-PNP 0301496 KV BW08-SG08 3P-0200-PNP 0301497 KV BW12-SG12 3P-0030-PNP 0301595 KV BW12-SG12 3P-0100-PNP 0301596 KV BW12-SG12 3P-0200-PNP 0301597 Sensor distributor V2-M12 0301776 V2-M8 0301775 V4-M8 0301746	CLI-M8	0301463	
KV BG12-SG12 3P-0060-PNP       0301998         KV BW08-SG08 3P-0030-PNP       0301495         KV BW08-SG08 3P-0100-PNP       0301496         KV BW08-SG08 3P-0200-PNP       0301497         KV BW12-SG12 3P-0030-PNP       0301595         KV BW12-SG12 3P-0100-PNP       0301596         KV BW12-SG12 3P-0200-PNP       0301597         Sensor distributor       V2-M12         V2-M8       0301775         V4-M8       0301746	Cable extension		
KV BW08-SG08 3P-0030-PNP       0301495         KV BW08-SG08 3P-0100-PNP       0301496         KV BW08-SG08 3P-0200-PNP       0301497         KV BW12-SG12 3P-0030-PNP       0301595         KV BW12-SG12 3P-0100-PNP       0301596         KV BW12-SG12 3P-0200-PNP       0301597         Sensor distributor       V2-M12         V2-M8       0301775         V4-M8       0301746	KV BG12-SG12 3P-0030-PNP	0301999	
KV BW08-SG08 3P-0100-PNP 0301496  KV BW08-SG08 3P-0200-PNP 0301497  KV BW12-SG12 3P-0030-PNP 0301595  KV BW12-SG12 3P-0100-PNP 0301596  KV BW12-SG12 3P-0200-PNP 0301597  Sensor distributor  V2-M12 0301776  V2-M8 0301775  V4-M8 0301746	KV BG12-SG12 3P-0060-PNP	0301998	
KV BW08-SG08 3P-0200-PNP       0301497         KV BW12-SG12 3P-0030-PNP       0301595         KV BW12-SG12 3P-0100-PNP       0301596         KV BW12-SG12 3P-0200-PNP       0301597         Sensor distributor       V2-M12       0301776         V2-M8       0301775       •         V4-M8       0301746	KV BW08-SG08 3P-0030-PNP	0301495	
KV BW12-SG12 3P-0030-PNP       0301595         KV BW12-SG12 3P-0100-PNP       0301596         KV BW12-SG12 3P-0200-PNP       0301597         Sensor distributor       V2-M12         V2-M8       0301775         V4-M8       0301746	KV BW08-SG08 3P-0100-PNP	0301496	
KV BW12-SG12 3P-0100-PNP       0301596         KV BW12-SG12 3P-0200-PNP       0301597         Sensor distributor         V2-M12       0301776       •         V2-M8       0301775       •         V4-M8       0301746	KV BW08-SG08 3P-0200-PNP	0301497	•
KV BW12-SG12 3P-0200-PNP     0301597       Sensor distributor     0301776       V2-M12     0301776       V2-M8     0301775       V4-M8     0301746	KV BW12-SG12 3P-0030-PNP	0301595	
Sensor distributor       V2-M12     0301776     ●       V2-M8     0301775     ●       V4-M8     0301746	KV BW12-SG12 3P-0100-PNP	0301596	
V2-M12     0301776       V2-M8     0301775       V4-M8     0301746	KV BW12-SG12 3P-0200-PNP	0301597	
V2-M8 0301775 • V4-M8 0301746	Sensor distributor		
V4-M8 0301746	V2-M12	0301776	•
and the second s	V2-M8	0301775	•
V8-M8 0301751	V4-M8	0301746	
	V8-M8	0301751	

Two sensors are required per unit for monitoring two positions. On option, extension cables and sensor distributors are available. Additional product variants of the sensor, and further information and technical data can be found in the catalog chapter sensor system.

### Flexible position sensor

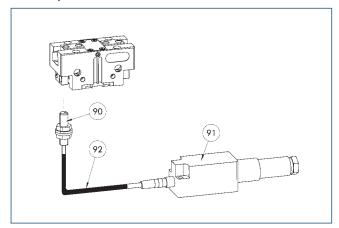


- 90 FPS-S sensor
- 92 Cable extension
- (91) FPS-F5 evaluation electronic

Flexible position monitoring of up to five positions.

Description	ID
Attachment kit for FPS	
AS-FPS-PGN-plus-P 200-1	1388827
Sensor	
FPS-S M8	0301704
Evaluation electronics	
FPS-F5	0301805
Cable extension	
KV BG08-SG08 3P-0050	0301598
KV BG08-SG08 3P-0100	0301599

When using an FPS system, an FPS sensor (FPS-S) as well as an electronic processor (FPS-F5 / F5 T) are required for each gripper as well as a mounting kit (AS), if listed. Cable extensions (KV) are optionally available – see catalog chapter "Accessories."

## **Electronic magnetic switch MMS**

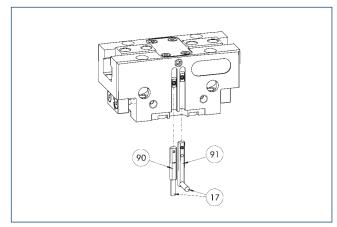


- 17) Cable outlet
- 91) Sensor MMS 22...-SA
- 90 Sensor MMS 22...

End position monitoring for mounting in the C-slot.

Description ID  Electronic magnetic switch  MMS 22-S-M8-PNP 0301034  MMSK 22-S-PNP 0301034  Electronic magnetic switches with lateral cabl  MMS 22-S-M8-PNP-SA 0301042  MMSK 22-S-PNP-SA 0301044  Connection cables	le outlet
MMSK 22-S-PNP         0301034           Electronic magnetic switches with lateral cabl           MMS 22-S-M8-PNP-SA         0301042           MMSK 22-S-PNP-SA         0301044	le outlet
Electronic magnetic switches with lateral cabl MMS 22-S-M8-PNP-SA 0301042 MMSK 22-S-PNP-SA 0301044	le outlet
MMS 22-S-M8-PNP-SA 0301042 MMSK 22-S-PNP-SA 0301044	le outlet  •
MMSK 22-S-PNP-SA 0301044	•
Connection cables	
KA BG08-L 3P-0300-PNP 0301622	•
KA BG08-L 3P-0500-PNP 0301623	
KA BW08-L 3P-0300-PNP 0301594	
KA BW08-L 3P-0500-PNP 0301502	
Clip for connector/socket	
CLI-M8 0301463	
Cable extension	
KV BW08-SG08 3P-0030-PNP 0301495	
KV BW08-SG08 3P-0100-PNP 0301496	
KV BW08-SG08 3P-0200-PNP 0301497	•
Sensor distributor	
V2-M8 0301775	•
V4-M8 0301746	
V8-M8 0301751	

Two sensors are required per unit for monitoring two positions. On option, extension cables and sensor distributors are available. Additional product variants of the sensor, and further information and technical data can be found in the catalog chapter sensor system.

### Programmable magnetic switch MMS 22-PI1

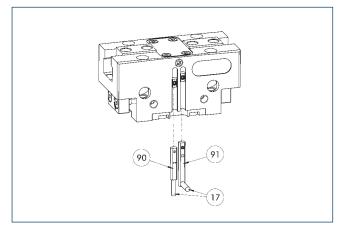

(17) Cable outlet

(91) Sensor MMS 22 ..-PI1-...-SA


90 Sensor MMS 22 PI1-...

Position monitoring with one programmable position per sensor and integrated electronic system in the sensor. Can be programmed using MT magnetic teaching tool (included in the scope of delivery, ID 0301030) or ST plug teaching tool (optional). End position monitoring for mounting in the C-slot. If the ST plug teaching tools are listed in the table provided, teaching is only possible with the ST teaching tools.

Description	ID	Often combined		
Programmable magnetic switch				
MMS 22-PI1-S-M8-PNP	0301160	•		
MMSK 22-PI1-S-PNP	0301162			
Programmable magnetic switch	with lateral c	able outlet		
MMS 22-PI1-S-M8-PNP-SA	0301166	•		
MMSK 22-PI1-S-PNP-SA	0301168			
Programmable magnetic switch	with stainles	s steel housing		
MMS 22-PI1-S-M8-PNP-HD	0301110	•		
MMSK 22-PI1-S-PNP-HD	0301112			

Two sensors are required per unit for monitoring two positions. On option, extension cables and sensor distributors are available. Additional product variants of the sensor, and further information and technical data can be found in the catalog chapter sensor system.

#### Programmable magnetic switch MMS 22-PI2

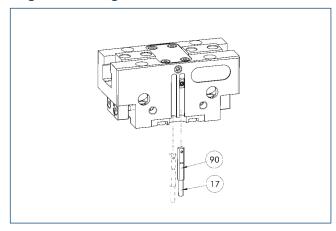

(17) Cable outlet


90 MMS 22...-PI2-... sensor

Positionsabfrage mit zwei programmierbaren Positionen je Sensor und in Sensor integrierter Elektronik. Programmierbar über Magnetteachwerkzeug MT (im Lieferumfang enthalten; Ident.-Nr.: 0301030) oder Steckerteachwerkzeug ST (optional). Endstellungsabfrage in C-Nut montiert. Sind die Steckerteachwerkzeuge ST in der aufgeführten Tabelle gelistet, kann ausschließlich mit den Steckerteachwerkzeugen ST geteacht werden.

Description	ID	Often combined		
Programmable magnetic switch				
MMS 22-PI2-S-M8-PNP	0301180	•		
MMSK 22-PI2-S-PNP	0301182			
Programmable magnetic switch with lateral cable outlet				
MMS 22-PI2-S-M8-PNP-SA	0301186	•		
MMSK 22-PI2-S-PNP-SA	0301188			
Programmable magnetic switch	with stainles	s steel housing		
MMS 22-PI2-S-M8-PNP-HD	0301130	•		
MMSK 22-PI2-S-PNP-HD	0301132			

① One sensor is required per unit for monitoring two positions. Extension cables and sensor distributors are optionally available. Additional product variants of the sensor, and further information and technical data can be found in the catalog chapter sensor systems.

#### MMS-P programmable magnetic switch

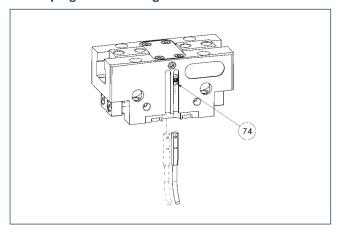


#### (74) Limit stop for sensor

Position monitoring with two programmable positions per sensor. End position monitoring for mounting in the C-slot.

Description	ID	Often combined
Programmable magnetic switch	:h	
MMSK-P 22-S-PNP	0301371	
MMS-P 22-S-M8-PNP	0301370	•
Connection cables		
KA GLN0804-LK-00500-A	0307767	•
KA GLN0804-LK-01000-A	0307768	
KA WLN0804-LK-00500-A	0307765	
KA WLN0804-LK-01000-A	0307766	
Clip for connector/socket		
CLI-M8	0301463	
Sensor distributor		
V2-M8-4P-2XM8-3P	0301380	

① One sensor is required per unit for monitoring two positions. Extension cables and sensor distributors are optionally available. Additional product variants of the sensor, and further information and technical data can be found in the catalog chapter sensor systems.

### Analog position sensor MMS-A

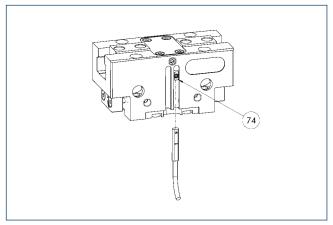


(74) Limit stop for sensor

Non-contact measuring, analog multi-position monitoring for any number of positions, easy to assemble in the C-slot. Can be programmed using MT magnetic teaching tool (included in the scope of delivery, ID 0301030) or ST plug teaching tool (optional). End position monitoring for mounting in the C-slot. If the ST plug teaching tools are listed in the chart provided, teaching is only possible with the ST teaching tools.

Description	ID
Analog position sensor	
MMS 22-A-10V-M08	0315825
MMS 22-A-10V-M12	0315828

① One sensor is required for each gripper. No additional mounting kit is required – the gripper is equipped for use of the sensor by default. Further information and technical data can be found in the catalog chapter sensor systems.

## Flexible position sensor with MMS-A

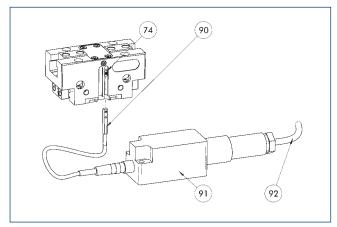


- (74) Limit stop for sensor
- (91) FPS-F5 evaluation electronic
- 90 MMS 22-A-... sensor
- (92) Connection cables

Flexible position monitoring of up to five positions. Sensor can be taught using MT magnetic teaching tool (included in the scope of delivery, ID 0301030) or ST plug teaching tool (optional). If the ST plug teaching tools are listed in the table provided, teaching is only possible with the ST teaching tools.

Description	ID	
Analog position sensor		
MMS 22-A-05V-M08	0315805	
Evaluation electronics		
FPS-F5	0301805	
Sensor Teaching Tool		
MT-MMS 22-PI	0301030	
Connection cables		
KA BG16-L 12P-1000	0301801	

Beim Einsatz eines FPS-Systems wird pro Greifer ein MMS 22-A-05V sowie eine Auswerteelektronik (FPS-F5) benötigt sowie, falls aufgeführt, einen Anbausatz (AS). Kabelverlängerungen (KV) sind optional im Katalogteil "Zubehör" erhältlich.

### APS-Z80 analog position sensor

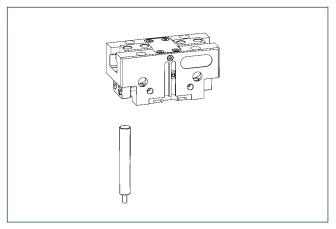


Non-contact measuring, analog multi-position monitoring for any number of positions.

Description	ID	Often combined		
Mounting kit for APS-Z80				
AS-APS-Z80-PGN-plus-P 200-1	1374183			
Analog position sensor				
APS-Z80-K	0302072			
APS-Z80-M8	0302070	•		

When using an APS system, one mounting kit (AS-APS-Z80) and one APS-Z80 sensor is required per gripper. The resolution of the sensor can be lower in the peripheral areas of the gripper. You can find further information on the product in the operating manual.

**SCHUNK** 

## APS-M1 analog position sensor

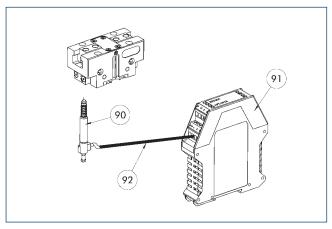

- 90 APS-M1S sensor
- **92** APS-K extension cable
- (91) APS-M1E electronic processor


Analog multi position monitoring for any desired positions

Description	ID
Mounting kit for APS-M1	
AS-APS-M1-PGN-plus-P 200-1	1374166
Analog position sensor	
APS-M1S	0302062
Connection cables	
APS-K0200	0302066
APS-K0700	0302068
Evaluation electronics	
APS-M1E	0302064


When using an APS system, for each gripper an attachment kit (AS-APS-M1), an APS-M1S sensor (incl. 3 m cable) as well as an electronics (APS-M1e) are required. An extension cable (APS-K) can be connected between the sensor and the electronics as an option. The max. cable length between the sensor and the electronics is 10 m, between the electronics and their control unit (PLC) it is max. 1 m.




## Gripping force O.D. gripping

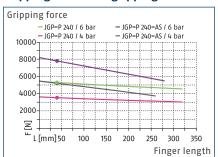

## **Gripping force I.D. gripping**

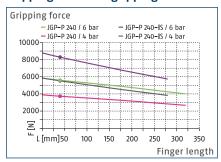

#### **Dimensions and maximum loads**

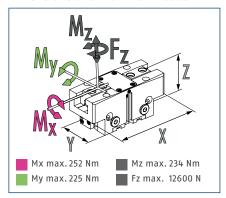


The indicated moments and forces are statical values, apply for each base jaw and may appear simultaneously. Loads may additionally occur to the moment produced by the gripping force itself.

### **Technical data**

Description		JGP-P 240-1	JGP-P 240-1-AS	JGP-P 240-1-IS
ID		1460294	1460296	1460297
Stroke per jaw	[mm]	30	30	30
Closing/opening force	[N]	5300/5600	7800/-	-/8300
Min. spring force	[N]		2500	2700
Weight	[kg]	8.7	11.8	11.5
Recommended workpiece weight	[kg]	26.5	26.5	26.5
Fluid consumption double stroke	[cm³]	900	1300	1400
Min./nom./max. operating pressure	[bar]	2.5/6/8	4/6/6.5	4/6/6.5
Min./max. air purge pressure	[bar]	0.5/1	0.5/1	0.5/1
Closing/opening time	[s]	0.5/0.5	0.45/0.9	0.9/0.45
Closing/opening time with spring	[s]		0.60	0.60
Max. permissible finger length	[mm]	320	280	280
Max. permissible weight per finger	[kg]	8.5	8.5	8.5
IP protection class		40	40	40
Min./max. ambient temperature	[°C]	5/90	5/90	5/90
Repeat accuracy	[mm]	0.01	0.01	0.01
Dimensions X x Y x Z	[mm]	270 x 115 x 107	270 x 115 x 163.5	270 x 115 x 163.5

① It may take a few 100 gripping cycles until the full gripping force (as indicated in the data table) will be available.


#### Main view

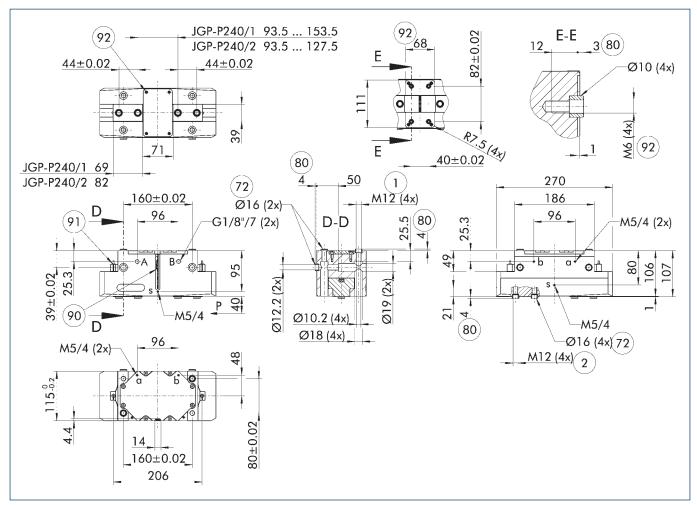


The drawing shows the gripper in the basic version with closed jaws, without dimensional consideration of the options described below.

- As an alternative/in addition to spring-assisted mechanical gripping force maintenance, the SDV-P pressure maintenance valve can be used for I.D. and O.D. gripping (see "Accessories" section of catalog).
- A, a Main / direct connection, gripper opening
- B, b Main / direct connection, gripper closing
- S Air purge connection
- (1) Gripper connection
- (2) Finger connection
- 72) Fit for centering sleeves
- 80 Depth of the centering sleeve hole in the counter part
- 90 Sensor MMS 22..
- (91) Sensor IN ...
- (92) Screw connection with centering for customized mounting (these centering sleeves are not included in the scope of delivery)


### Maximum permitted finger projection

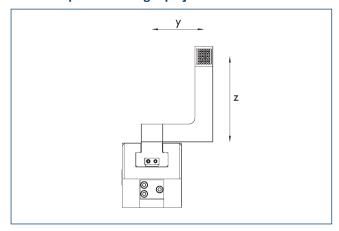

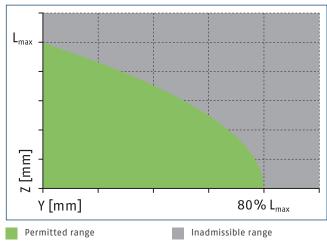


 $L^{\text{max}}$  is equivalent to the maximum permitted finger length, see the technical data table.

### Hose-free direct connection M5

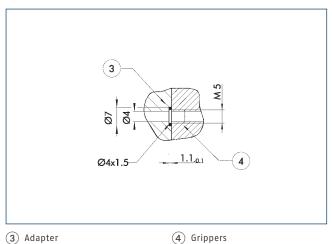


The direct connection is used for supplying compressed air without hoses. Instead, the pressure medium is fed through bore-holes in the mounting plate.

# **Gripping force maintenance version AS/IS**

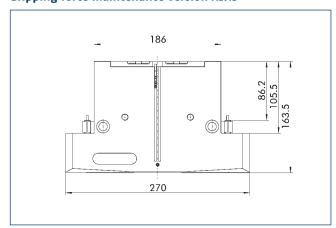

The mechanical gripping force maintenance device ensures that a minimum clamping force will be applied even if there is a drop in pressure. In the AS/S variant this acts as a closing force, in the IS variant as an opening force. Besides this, gripping force maintenance can be used to increase gripping force or for single actuated gripping.

## **Electronic symbol according to DIN ISO 1219**

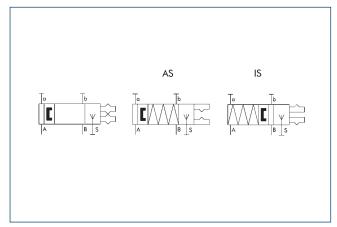


- A, a Main / direct connection, gripper opening
- B, b Main / direct connection, gripper closing
- S Air purge connection

The circuit symbol shows the connection options and the function of the pneumatic gripper. "A" and "B" are the main connections of the gripper for opening and closing. "a" and "b" are optional direct connections for opening and closing without interference–prone hosing. "S" describes the optional air purge connection, which impedes the ingress of dirt into the gripper.

SCHUNK also provides ECAD data for your design. You can choose between direct access via your EPLAN-Electric P8 software or download using the EPLAN Data Portal. Further information can be found on the SCHUNK website.

#### SDV-P pressure maintenance valve

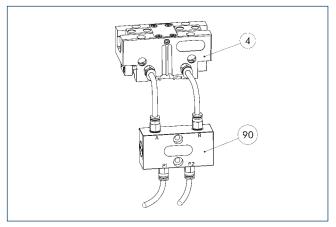

4 Grippers


90 SDV-P pressure maintenance valve

The SDV-P pressure maintenance valve ensures in emergency STOP situations that the pressure in the piston chamber of pneumatic gripper, swivel, linear, and quick-change modules is temporarily maintained.

Description	ID	Recommended hose diameter		
		[mm]		
Pressure maintenance valve				
SDV-P 07	0403131	8		
Pressure maintenance valve with air bleed screw				
SDV-P 07-E	0300121	8		
SDV-P 10-E	0300109	10		

① In order to achieve the specified closing and opening time for each gripper variant, the recommended hose diameter must be used. The direct allocation of the respective variant of the gripper for the respective SDV-P can be found at schunk.com.

## BSWS jaw quick-change jaw systems

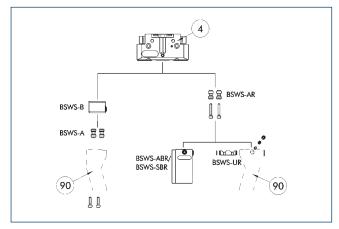

(4) Grippers

90 Customized gripper fingers

There are various jaw quick-change systems available for the gripper. For detailed information, please refer to the corresponding product.

Description	ID	Scope of delivery	
Quick-change jaw s	ystem base		
BSWS-B 240	0303035	1	
Jaw quick-change system adapter pin			
BSWS-A 240	0303034	2	


① If the operating pressure is higher than 6 bar, suitability for use beyond the application limits must be checked. Only systems that are listed in the table, can be used.

#### Fields of application

Series	Size	Variant	Suitability		
JGP-P	240	-1 (6 bar)			
JGP-P	240	-1-AS/1-IS (6 bar)			
JGP-P	240	-2 (6 bar)			
JGP-P	240	-2-AS/2-IS (6 bar)			
Legend					
	Can be combined without restrictions				
	Use with restrictions (see loading limits)				
0000	cannot be combined				

The load limits for describing the application limits can be found in the catalog chapter of the corresponding accessories.

#### ZBA-L-plus 240 intermediate jaws

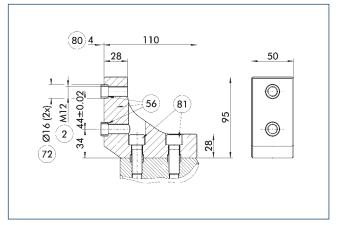


- 2 Finger connection
- (56) Included in the scope of delivery
- (72) Fit for centering sleeves
- 80 Depth of the centering sleeve hole in the counter part
- (81) Not included in the scope of delivery

The optional ZBA-L-plus intermediate jaws allow the screw connection diagram of the top jaws to be rotated by 90°. This makes it easier to design and produce top jaws (particularly for long versions) because no deep through-bores are required.

Description	ID	Material	Finger interface	Scope of delivery
Intermediate jaw				
ZBA-L-plus 240	0311782	Aluminum	PGN-plus	1

## Finger blanks ABR/SBR-PGZN-plus 240

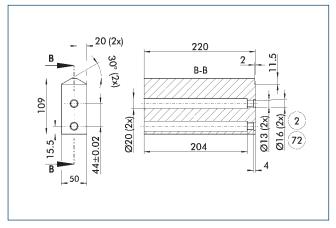


2 Finger connection

72 Fit for centering sleeves

The drawing shows the finger blank which can be reworked by the customer.  $% \label{eq:customer} % \label{eq:customer}$ 

Description	ID	Material	Scope of delivery
Finger blank			
ABR-PGZN-plus 240	0300017	Aluminum (3.4365)	1
SBR-PGZN-plus 240	0300027	Steel (1.7131)	1

## Tolerance compensation unit TCU

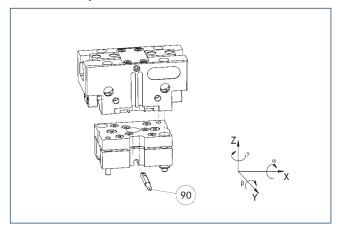


90 Monitoring of locking

Grippers can be directly mounted without an adapter plate. Tolerance compensation unit and gripper have an identical screw connection diagram. Therefore the tolerance compensation units can be assembled later. Please consider the additional assembly height of the tolerance compensation unit. For details please refer to our catalog robot accessories.

Description	ID	Locking	Deflection	Often combined
Compensation unit				
TCU-P-240-3-MV	0324730	yes	±1°/±1,5°/±1°	•
TCU-P-240-3-0V	0324731	no	±1°/±1,5°/±1°	

## **Modular Assembly Automation**

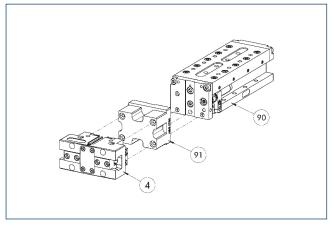


(4) Grippers

(91) ASG adapter plate

© Linear module CLM/KLM/LM/ELP/ ELM/ELS/HLM

Grippers and linear modules can be combined with standard adapter plates from the modular assembly system. For more information see our main catalog "Modular Assembly Automation".

# **Inductive proximity switches**

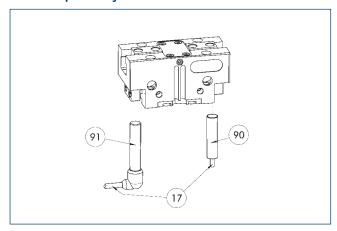


- 17) Cable outlet
- 91) Sensor IN..-SA
- 90 Sensor IN ...

Description	ID	Often combined				
Inductive proximity switches	Inductive proximity switches					
IN 80-S-M12	0301578					
IN 80-S-M8	0301478	•				
INK 80-S	0301550					
Inductive proximity switch with la	teral cable ou	tlet				
IN 80-S-M12-SA	0301587					
IN 80-S-M8-SA	0301483	•				
INK 80-S-SA	0301566					
Connection cables						
KA BG08-L 3P-0300-PNP	0301622	•				
KA BG08-L 3P-0500-PNP	0301623					
KA BG12-L 3P-0500-PNP	30016369					
KA BW08-L 3P-0300-PNP	0301594					
KA BW08-L 3P-0500-PNP	0301502					
KA BW12-L 3P-0300-PNP	0301503					
KA BW12-L 3P-0500-PNP	0301507					
Clip for connector/socket						
CLI-M12	0301464					
CLI-M8	0301463					
Cable extension						
KV BG12-SG12 3P-0030-PNP	0301999					
KV BG12-SG12 3P-0060-PNP	0301998					
KV BW08-SG08 3P-0030-PNP	0301495					
KV BW08-SG08 3P-0100-PNP	0301496					
KV BW08-SG08 3P-0200-PNP	0301497	•				
KV BW12-SG12 3P-0030-PNP	0301595					
KV BW12-SG12 3P-0100-PNP	0301596					
KV BW12-SG12 3P-0200-PNP	0301597					
Sensor distributor	Sensor distributor					
V2-M12	0301776	•				
V2-M8	0301775	•				
V4-M8	0301746					
V8-M8	0301751					

Two sensors are required per unit for monitoring two positions. On option, extension cables and sensor distributors are available. Additional product variants of the sensor, and further information and technical data can be found in the catalog chapter sensor system.

### Flexible position sensor

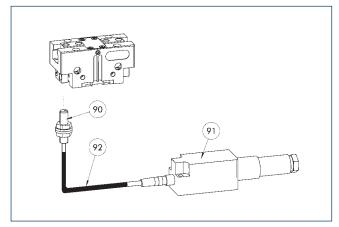


- 90 FPS-S sensor
- 92 Cable extension
- (91) FPS-F5 evaluation electronic

Flexible position monitoring of up to five positions.

Description	ID		
Attachment kit for FPS			
AS-FPS-PGN-plus-P 240-1	1388834		
Sensor			
FPS-S M8	0301704		
Evaluation electronics			
FPS-F5	0301805		
Cable extension			
KV BG08-SG08 3P-0050	0301598		
KV BG08-SG08 3P-0100	0301599		

When using an FPS system, an FPS sensor (FPS-S) as well as an electronic processor (FPS-F5 / F5 T) are required for each gripper as well as a mounting kit (AS), if listed. Cable extensions (KV) are optionally available – see catalog chapter "Accessories."

### **Electronic magnetic switch MMS**

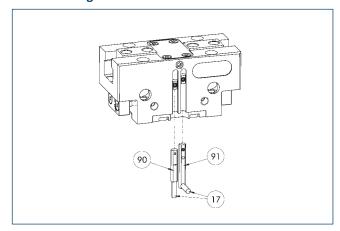


- 17 Cable outlet
- 91) Sensor MMS 22...-SA
- 90 Sensor MMS 22...

End position monitoring for mounting in the C-slot.

Description         ID           Electronic magnetic switch           MMS 22-S-M8-PNP         0301032           MMSK 22-S-PNP         0301034           Electronic magnetic switches with lateral cable of MMS 22-S-M8-PNP-SA         0301042           MMSK 22-S-PNP-SA         0301044           Connection cables         KA BG08-L 3P-0300-PNP         0301622           KA BG08-L 3P-0500-PNP         0301523           KA BW08-L 3P-0500-PNP         0301594           KA BW08-L 3P-0500-PNP         0301502	•
MMSK 22-S-PNP       0301034         Electronic magnetic switches with lateral cable of MMS 22-S-M8-PNP-SA       0301042         MMSK 22-S-PNP-SA       0301044         Connection cables       KA BG08-L 3P-0300-PNP       0301622         KA BG08-L 3P-0500-PNP       0301623         KA BW08-L 3P-0300-PNP       0301594	•
Electronic magnetic switches with lateral cable of MMS 22-S-M8-PNP-SA 0301042 MMSK 22-S-PNP-SA 0301044 Connection cables  KA BG08-L 3P-0300-PNP 0301622  KA BG08-L 3P-0500-PNP 0301623  KA BW08-L 3P-0300-PNP 0301594	_
MMS 22-S-M8-PNP-SA 0301042  MMSK 22-S-PNP-SA 0301044  Connection cables  KA BG08-L 3P-0300-PNP 0301622  KA BG08-L 3P-0500-PNP 0301623  KA BW08-L 3P-0300-PNP 0301594	
MMSK 22-S-PNP-SA 0301044  Connection cables  KA BG08-L 3P-0300-PNP 0301622  KA BG08-L 3P-0500-PNP 0301623  KA BW08-L 3P-0300-PNP 0301594	outlet
Connection cables         KA BG08-L 3P-0300-PNP       0301622         KA BG08-L 3P-0500-PNP       0301623         KA BW08-L 3P-0300-PNP       0301594	•
KA BG08-L 3P-0300-PNP 0301622 KA BG08-L 3P-0500-PNP 0301623 KA BW08-L 3P-0300-PNP 0301594	
KA BG08-L 3P-0500-PNP 0301623 KA BW08-L 3P-0300-PNP 0301594	
KA BW08-L 3P-0300-PNP 0301594	•
KA BW08-L 3P-0500-PNP 0301502	
Clip for connector/socket	
CLI-M8 0301463	
Cable extension	
KV BW08-SG08 3P-0030-PNP 0301495	
KV BW08-SG08 3P-0100-PNP 0301496	
KV BW08-SG08 3P-0200-PNP 0301497	•
Sensor distributor	
V2-M8 0301775	•
V4-M8 0301746	
V8-M8 0301751	

Two sensors are required per unit for monitoring two positions. On option, extension cables and sensor distributors are available. Additional product variants of the sensor, and further information and technical data can be found in the catalog chapter sensor system.

### Programmable magnetic switch MMS 22-PI1

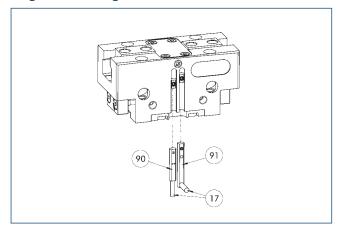


- (17) Cable outlet
- **91** Sensor MMS 22 ..-PI1-...-SA
- 90 Sensor MMS 22 PI1-...

Position monitoring with one programmable position per sensor and integrated electronic system in the sensor. Can be programmed using MT magnetic teaching tool (included in the scope of delivery, ID 0301030) or ST plug teaching tool (optional). End position monitoring for mounting in the C-slot. If the ST plug teaching tools are listed in the table provided, teaching is only possible with the ST teaching tools.

Description	ID	Often combined		
Programmable magnetic switch				
MMS 22-PI1-S-M8-PNP	0301160	•		
MMSK 22-PI1-S-PNP	0301162			
Programmable magnetic switch with lateral cable outlet				
MMS 22-PI1-S-M8-PNP-SA	0301166	•		
MMSK 22-PI1-S-PNP-SA	0301168			
Programmable magnetic switch with stainless steel housing				
MMS 22-PI1-S-M8-PNP-HD	0301110	•		
MMSK 22-PI1-S-PNP-HD	0301112			

Two sensors are required per unit for monitoring two positions. On option, extension cables and sensor distributors are available. Additional product variants of the sensor, and further information and technical data can be found in the catalog chapter sensor system.

### APS-Z80 analog position sensor

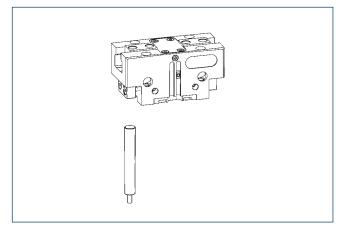


Non-contact measuring, analog multi-position monitoring for any number of positions.

Description	ID	Often combined
Mounting kit for APS-Z80		
AS-APS-Z80-PGN-plus-P 240-1	1374185	
Analog position sensor		
APS-Z80-K	0302072	
APS-Z80-M8	0302070	•

When using an APS system, one mounting kit (AS-APS-Z80) and one APS-Z80 sensor is required per gripper. The resolution of the sensor can be lower in the peripheral areas of the gripper. You can find further information on the product in the operating manual.

## APS-M1 analog position sensor

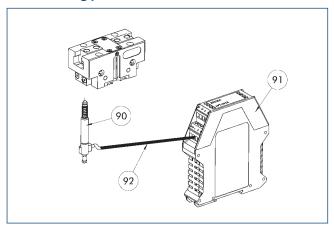


- 90 APS-M1S sensor
- **92** APS-K extension cable
- (91) APS-M1E electronic processor


Analog multi position monitoring for any desired positions

Description	ID
Mounting kit for APS-M1	
AS-APS-M1-PGN-plus-P 240-1	1374178
Analog position sensor	
APS-M1S	0302062
Connection cables	
APS-K0200	0302066
APS-K0700	0302068
Evaluation electronics	
APS-M1E	0302064


When using an APS system, for each gripper an attachment kit (AS-APS-M1), an APS-M1S sensor (incl. 3 m cable) as well as an electronics (APS-M1e) are required. An extension cable (APS-K) can be connected between the sensor and the electronics as an option. The max. cable length between the sensor and the electronics is 10 m, between the electronics and their control unit (PLC) it is max. 1 m.

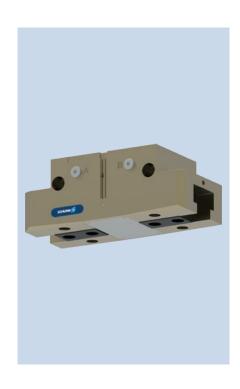


## Gripping force O.D. gripping

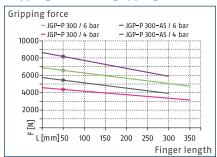

## **Gripping force I.D. gripping**

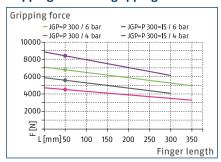

#### **Dimensions and maximum loads**

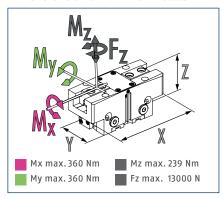


The indicated moments and forces are statical values, apply for each base jaw and may appear simultaneously. Loads may additionally occur to the moment produced by the gripping force itself.

### **Technical data**

Description		JGP-P 300-1	JGP-P 300-1-AS	JGP-P 300-1-IS
ID		1460298	1460299	1460300
Stroke per jaw	[mm]	35	35	35
Closing/opening force	[N]	6600/6800	8200/-	-/8400
Min. spring force	[N]		1600	1600
Weight	[kg]	13.7	17.2	17.2
Recommended workpiece weight	[kg]	33	33	33
Fluid consumption double stroke	[cm³]	1040	1295	1560
Min./nom./max. operating pressure	[bar]	2.5/6/8	4/6/6.5	4/6/6.5
Min./max. air purge pressure	[bar]	0.5/1	0.5/1	0.5/1
Closing/opening time	[s]	0.5/0.5	0.4/0.7	0.7/0.4
Closing/opening time with spring	[s]		0.60	0.60
Max. permissible finger length	[mm]	350	300	300
Max. permissible weight per finger	[kg]	11.5	11.5	11.5
IP protection class		40	40	40
Min./max. ambient temperature	[°C]	5/90	5/90	5/90
Repeat accuracy	[mm]	0.05	0.05	0.05
Dimensions X x Y x Z	[mm]	320 x 140 x 122	320 x 140 x 172	320 x 140 x 172

① It may take a few 100 gripping cycles until the full gripping force (as indicated in the data table) will be available.


#### Main view

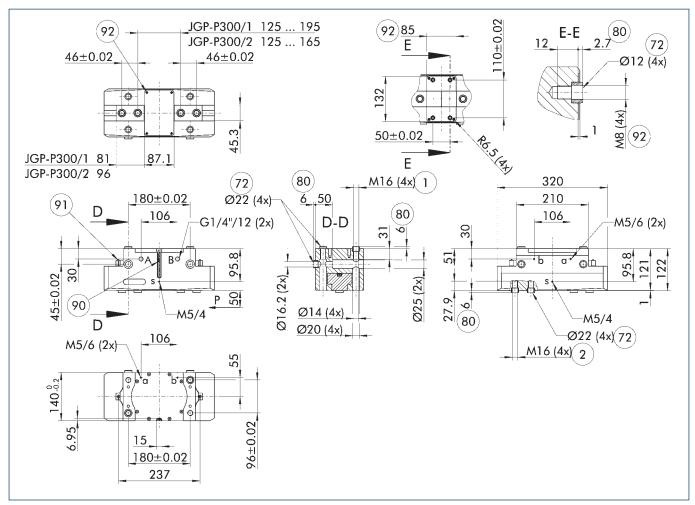


The drawing shows the gripper in the basic version with closed jaws, without dimensional consideration of the options described below.

- As an alternative/in addition to spring-assisted mechanical gripping force maintenance, the SDV-P pressure maintenance valve can be used for I.D. and O.D. gripping (see "Accessories" section of catalog).
- A, a Main / direct connection, gripper opening
- B, b Main / direct connection, gripper closing
- S Air purge connection
- (1) Gripper connection
- (2) Finger connection
- (72) Fit for centering sleeves
- 80 Depth of the centering sleeve hole in the counter part
- 90 Sensor MMS 22..
- (91) Sensor IN ...
- (92) Screw connection with centering for customized mounting (these centering sleeves are not included in the scope of delivery)


## Maximum permitted finger projection

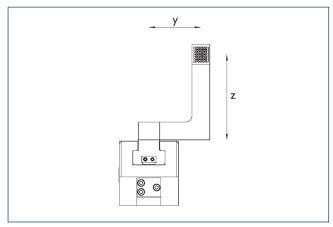

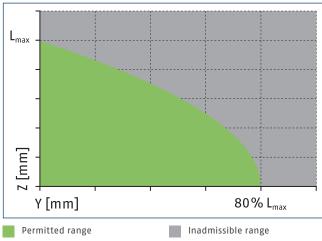


 $\mathsf{L}^{\mathsf{max}}$  is equivalent to the maximum permitted finger length, see the technical data table.

### Hose-free direct connection M5

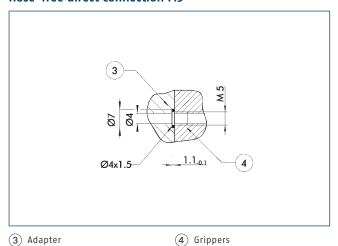


The direct connection is used for supplying compressed air without hoses. Instead, the pressure medium is fed through bore-holes in the mounting plate.

## **Gripping force maintenance version AS/IS**

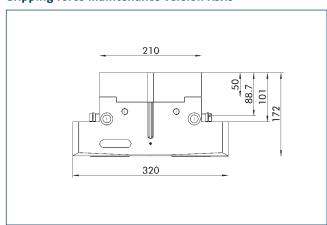

The mechanical gripping force maintenance device ensures that a minimum clamping force will be applied even if there is a drop in pressure. In the AS/S variant this acts as a closing force, in the IS variant as an opening force. Besides this, gripping force maintenance can be used to increase gripping force or for single actuated gripping.

## **Electronic symbol according to DIN ISO 1219**

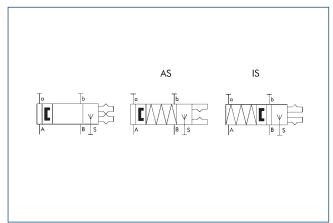


- A, a Main / direct connection, gripper opening
- B, b Main / direct connection, gripper closing
- S Air purge connection

The circuit symbol shows the connection options and the function of the pneumatic gripper. "A" and "B" are the main connections of the gripper for opening and closing. "a" and "b" are optional direct connections for opening and closing without interference–prone hosing. "S" describes the optional air purge connection, which impedes the ingress of dirt into the gripper.

SCHUNK also provides ECAD data for your design. You can choose between direct access via your EPLAN-Electric P8 software or download using the EPLAN Data Portal. Further information can be found on the SCHUNK website.

#### SDV-P pressure maintenance valve

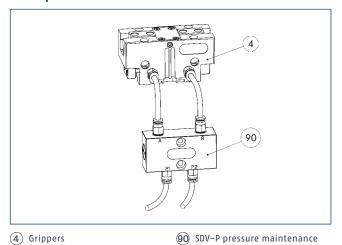


The SDV-P pressure maintenance valve ensures in emergency STOP situations that the pressure in the piston chamber of pneumatic gripper, swivel, linear, and quick-change modules is temporarily maintained.

Description	ID	Recommended hose diameter
		[mm]
Pressure maintenand	e valve	
SDV-P 07	0403131	8
Pressure maintenance valve with air bleed screw		
SDV-P 07-E	0300121	8
SDV-P 10-E	0300109	10

① In order to achieve the specified closing and opening time for each gripper variant, the recommended hose diameter must be used. The direct allocation of the respective variant of the gripper for the respective SDV-P can be found at schunk.com.

### BSWS jaw quick-change jaw systems

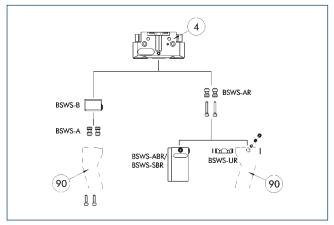

4 Grippers

**90** Customized gripper fingers

There are various jaw quick-change systems available for the gripper. For detailed information, please refer to the corresponding product.

Description	ID	Scope of delivery
Quick-change jaw sy	stem base	
BSWS-B 300	0303037	1
Jaw quick-change system adapter pin		
BSWS-A 300	0303036	2


① If the operating pressure is higher than 6 bar, suitability for use beyond the application limits must be checked. Only systems that are listed in the table, can be used.

#### Fields of application

Series	Size	Variant	Suitability
JGP-P	300	-1 (6 bar)	
JGP-P	300	-1-AS/1-IS (6 bar)	
JGP-P	300	-2 (6 bar)	
JGP-P	300	-2-AS/2-IS (6 bar)	
Legend			
	Can be combined without restrictions		
	Use with restrictions (see loading limits)		
0000	cannot be combined		

The load limits for describing the application limits can be found in the catalog chapter of the corresponding accessories.

### Finger blanks ABR/SBR-PGZN-plus 300

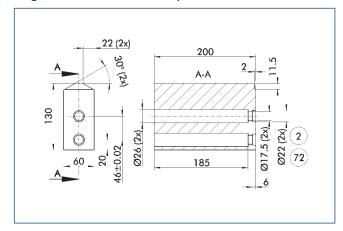


2 Finger connection

72 Fit for centering sleeves

The drawing shows the finger blank which can be reworked by the customer.

Description	ID	Material	Scope of delivery
Finger blank			
ABR-PGZN-plus 300	0300016	Aluminum (3.4365)	1
SBR-PGZN-plus 300	0300026	Steel (1.7131)	1

## **Modular Assembly Automation**

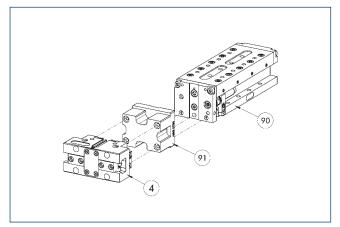


4 Grippers

91) ASG adapter plate

90 Linear module CLM/KLM/LM/ELP/ ELM/ELS/HLM

Grippers and linear modules can be combined with standard adapter plates from the modular assembly system. For more information see our main catalog "Modular Assembly Automation".

# Inductive proximity switches

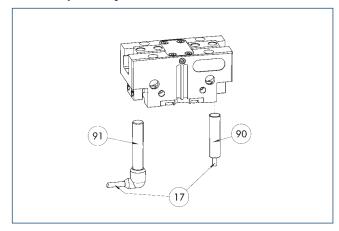

17) Cable outlet


91) Sensor IN..-SA

90	Sensor	IN	

Description	ID	Often combined
Inductive proximity switches		
IN 80-S-M12	0301578	
IN 80-S-M8	0301478	•
INK 80-S	0301550	
Inductive proximity switch with la	teral cable ou	tlet
IN 80-S-M12-SA	0301587	
IN 80-S-M8-SA	0301483	•
INK 80-S-SA	0301566	
Connection cables		
KA BG08-L 3P-0300-PNP	0301622	•
KA BG08-L 3P-0500-PNP	0301623	
KA BG12-L 3P-0500-PNP	30016369	
KA BW08-L 3P-0300-PNP	0301594	
KA BW08-L 3P-0500-PNP	0301502	
KA BW12-L 3P-0300-PNP	0301503	
KA BW12-L 3P-0500-PNP	0301507	
Clip for connector/socket		
CLI-M12	0301464	
CLI-M8	0301463	
Cable extension		
KV BG12-SG12 3P-0030-PNP	0301999	
KV BG12-SG12 3P-0060-PNP	0301998	
KV BW08-SG08 3P-0030-PNP	0301495	
KV BW08-SG08 3P-0100-PNP	0301496	
KV BW08-SG08 3P-0200-PNP	0301497	•
KV BW12-SG12 3P-0030-PNP	0301595	
KV BW12-SG12 3P-0100-PNP	0301596	
KV BW12-SG12 3P-0200-PNP	0301597	
Sensor distributor		
V2-M12	0301776	•
V2-M8	0301775	•
V4-M8	0301746	
V8-M8	0301751	

Two sensors are required per unit for monitoring two positions. On option, extension cables and sensor distributors are available. Additional product variants of the sensor, and further information and technical data can be found in the catalog chapter sensor system.

## **Electronic magnetic switch MMS**

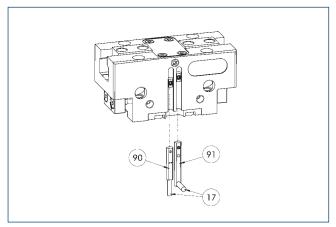


- (17) Cable outlet
- 91) Sensor MMS 22...-SA
- 90 Sensor MMS 22..

End position monitoring for mounting in the C-slot.

Description	ID	Often combined
Electronic magnetic switch		
MMS 22-S-M8-PNP	0301032	•
MMSK 22-S-PNP	0301034	
Electronic magnetic switches with	lateral cable o	outlet
MMS 22-S-M8-PNP-SA	0301042	•
MMSK 22-S-PNP-SA	0301044	
Connection cables		
KA BG08-L 3P-0300-PNP	0301622	•
KA BG08-L 3P-0500-PNP	0301623	
KA BW08-L 3P-0300-PNP	0301594	
KA BW08-L 3P-0500-PNP	0301502	
Clip for connector/socket		
CLI-M8	0301463	
Cable extension		
KV BW08-SG08 3P-0030-PNP	0301495	
KV BW08-SG08 3P-0100-PNP	0301496	
KV BW08-SG08 3P-0200-PNP	0301497	•
Sensor distributor		
V2-M8	0301775	•
V4-M8	0301746	
V8-M8	0301751	

Two sensors are required per unit for monitoring two positions. On option, extension cables and sensor distributors are available.
Additional product variants of the sensor, and further information and technical data can be found in the catalog chapter sensor system.

### Programmable magnetic switch MMS 22-PI1

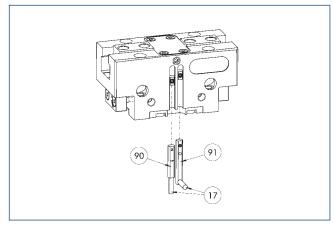


- (17) Cable outlet
- **91**) Sensor MMS 22 ..-PI1-...-SA
- 90 Sensor MMS 22 PI1-...

Position monitoring with one programmable position per sensor and integrated electronic system in the sensor. Can be programmed using MT magnetic teaching tool (included in the scope of delivery, ID 0301030) or ST plug teaching tool (optional). End position monitoring for mounting in the C-slot. If the ST plug teaching tools are listed in the table provided, teaching is only possible with the ST teaching tools.

		· ·
Description	ID	Often combined
Programmable magnetic switch		
MMS 22-PI1-S-M8-PNP	0301160	•
MMSK 22-PI1-S-PNP	0301162	
Programmable magnetic switch	with lateral o	able outlet
MMS 22-PI1-S-M8-PNP-SA	0301166	•
MMSK 22-PI1-S-PNP-SA	0301168	
Programmable magnetic switch	with stainles	s steel housing
MMS 22-PI1-S-M8-PNP-HD	0301110	•
MMSK 22-PI1-S-PNP-HD	0301112	

Two sensors are required per unit for monitoring two positions. On option, extension cables and sensor distributors are available. Additional product variants of the sensor, and further information and technical data can be found in the catalog chapter sensor system.

## APS-Z80 analog position sensor

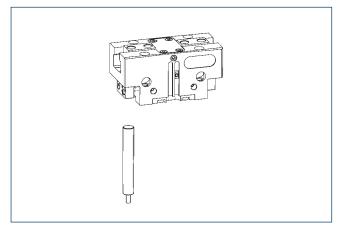


Non-contact measuring, analog multi-position monitoring for any number of positions.

Description	ID	Often combined
Mounting kit for APS-Z80		
AS-APS-Z80-PGN-plus-P 300-1	1395892	
Analog position sensor		
APS-Z80-K	0302072	
APS-Z80-M8	0302070	•

When using an APS system, one mounting kit (AS-APS-Z80) and one APS-Z80 sensor is required per gripper. The resolution of the sensor can be lower in the peripheral areas of the gripper. You can find further information on the product in the operating manual.

### APS-M1 analog position sensor

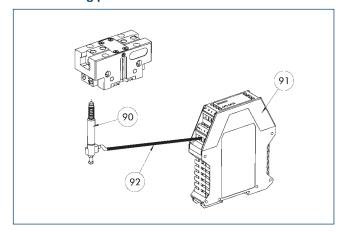

- 90 APS-M1S sensor
- **92** APS-K extension cable
- (91) APS-M1E electronic processor

Analog multi position monitoring for any desired positions

Description	ID
Mounting kit for APS-M1	
AS-APS-M1-PGN-plus-P 300-1	1395905
Analog position sensor	
APS-M1S	0302062
Connection cables	
APS-K0200	0302066
APS-K0700	0302068
Evaluation electronics	
APS-M1E	0302064

(i) When using an APS system, for each gripper an attachment kit (AS-APS-M1), an APS-M1S sensor (incl. 3 m cable) as well as an electronics (APS-M1e) are required. An extension cable (APS-K) can be connected between the sensor and the electronics as an option. The max. cable length between the sensor and the electronics is 10 m, between the electronics and their control unit (PLC) it is max. 1 m.



SCHUNK GmbH & Co. KG Spann- und Greiftechnik

Bahnhofstr. 106 - 134 D-74348 Lauffen/Neckar Tel. +49-7133-103-0 Fax +49-7133-103-2399 info@de.schunk.com schunk.com

Folgen Sie uns | Follow us









