

# Parker Bestobell Cryogenic Valves

Low Temperature Valves for Storage, Transportation and Production of Industrial Gas and LNG



ENGINEERING YOUR SUCCESS.

# Contents

Introduction .....	5
General Technical Information .....	6
Design .....	6
Construction Materials .....	6
Connections .....	7
Features .....	8
Oxygen Cleaning .....	9
Cryogenic Testing .....	9
Cryogenic Product Range .....	10
Globe Valves .....	12
Overview .....	12
Technical Information .....	14
Ordering Information .....	15
Manual Globe Valves - Bronze - CNB Series.....	15
Manual Globe Valves - Full Stainless Steel - CNS Series .....	16
Manual Globe Valves - Stainless Steel with Bronze Internals - CNT Series.....	17
Tyre Actuated Globe Valves - Stainless Steel with Bronze Internals - CNT*TA Series.....	19
Gate Valves .....	20
Overview .....	20
Technical Information .....	22
Ordering Information .....	23
Manual and Tyre Actuated Gate Valves - Stainless Steel with Bronze Internals - CMC/CMD Series .....	23
Fill Manifold Assemblies .....	24
Overview .....	24
Technical Information .....	26
Ordering Information .....	27
Fill Manifold Assemblies - Bronze - CTB Series.....	27
Ball Valves .....	28
Overview .....	28
Technical Information .....	30
Ordering Information .....	31
Manual and Actuated Ball Valves - Bronze and Full Stainless Steel - CZF Series .....	31
Check Valves.....	32
Overview .....	32
Technical Information .....	34
Ordering Information .....	35
Lift Check Valves - Bronze - CGB Series.....	35
Lift Check Valves - Stainless Steel with Bronze Internals - CGT Series .....	36
Swing Check Valves - Full Stainless Steel - CHC Series .....	37
Strainers .....	38
Overview .....	38
Technical Information .....	39
Ordering Information .....	40
Strainers - Bronze - CSB Series .....	40
Strainers - Full Stainless Steel - CSS Series .....	41
Safety Relief Valves .....	42
Overview .....	42
Technical Information .....	43
Ordering Information .....	44
Safety Relief Valves - Orifice Diameter 11.4 mm - CWF20/CWL20/CWT20 Series .....	44
Safety Relief Valves - Orifice Diameter 14.0 mm - CWF30/CWT30 Series .....	45
Safety Relief Valves - Orifice Diameter 20.5 mm - CWF40/CWT40 Series .....	45
Thermal Relief Valves .....	46
Overview .....	46
Technical Information .....	48
Ordering Information .....	49
Thermal Relief Valves - Bronze and Full Stainless Steel - CVF/CYF Series .....	49
Pressure Regulators .....	50
Overview .....	50
Technical Information .....	53
Ordering Information .....	55
Pressure Regulators - Bronze - CK Series.....	55
Spares Kits .....	56
Globe Valves .....	56
Gate Valves .....	58
Fill Manifold Assemblies .....	60
Ball Valves .....	61
Check Valves.....	62
Strainers.....	63
Pressure Regulators .....	64

# Introduction

Parker Bestobell is one of the world's experts in designing and manufacturing reliable, high-performance cryogenic valves for the transportation, storage, and processing of ultra-low temperature liquefied gases.

The company has provided cryogenic industrial gas flow control solutions for over 150 years, serving major gas companies and Original Equipment Manufacturers (OEM) worldwide.

The range has been designed to meet industry requirements to withstand temperature changes, possible expansion, and contraction movements generated, avoiding deformation of its mounting. It covers all the pressure

requirements for ASME B31.3 & BS EN 1626 Cryogenic Standards up to class 300. The bore sizes start at DN6 (1/4") and are offered in increments up to DN150 (6"). Many of the valves were designed to meet specific customer needs. Parker's primary philosophy is to build reliable, efficient, cost-effective cryogenic equipment for the intended application.

Continuous product development may, from time to time, necessitate changes in the details contained in this catalog. Parker reserves the right to make such changes at their discretion and without prior notice. All dimensions shown in this catalog are approximate and subject to change.

Every effort is made to provide sufficient, clear, and accurate information to allow the correct selection of products from this catalog. Still, ultimately it is the system designer's or user's responsibility to ensure the selected product is suitable for the intended application. Should you require further information, please do not hesitate to contact your local Parker support.

With thousands of distributor outlets, stores worldwide, and hundreds of Parker personnel and locations, Parker also offers the superior advantage of supply and support in your locale.



Gas Manufacture



Transportation




Static Storage

## Parker EHS Vision Statement:


Parker recognizes, and believes, in the importance of safeguarding natural resources and the global environment. We are committed to our employees, our communities, and our customers: their health, safety and understanding of the need for environmental stewardship.

We are committed to the concept of continuous improvement in environmental performance. Accordingly, we are committed to the following principles:

- We will seek to comply with environmental, health, and safety laws worldwide.
- We strive to minimize or eliminate the generation of waste.
- We will monitor compliance with environmental, health and safety regulations.

**WARNING**

The products described in this catalog can expose you to chemicals, including Lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to [www.p65warnings.ca.gov](http://www.p65warnings.ca.gov).

**WARNING**

The products described in this catalog can expose you to chemicals, including Lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to [www.p65warnings.ca.gov](http://www.p65warnings.ca.gov).

# General Technical Information

## Design

Designed and engineered for use with Group 1 gases.  
Full material traceability backed by BS EN 10204 3.1/3.2 certification.  
CE-marked according to the Pressure Equipment Directive (PED) - up to DN100 (4").  
UKCA-marked according to the Pressure Equipment Safety Regulations (PESR) - up to DN100 (4").

Code/Specification	Description
ASME B16.34	Valves Flanged, Threaded, and Welding End
ASME B16.5	Pipe Flanges & Flanged Fittings
ASME B31.3	Process Piping
BS EN 13648	Cryogenic vessels. Safety devices for protection against excessive pressure
BS EN 12266	Industrial valves. Testing of metallic valves. Pressure tests, test procedures and acceptance criteria
BS EN 1626	Cryogenic vessels. Valves for cryogenic service
BS EN 10204	Metallic Products: Types of Inspection Documents
ISO 21011	Cryogenic vessels: Valves for cryogenic service
ISO 4126-1	Safety devices for protection against excessive pressure
ISO23208	Cleanliness for cryogenic service
A. D. Merkblatt A2	Pressure Vessel Equipment safety devices against excess pressure - safety valves


## Construction Materials

All materials are purchased from long-standing reputable sources, conforming to not only recognized national/international standards but also to additional requirements imposed by Parker to assure suitability/usability across the widest spectrum of user applications. A range of techniques and processes, including PMI (Positive Material Identification), is used to validate all incoming material supplies, segregation, storage, and maintenance of product quality.

### Body material options

Material Group	Material Designator	UNS No.	ASTM Material Grade
Austenitic Stainless Steel	316	S31600	A479 Gr 316
Austenitic Stainless Steel	316L	S31603	A479 Gr 316L
Austenitic Stainless Steel	304	S30400	A276 Gr 304
Austenitic Stainless Steel	304L	N/A	N/A
High Tensile Brass	CW721R	C67500	N/A
Phosphor Bronze	CW451K	C51000	N/A
Gunmetal	CC491K	C83600	B62
Naval Brass	CW712R	C46400	B21

All materials will meet (as applicable) the requirements of NACE MR0103/MR0175 and ISO 15156. They are further supplied as per NORSOK M650/M630 as required.

**WARNING**

The products described in this catalog can expose you to chemicals, including Lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to [www.p65warnings.ca.gov](http://www.p65warnings.ca.gov).

## Connections

### Threaded Connections

Thread Type	Standard
NPT/National Pipe Taper	ANSI B1.20.1
BSP/ISO Taper	BS21, ISO7/1
BSP/ISO Parallel	BS2779, ISO 228/1+2, DIN 3852 FORM A(2)
M = Metric Thread	BS2779, ISO 228/1+2, DIN 3852

### Flange Connections

#### Pressure-temperature ratings for flanges ASME/ANSI B16.5

Parker Bestobell cryogenic flanged valves carry the pressure-temperature ratings of their flange end interface according to ASME B16.5 dimensional specifications and pressure ratings.

Flange Material	°C	-29	38	50	100
	°F	-20	100	122	212
	Working Pressure - PSI (bar)				
Class 150					
A351 Gr. CF8M		275 (19.0)	275 (19.0)	267 (18.4)	235 (16.2)
Class 300					
A351 Gr. CF8M		719 (49.6)	719 (49.6)	697 (48.1)	612 (42.2)


### Welded Connections

#### Butt Weld:

DN6-DN100 Butt Weld end connections are to ASME/ANSI B16.25. Standard is Schedule 10; other schedules are available on request.

#### Socket Weld:

Socket Weld end connections are to ASME B16.11; others might be available on request. Contact your local Parker representative.

**WARNING**

The products described in this catalog can expose you to chemicals, including Lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to [www.p65warnings.ca.gov](http://www.p65warnings.ca.gov).



# General Technical Information

## Features

### Spring-loaded stem packing

Parker Bestobell valves feature a spring-loaded PTFE chevron seal with a high level of thermal expansion, which is not as elastic as an elastomer. The springs in the chevron seal maintain a constant load on the gland over time, reducing the frequency of a manual adjustment.

### Bolted bonnet


- Unique Parker Bestobell loose flange bolted bonnet design allows for thermal expansion and contraction and eliminates leakage at the bonnet gasket.
- Stainless Steel cover screwed and welded to the tube extension ensures alignment and joint integrity.
- Bearing material insert prevents galling and reduces friction between the stem and bush.
- Bolted bonnet enables rapid and efficient mounting and servicing of trailers, cold boxes, vessels etc. without the difficulties usually encountered when working in enclosed environments.

### Anti-blowout stem design

Parker Bestobell valves have been designed with an anti-blowout stem to prevent the stem being pushed out by internal valve pressure during maintenance of the packing.

This has been achieved by machining a collar on the stem, which is of a larger diameter than the stem itself. The collar is kept in place by the shoulder of the valve cover.

Additionally, a machined flat on the blowout-proof collar prevents liquid from being trapped in the headwork which could lead to a rapid build-up of pressure as liquid warms up.

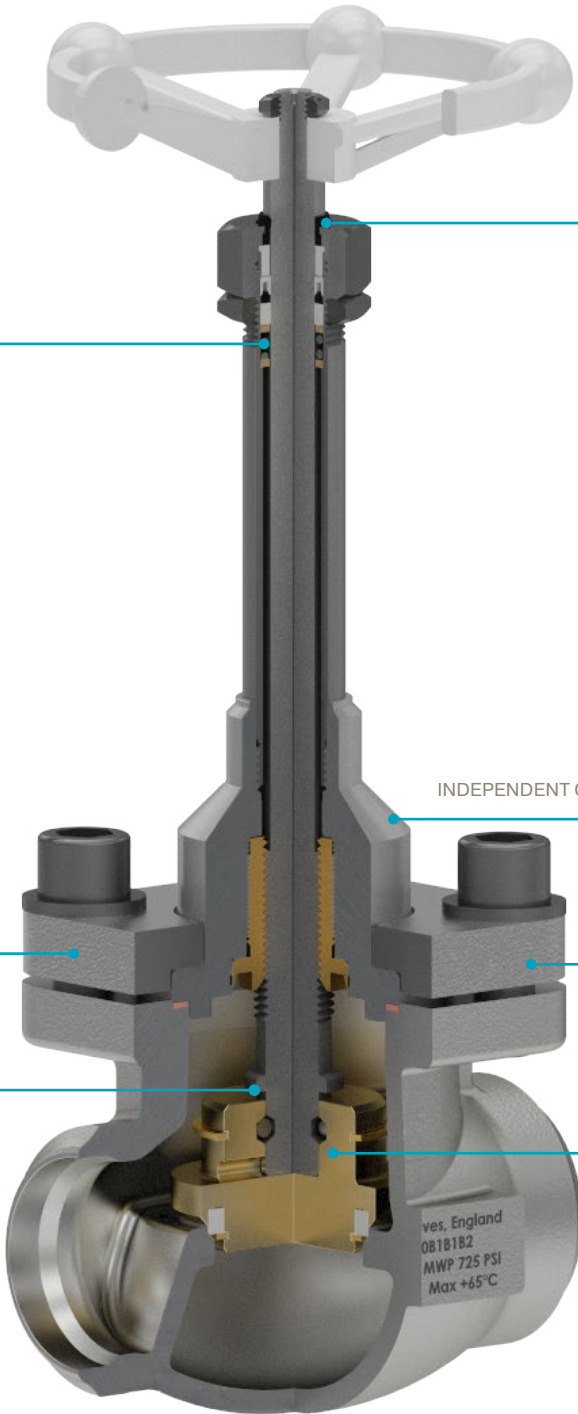

### Wiper seals

Wiper seals, also known as dust or scraper seals, prevent dust, debris, and moisture from entering the valve assembly and cryogenic system. These seals are fitted on the external side of the Parker Bestobell valve head and provide a more reliable sealing contact with the stem.

### Independent cover & top flange

Parker Bestobell valves feature an independent cover, which ensures an absolute seal between the bottom and top flanges by maintaining the downward force on the sealing gasket. The top flange is manufactured as a separate part from the cover. The flange and cover are torqued down using securing bolts with a built-in strain. This prevents leakage from the gasket over long-term usage.

### Floating disc and non-rotating seal

The freely rotating disc of Parker Bestobell valves ensures constant sealing contact during the opening and closing of the valves and enables long-term leak-free operation.



## Oxygen Cleaning

All Parker Bestobell cryogenic valves go through a cleaning process of removing contaminants to eliminate the risk of combustion and ignition hazards in oxygen service. Through oxygen cleaning, both organic and inorganic contaminants, such as hydrocarbon-based oils and greases are removed.

The valves are then assembled in clean room conditions and pressure tested before dispatch.



## Cryogenic Testing

Parker Bestobell carries out cryogenic valve tests on request. These cryogenic tests follow BS EN 1626 standard procedures.

During cryogenic testing, valves are placed in an insulated tank and immersed in liquid nitrogen at any temperature down to -196°C (-321°F).


Shell leak tests are performed using 100% helium as the search gas.

# General Technical Information

## Cryogenic Product Range




Valve Type	Manual Globe Valve	Tyre Actuated Globe Valve	Manual & Tyre Actuated Gate Valve	Fill Manifold Assembly	Manual & Actuated Ball Valve
Series	CNB CNS CNT	CNT*TA	CMC CMD	CTB	CZF CZF*A
Page Number	12	12	20	24	28
Size Range mm	DN6-DN200	DN25, DN40, DN65	DN40-DN100	DN40	DN15-DN50
Size Range inch	1/4" - 8"	1", 1-1/2", 2-1/2"	1-1/2" - 4"	1-1/2"	1/2" - 2"
Pressure Rating	Up to 50 bar (725 PSI)	Up to 50 bar (725 PSI)	Up to 40 bar (580 PSI)	Up to 50 bar (725 PSI)	Up to 50 bar (725 PSI)
End Connections	NPT BSP Socket Weld Butt Weld Flanged Stainless Steel Stubs	Socket Weld Butt Weld Flanged	Socket Weld Butt Weld	Inlet: Muller flange Outlet: Stainless Steel or Copper Stubs	NPT BSP Socket Weld Butt Weld
Material	Bronze Full Stainless Steel Stainless Steel with Bronze Internals	Stainless Steel with Bronze Internals	Stainless Steel with Bronze Internals	Bronze	Bronze Full Stainless Steel

**WARNING**

The products described in this catalog can expose you to chemicals, including Lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to [www.p65warnings.ca.gov](http://www.p65warnings.ca.gov).



Lift Check Valve	Swing Check Valve	Strainer	Safety Relief Valve	Thermal Relief Valve	Pressure Regulator
CGB CGT	CHC	CSB CSS	CW	CVF CYF	CK
32	32	38	42	46	50
DN6-DN150	DN25-DN100	DN6-DN150	DN10-DN20	DN6	DN15
1/2" - 6"	1"- 4"	1/2" - 6"	3/8" - 3/4"	1/4"	1/2"
Up to 50 bar (725 PSI)	Up to 50 bar (725 PSI)	Up to 50 bar (725 PSI)	Up to 40 bar (580 PSI)	Up to 40 bar (580 PSI)	Up to 25 bar (360 PSI)
NPT BSP Socket Weld Butt Weld Flanged Stainless Steel Stubs	Socket Weld Butt Weld Flanged	NPT BSP Socket Weld Butt Weld Flanged Stainless Steel Stubs	NPT BSP	NPT BSP A-LOK®	NPT BSP Butt Weld
Bronze Stainless Steel with Bronze Internals	Full Stainless Steel	Bronze Stainless Steel with Bronze Internals	Bronze Stainless Steel with Bronze Internals	Bronze Full Stainless Steel	Bronze

**WARNING**

The products described in this catalog can expose you to chemicals, including Lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to [www.p65warnings.ca.gov](http://www.p65warnings.ca.gov).

# Globe Valves

## Overview

Parker Bestobell cryogenic uni-directional globe valves are designed for shut-off of flow, and flow and pressure regulating purposes.

The globe valve design incorporates a floating disc and non-rotating seal, which provide effective long-term sealing with zero leakage of media.

The cone seat is designed for a drop-tight shut-off and to decrease the chance of ice build-up if moisture is present on the downstream side of the valve.

### Functions:

- Media isolation
- Media control

### Applications:


- Transportation of liquefied gases
- Storages of liquefied gases
- Gas processing

Valve Size	DN6 - DN200
Maximum Working Pressure (MWP)	50 bar (725 PSI) dependent on end connections
Working temperature	-196°C to +65°C (-319°F to +149°F)
End connections	BSP, NPT, Socket Weld, Butt Weld, Flanged, Stainless Steel Stubs
Body materials	Bronze, Stainless Steel
Suitable for media type	Group 1 gases Cleaned for oxygen service
Design and testing standards	ASTM B31.1, BS EN 1626, BS ISO 21011 Optional full material traceability backed by BS EN 10204 3.1/3.2 certification
Approvals	CRN, UKCA and PED approved
Marking	CE and UKCA marked

The preferred orientation of the Parker Bestobell cryogenic globe valves is vertical. It should not be less than 30° from the horizontal position if installed at an angle.

Parker Bestobell cryogenic globe valves are available as manual and pneumatic actuation types.

The pneumatic tyre design enables remote control and emergency shut-off of flow. The valve is of a fail-closed (FC) design with automatic operation. It is equipped with a manual override system in case air has been lost and an emergency discharge is required.

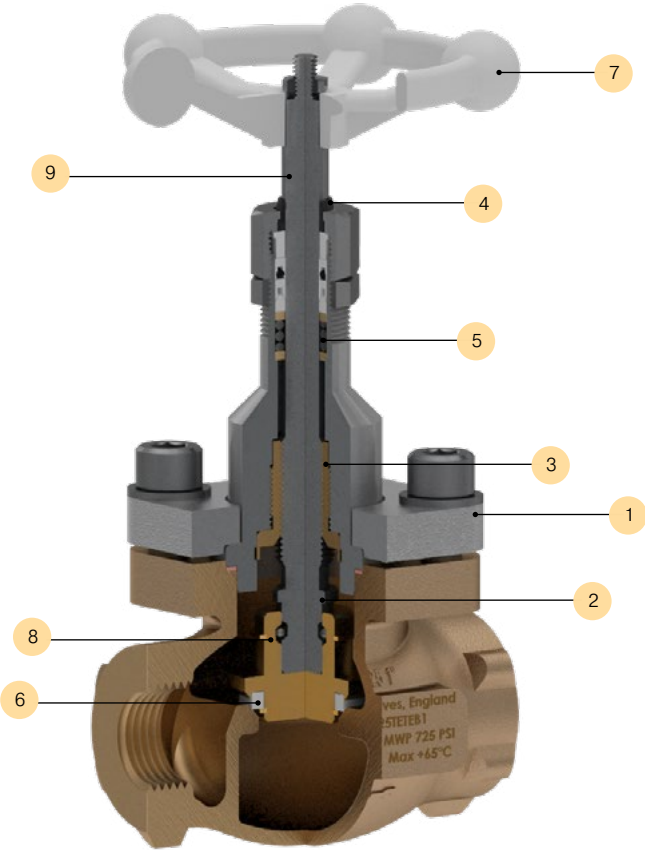

## Features, Benefits and Values

Reference	Feature	Benefit	Value
1	Bolted bonnet	Ease of maintenance Reduced maintenance area Allows for thermal expansion and contraction at cryogenic temperatures Eliminates leakage at the bonnet gasket	<b>Safety</b> <b>Reliability</b> <b>Ease of Operation</b>
2	Anti-blowout stem	The anti-blowout design prevents the stem being pushed out by internal valve pressure during maintenance of the packing A machined flat on the collar prevents liquid from being trapped in the headwork which could lead to a rapid build-up of pressure as liquid warms up	<b>Safety</b> <b>Reliability</b>
3	Bearing material insert	Prevents thread galling between stem and cover	<b>Performance</b> <b>Reliability</b>
4	Wiper (dust) seals	Prevent dust, debris, or outside weather conditions from entering the valve Maintain a sealing contact with the stem	<b>Performance</b> <b>Reliability</b>
5	Spring-loaded gland packing	Springs maintain a constant load on the gland, reducing the frequency of manual adjustment and influence of temperature changes Long service life: 10,000 operations	<b>Performance</b> <b>Reliability</b>
6	Disc and seal retention	The absence of threaded components provides total reliability in systems with vibration	<b>Safety</b> <b>Reliability</b>
7	Lightweight ergonomic handwheel	Reduced weight of the complete assembly Enables installation in confined spaces	<b>Ease of Operation</b>
8	Floating disc and non-rotating seal	Prevent the wear of the disc and seal and extend the life of the valve	<b>Safety</b> <b>Reliability</b>
9	Non-extended stem	Enables installation in confined spaces Reduced weight	<b>Performance</b> <b>Ease of Operation</b> <b>Lower overall cost</b>
N/A	Extended stem	Enables an easy access for valve operation and maintenance Prevents the loss of cold energy Prevents the damage of valve packings from low liquid temperatures Ease of use of the jacketing material	<b>Performance</b> <b>Reliability</b> <b>Ease of Operation</b>




Parker Bestobell Cryogenic Globe Valve in Bronze (DN40; Extended Stem with Screwed Schedule 10 Stainless Steel Stubs)




Parker Bestobell Cryogenic Globe Valve in Stainless Steel (DN40; Extended Stem with Flanged Ends)



Parker Bestobell Cryogenic Tyre Actuated Globe Valve in Stainless Steel with Bronze Internals (DN25; Extended Stem with Socket Weld Ends)

**WARNING**

The products described in this catalog can expose you to chemicals, including Lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to [www.p65warnings.ca.gov](http://www.p65warnings.ca.gov).

**WARNING**

The products described in this catalog can expose you to chemicals, including Lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to [www.p65warnings.ca.gov](http://www.p65warnings.ca.gov).





# Globe Valves

## Technical Information

### Bill of Materials

	Description	Bronze (CNB Series)	Full Stainless Steel (CNS Series)	Stainless Steel with Bronze Internals (CNT Series)
1	Body	Gun Metal BS EN 1982 CC491K	Stainless Steel ASTM A351 CF8M	Stainless Steel ASTM A351 CF8M
2	Cover	Stainless Steel BS EN 10088-3 1.4301		Stainless Steel BS EN 10088-3 1.4301 (DN15-DN65) Stainless Steel ASTM A351 CF8M (DN80, DN100)
3	Bonnet Flange	Stainless Steel ASTM A351 CF8M		
4	Disc	HT Brass BS EN 12164 CW 721R	Stainless Steel BS EN 10088-3 1.4401	HT Brass BS EN 12164 CW 721R
5	Stem	Stainless Steel BS EN 10088-3 1.4401		
6	Gasket	Sigma 511		
7	Gland Packing	Virgin PTFE		
8	Fasteners	Stainless Steel BS6105 A2/A4 Gr.70		
9	Seal	Virgin PTFE/PCTFE		PCTFE (DN15-DN40) Virgin PTFE (DN50-DN100)
10	Extension Tube (extended stem valves)	Stainless Steel ASTM A312 TP304L		
11	Actuator	N/A	N/A	Rubber
N/A	Handwheel	Aluminum LM4		
N/A	Stubs	Stainless Steel ASTM A312 TP 304L	N/A	N/A

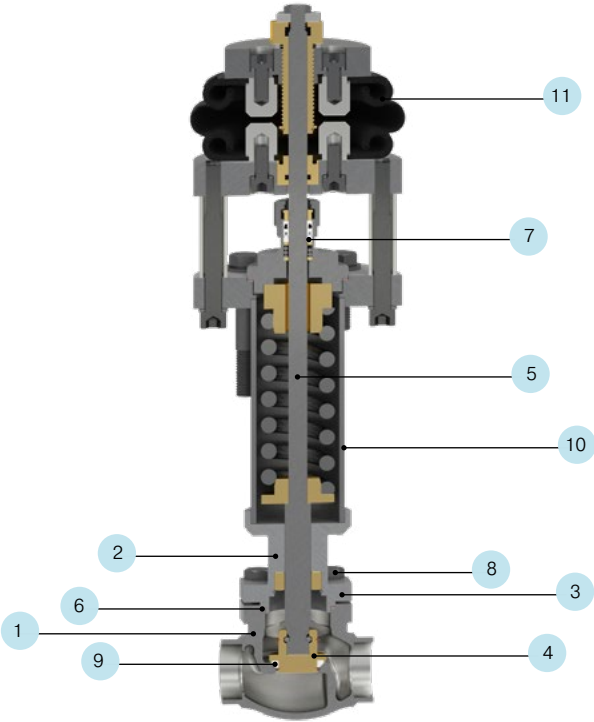

**WARNING**

The products described in this catalog can expose you to chemicals, including Lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to [www.p65warnings.ca.gov](http://www.p65warnings.ca.gov).

## Ordering Information

### Manual Globe Valves - Bronze CNB Series

CNB

DN15

TA

TA

B

1


Series		Valve Size		Inlet Connection		Outlet Connection		Bonnet Type		Stem Length			
Cryogenic Manual Globe Valves - Bronze	CNB	15 mm	DN15	BSP-PL Female	TA	BSP-PL Female	TA	Bolted	B	Non-Extended	1		
		25 mm	DN25	BSP-TR Female	TC	BSP-TR Female	TC			230 mm	2		
		40 mm	DN40	NPT Female	TE	NPT Female	TE			300 mm	3		
		50 mm	DN50	Screwed Schedule 10 Stainless Steel Stubs	ST	Screwed Schedule 10 Stainless Steel Stubs	ST						


- Notes:**
- 1. Inlet and outlet connections can be of different types.
  - 2. Options available on request: Purge point (available on DN15 only); Colored handwheel; DN6, DN10 size valves; Socket Weld end connections; Pneumatic linear actuator; Check function.

### Specifications

#### Threaded Ends/Threaded Ends with Stainless Steel Stubs

Valve Size		DN15 15 mm			DN25 25 mm			DN40 40 mm			DN50 50 mm		
Stem length		Non-Extended Stem	230 mm	300 mm	Non-Extended Stem	230 mm	300 mm	Non-Extended Stem	230 mm	300 mm	Non-Extended Stem	230 mm	300 mm
A	mm		68			92			121			146	
B	mm	80	230	300	90	230	300	110	230	300	140	230	300
C: Closed	mm	151	299	366	165	307	368	187	295	374	204	305	385
D: Open	mm	159	307	371	177	320	379	200	310	386	220	321	401
E	mm		80			101			121			144	
Cv	US GPM		3.6			13.2			26.5			43.0	
Weight	kg	1.0	1.5	1.6	2.0	2.5	2.6	3.7	4.5	4.7	6.0	7.6	7.9

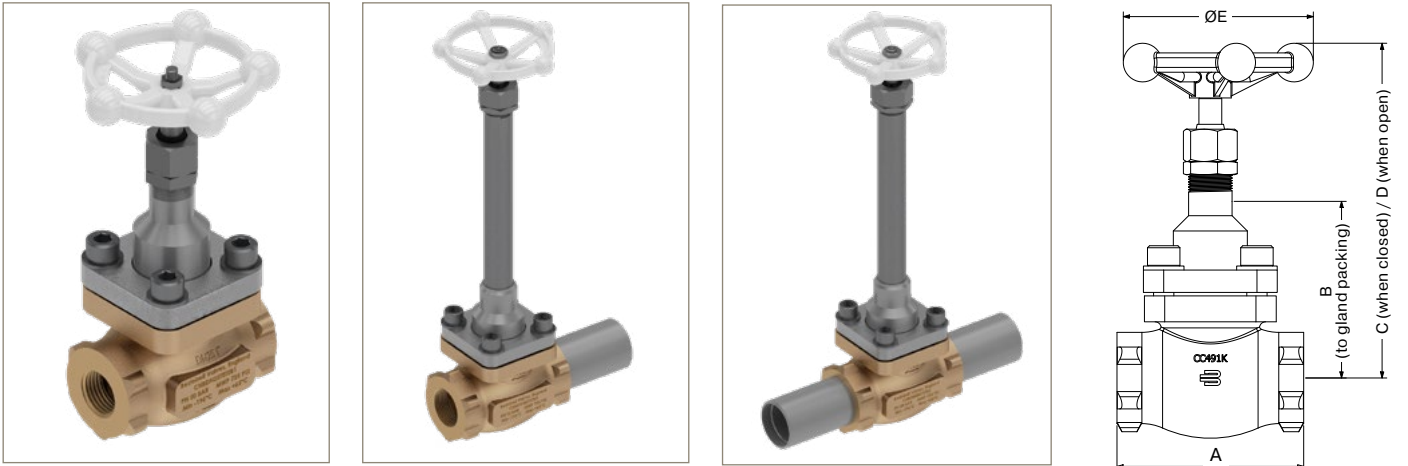

**WARNING**

The products described in this catalog can expose you to chemicals, including Lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to [www.p65warnings.ca.gov](http://www.p65warnings.ca.gov).



# Globe Valves

## Ordering Information

### Manual Globe Valves - Full Stainless Steel

#### CNS Series


Series		Valve Size		Inlet Connection		Outlet Connection		Bonnet Type		Stem Length	
Cryogenic Manual Globe Valves - Full Stainless Steel	CNS	15 mm	DN15	Butt Weld schedule 10	B1	Butt Weld schedule 10	B1	Bolted	B	300 mm	3
		25 mm	DN25	Socket Weld	SW	Socket Weld	SW				
		40 mm	DN40	Flange ASME CL150	FA	Flange ASME CL150	FA				
		50 mm	DN50	Flange ASME CL300	FC	Flange ASME CL300	FC				

- Notes:**
- Inlet and outlet connections must be of the same type.
  - Options available on request: Colored handwheel; DIN flanges; Butt Weld Schedule 40; Non-extended stem; DN6, DN10, DN65, DN80, DN100 size valves; Pneumatic linear actuator; Check function.

### Specifications

#### Butt Weld/Socket Weld Ends


Valve Size		DN15 15 mm	DN25 25 mm	DN40 40 mm	DN50 50 mm
A	mm	68	92	121	146
B	mm	300	300	300	300
C: Closed	mm	366	368	374	385
D: Open	mm	371	379	386	401
E	mm	80	101	121	144
Cv	US GPM	3.6	13.2	26.5	43.0
Weight	kg	1.6	2.3	4.2	6.8

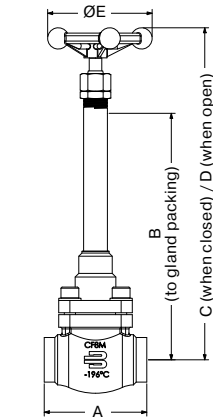


#### Flanged Ends - Class 150 and 300

Valve Size			DN15 15 mm	DN25 25 mm	DN40 40 mm	DN50 50 mm
A	mm	Class 150	115	140	165	203
		Class 300	130	160	200	230
G	mm	Class 150	89	108	127	152
		Class 300	95	124	155	165
Flange Thickness Cv	mm	Class 150	13.0	14.5	17.5	19.1
		Class 300	14.0	18.0	21.0	22.0
Weight	kg	Class 150	2.5	5.0	8.7	12.4
		Class 300	2.8	5.3	9.6	13.8

Dimensions B, C, D, E and Cv values are the same as for Butt Weld/Socket Weld ends.

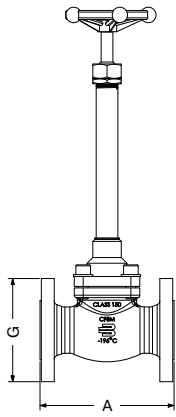

**WARNING**

The products described in this catalog can expose you to chemicals, including Lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to [www.p65warnings.ca.gov](http://www.p65warnings.ca.gov).

### Manual Globe Valves - Stainless Steel with Bronze Internals

#### CNT Series


Series		Valve Size		Inlet Connection		Outlet Connection		Bonnet Type		Stem Length		
Cryogenic Manual Globe Valves - Stainless Steel with Bronze Internals	CNT	15 mm	DN15	Butt Weld Schedule 10	B1	Butt Weld Schedule 10	B1	Bolted	B	DN15 - DN50	Non-Extended	1
		25 mm	DN25	Socket Weld	SW	Socket Weld	SW				230 mm	2
		40 mm	DN40	Flange ASME CL150	FA	Flange ASME CL150	FA				300 mm	3
		50 mm	DN50	Flange ASME CL300	FC	Flange ASME CL300	FC			DN65, DN80	300 mm	3
		65 mm	DN65								400 mm	4
		80 mm	DN80									
		100 mm	DN100									


- Notes:**
- Inlet and outlet connections must be of the same type.
  - Options available on request: Colored handwheel; DIN Flanges; Butt Weld Schedule 40; DN6, DN10, DN150, DN200 size valves; Pneumatic linear actuator; Check function.

### Specifications

#### Butt Weld/Socket Weld Ends

Valve Size		DN 15 15 mm			DN25 25 mm			DN40 40 mm			DN50 50 mm			DN65 65 mm	DN80 80 mm	DN100 100 mm
Stem length	Non-Extended Stem	230 mm	300 mm	300 mm	Non-Extended Stem	230 mm	300 mm	300 mm	Non-Extended Stem	230 mm	300 mm	300 mm	300 mm	300 mm	300 mm	400 mm
		mm	mm	mm	mm	mm	mm	mm	mm	mm	mm	mm	mm	mm	mm	mm
A	mm	68	92	121	92	121	146	178	292							
B	mm	80	230	300	90	230	300	110	230	300	140	230	300	300	300	400
C: Closed	mm	151	299	366	165	307	368	187	295	374	204	305	385	392	407	578
D: Open	mm	159	307	371	177	320	379	200	310	386	220	321	401	412	437	613
E	mm	80	101	121	101	121	144	171	222	380						
Cv	US GPM	3.6	13.2	26.5	13.2	26.5	43.0	75.0	108.0	198.0						
Weight	kg	1.3	1.6	1.8	2.0	2.3	2.5	4.0	4.2	4.5	6.8	7.0	7.2	12.00	13.5	55.0

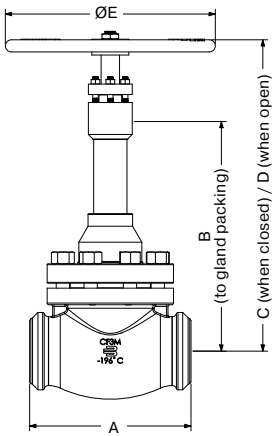

**WARNING**

The products described in this catalog can expose you to chemicals, including Lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to [www.p65warnings.ca.gov](http://www.p65warnings.ca.gov).

# Globe Valves


## Ordering Information

### Flanged Ends - Class 150 and 300

Valve Size			DN15 15 mm			DN25 25 mm			DN40 40 mm			DN50 50 mm			DN65 65 mm	DN80 80 mm	DN100 100 mm
Stem length			Non-Extended Stem	230 mm	300 mm	Non-Extended Stem	230 mm	300 mm	Non-Extended Stem	230 mm	300 mm	Non-Extended Stem	230 mm	300 mm	300 mm	300 mm	400 mm
A	mm	Class 150	115			140			165			203			216	243	350
		Class 300	130			160			200			230			290	310	350
G	mm	Class 150	89			108			127			152			178	190	228
		Class 300	95			124			155			165			191	210	254
Flange Thickness	mm	Class 150	13.00			14.50			17.50			19.05			25.40	24.90	23.90
		Class 300	14.00			18.00			21.00			22.00			25.00	28.00	32.00
Weight	kg	Class 150	2.3	2.6	2.7	4.0	4.3	4.6	7.0	7.2	7.5	11.8	11.6	11.9	18.0	22.0	66.0
		Class 300	2.6	3.0	3.1	4.8	5.0	5.3	9.4	9.6	10.0	13.3	13.5	17.5	21.5	27.0	73.0

Dimensions B, C, D, E and Cv values are the same as for Butt Weld/Socket Weld ends.



**WARNING**

The products described in this catalog can expose you to chemicals, including Lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to [www.p65warnings.ca.gov](http://www.p65warnings.ca.gov).

COMING  
SOON

## Tyre Actuated Globe Valves - Stainless Steel with Bronze Internals

### CNT\*TA Series

CNT			DN25			SW			SW			B			3			TA		
Series			Valve Size			Inlet Connection			Outlet Connection			Bonnet Type			Stem Length			Actuator		
Cryogenic Tyre Actuated Globe Valves - Stainless Steel with Bronze Internals	CNT	25 mm	DN25			Butt Weld Schedule 10			Butt Weld Schedule 10			Bolted			300 mm			Tyre Actuator		
		40 mm	DN40			Socket Weld			Socket Weld			B			3			TA		
		65 mm	DN65			Flange ASME CL150			Flange ASME CL150			FA			FA			FA		
						Flange ASME CL300			Flange ASME CL300			FC			FC			FC		

- Notes:**
- Inlet and outlet connections must be of the same type.
  - Options available on request: Colored handwheel; DIN Flanges; Butt Weld Schedule 40.

## Specifications

### Butt Weld/Socket Weld Ends

Valve Size		DN25 25 mm	DN40 40 mm	DN65 65 mm
A	mm	92	121	178
B: Gland packings	mm	252	231	313
C: Closed	mm	408	388	516
D: Open	mm	418	398	526
E: Actuator diameter	mm	131	131	176
Cv	US GPM	13.2	26.5	75.0
Weight	kg	9.5	11.2	22.3
Maximum Working Pressure	bar	50	15	10
	PSI	725	218	145




DN25




DN40



DN65

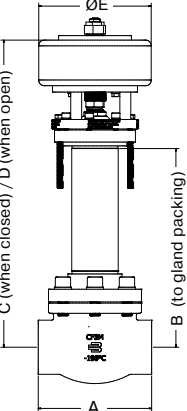

**WARNING**

The products described in this catalog can expose you to chemicals, including Lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to [www.p65warnings.ca.gov](http://www.p65warnings.ca.gov).

# Gate Valves

## Overview

Parker Bestobell cryogenic uni-directional gate valves are used for complete flow shut-off. These valves are not used for flow control since they have only two positions (open/close).

These full bore valves provide a high media flow rate with minimal leakage at low pressure drops.

The valves have a wedge seat design, developed to achieve a tight shut-off at all times and prevent a liquid lock by sealing on the downstream seat only.

The lapped seat and PTFE seal ensure a tight shut-off at all times and prevent a liquid lock by sealing on the downstream seat only.

### Functions:

- Primary media loading valve
- Emergency shut-off valve
- Media Isolation

### Applications:


- Transportation of liquefied gases
- Gas processing

Valve size	DN40 - DN80
Maximum Working Pressure (MWP)	40 bar (580 PSI) dependent on end connections
Working temperature	-196°C to +65°C (-319°F to +149°F)
End connections	Socket Weld, Butt Weld
Body material	Stainless Steel
Suitable for media type	Group 1 gases Cleaned for oxygen service
Design and testing standards	ASTM B31.1, BS EN 1626, BS ISO 21011 Optional full material traceability backed by BS EN 10204 3.1/3.2 certification
Approvals	CRN, UKCA and PED approved
Marking	CE and UKCA marked
Pneumatic Tyre Actuator	• MWP: 8 bar (116 PSI) • Working temperature: -40°C to +50°C (-40°F to + 122°F) • Connections: 1/4" BSP-TR, 1/4" NPT (adaptor)

The preferred orientation of the Parker Bestobell cryogenic gate valves is vertical. It should not be less than 30° from the horizontal position if installed at an angle.


Parker Bestobell cryogenic gate valves are available in manual and pneumatic actuation types.

The pneumatic tyre design enables remote control and emergency shut-off of flow. The valve is of a fail-closed (FC) design with automatic operation. The valve is equipped with a manual override system in case air has been lost and an emergency discharge is required.

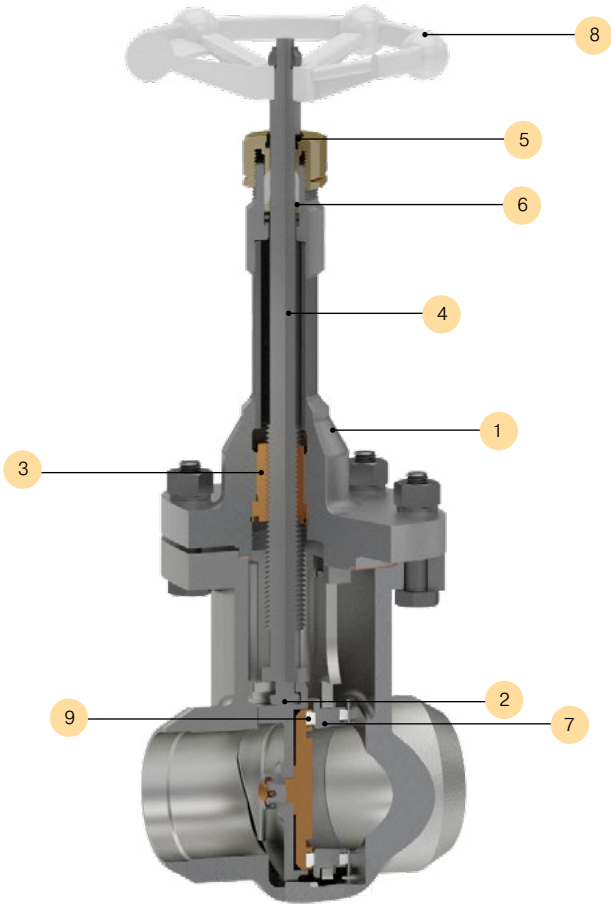


## Features, Benefits and Values

Reference	Feature	Benefit	Value
1	Bolted bonnet	Ease of maintenance Reduced maintenance area Allows for thermal expansion and contraction at cryogenic temperatures Eliminates leakage at the bonnet gasket	<b>Safety</b> <b>Reliability</b> <b>Ease of Operation</b>
2	Anti-blowout stem	The anti-blowout design prevents the stem being pushed out by internal valve pressure during maintenance of the packing A machined flat on the collar prevents liquid from being trapped in the headwork which could lead to a rapid build-up of pressure as liquid warms up	<b>Safety</b> <b>Reliability</b>
3	Bearing material insert	Prevents thread galling between stem and cover	<b>Performance</b> <b>Reliability</b>
4	Extended stem	Enables easy access for valve operation and maintenance Prevents the loss of cold energy Prevents the damage of valve packings from low liquid temperatures Ease of use of the jacketing material	<b>Performance</b> <b>Reliability</b> <b>Ease of Operation</b>
5	Wiper (dust) seals	Prevent dust, debris, or outside weather conditions from entering the valve Maintain a sealing contact with the stem	<b>Performance</b> <b>Reliability</b>
6	Spring-loaded gland packing	Springs maintain a constant load on the gland, reducing the frequency of manual adjustment and influence of temperature changes Long service life: 10,000 operations	<b>Performance</b> <b>Reliability</b>
7	Replaceable body seat	Eliminates the need to disassemble the valve from the pipeline Reduced cost associated with replacing or rebuilding the valve body	<b>Ease of Operation</b>
8	Lightweight ergonomic handwheel	Reduced weight of the complete assembly Enables installation in confined spaces	<b>Ease of Operation</b>
9	Lapped seat and PTFE seal	Ensure a tight shut-off at all times Prevent a liquid lock by sealing on the downstream seat only	<b>Safety</b> <b>Reliability</b> <b>Performance</b>
N/A	Pneumatic tyre design actuator	Fast operation of the valve Remote control	<b>Safety</b> <b>Performance</b>
N/A	Low torque stem	Smooth operation Reduced wear of sealing elements Long life	<b>Performance</b> <b>Reliability</b>
N/A	Full bore	Low pressure drop Higher flow Reduced vessel filling time	<b>Performance</b>

**WARNING**

The products described in this catalog can expose you to chemicals, including Lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to [www.p65warnings.ca.gov](http://www.p65warnings.ca.gov).

**WARNING**

The products described in this catalog can expose you to chemicals, including Lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to [www.p65warnings.ca.gov](http://www.p65warnings.ca.gov).





# Gate Valves

## Technical Information

### Bill of Materials

	Description	Stainless Steel with Bronze Internals Manual CMC Series	Stainless Steel with Bronze Internals Actuated CMD Series
1	Body	Stainless Steel ASTM A351 CF8M	
2	Cover	Stainless Steel ASTM A351 CF8M	
3	Stem	Stainless Steel BS EN 10088-3 1.4401	
4	Wedge	Stainless Steel ASTM A351 CF8M	
5	Disc	Phosphor Bronze	
6	Disc Seat Seal	Virgin PTFE	
7	Gland packing	Virgin PTFE	
8	Extension Tube	Stainless Steel ASTM A312 TP304L	
9	Seat	Stainless Steel BS EN 10088-3 1.4401	
10	Gasket	Sigma 511	
11	Fasteners	Stainless Steel BS6105 A2/A4 Gr.70	
12	Handwheel	Aluminum LM4	Stainless Steel ASTM A351 CF8M
N/A	Actuator	N/A	Rubber

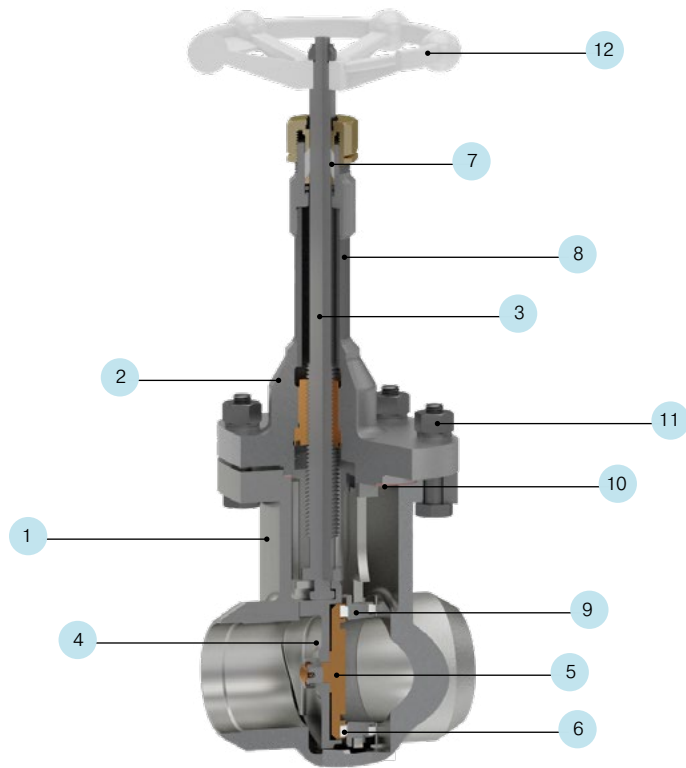

**WARNING**

The products described in this catalog can expose you to chemicals, including Lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to [www.p65warnings.ca.gov](http://www.p65warnings.ca.gov).

## Ordering Information

### Manual and Tyre Actuated Gate Valves - Stainless Steel with Bronze Internals CMC/CMD Series

CMC

Series

Cryogenic Manual Gate Valves - Stainless Steel with Bronze Internals

CMC

Cryogenic Tyre Actuated Gate Valves - Stainless Steel with Bronze Internals

CMD

Valve Size

40 mm

DN40

50 mm

DN50

65 mm

DN65

80 mm

DN80

Inlet Connection

Butt Weld Schedule 10

B1

Socket Weld

SW

Outlet Connection

Butt Weld Schedule 10

B1

Socket Weld

SW

Bonnet Type

Bolted

B

Stem Length

Manual

DN40

230 mm

2

DN50, DN65

300 mm

3

DN80

400 mm

4

Tyre Actuated

DN40

300 mm

3

DN50 - DN80

300 mm

3

500 mm

5


**Notes:**


1. Inlet and outlet connections must be of the same type.  
2. Options available on request: Colored handwheel; DIN/ASME Flanges; Butt Weld Schedule 40; DN100 size valves; Umbrella for actuator; Handwheel for manual override.

## Specifications

### Butt Weld/Socket Weld Ends

Valve Size		DN40 40 mm		DN50 50 mm		DN65 65 mm		DN80 80 mm	
Actuation		Manual	Tyre Actuated	Manual	Tyre Actuated	Manual	Tyre Actuated	Manual	Tyre Actuated
A	mm	130		140		150		150	
B: Closed	mm	326	450	390	495	390	502	500	535
C: Open	mm	363	490	450	540	464	567	595	615
D	mm	102	165	146	240	146	240	146	240
Cv	US GPM	132		240		380		560	
Weight	kg	5.3	13.0	10.4	19.0	12.9	21.7	18.2	27.1

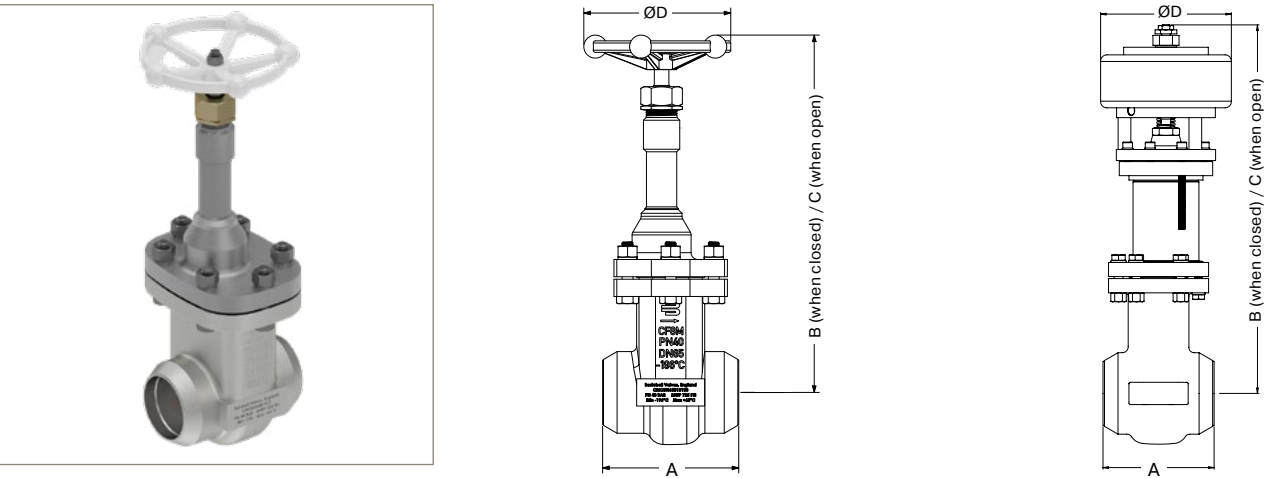

**WARNING**

The products described in this catalog can expose you to chemicals, including Lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to [www.p65warnings.ca.gov](http://www.p65warnings.ca.gov).

# Fill Manifold Assemblies

## Overview

Parker Bestobell cryogenic bronze fill manifold assemblies are system-optimizing filling units designed specifically for cryogenic gaseous liquid static storage vessels. They replace the traditional gang of valves along with various pipes and joints while minimizing welding and brazing needs.

The Parker Bestobell cryogenic fill manifold assembly includes:

- Top fill valve
- Bottom fill valve
- Check valve
- Drain valve

A spring-to-close check valve prevents the backwash of media at the end of the filling cycle. A drain valve is used to release trapped media in the fill block. The unit also includes a warm-up leg to connect a thermal relief valve.

The fill manifolds are simple to operate. It involves selecting the valve to operate: top or bottom filling of the tank.

Parker Bestobell supplies these fill assemblies ready to be fitted to the tank, with pipe specifications provided by the customer.

The valves should only be installed in a vertical position.

The cryogenic fill manifold assembly is available with redundant valves which are used for the isolation of the main fill unit when it is under service.


### Function:

- Fill valves with check and drain valves

### Application:


- Static storage tanks

Top/bottom/check valve Ssze	DN40
Drain valve size	DN15
Maximum Working Pressure (MWP)	Stainless Steel Stubs: 50 bar (725 PSI) Copper Stubs: 32 bar (464 PSI)
Working temperature	-196°C to +65°C (-319°F to +149°F)
Inlet connections	Mueller Flange
Outlet connections	Stainless Steel/Copper Stubs
Body material	Bronze
Suitable for media type	Group 1 gases Cleaned for oxygen service
Design and testing standards	ASTM B31.1, BS EN 1626, BS ISO 21011 Optional full material traceability backed by BS EN 10204 3.1/3.2 certification
Approvals	CRN, UKCA and PED approved
Marking	CE and UKCA marked

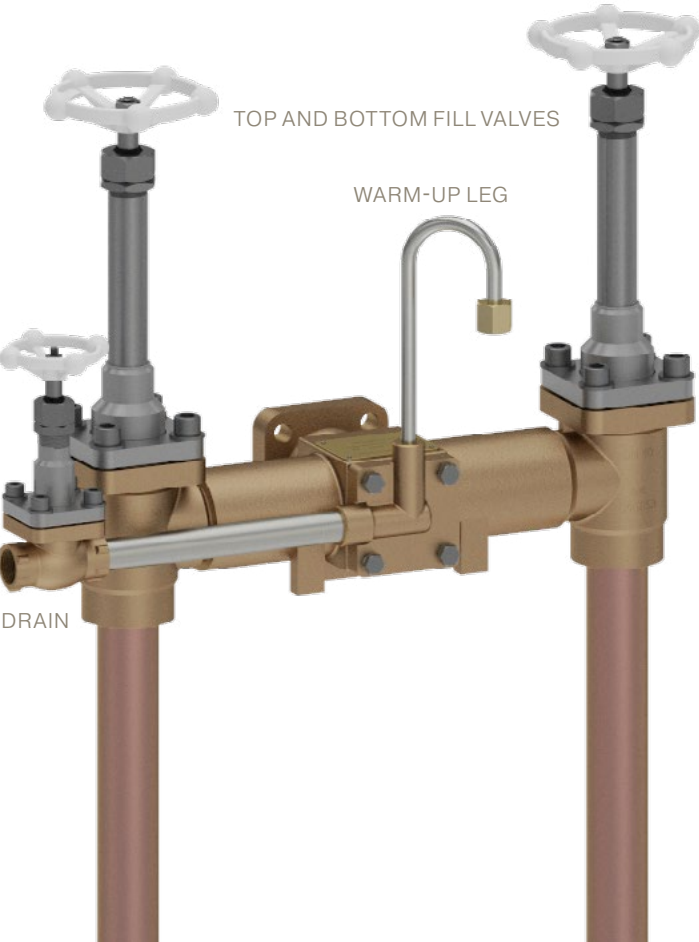

## Features, Benefits and Values


Feature	Benefit	Value
Bolted bonnet	Ease of maintenance Reduced maintenance area Allows for thermal expansion and contraction at cryogenic temperatures Eliminates leakage at the bonnet gasket	<b>Safety</b> <b>Reliability</b> <b>Ease of Operation</b>
Anti-blowout stem	The anti-blowout design prevents the stem being pushed out by internal valve pressure during maintenance of the packing A machined flat on the collar prevents liquid from being trapped in the headwork which could lead to a rapid build-up of pressure as liquid warms up	<b>Safety</b> <b>Reliability</b>
Bearing material insert	Prevents thread galling between stem and cover	<b>Performance</b> <b>Reliability</b>
Extended stem	Enables an easy access for valve operation and maintenance Prevents the loss of cold energy Prevents the damage of valve packings from low liquid temperatures Ease of usage of the jacketing material	<b>Performance</b> <b>Reliability</b> <b>Ease of Operation</b>
Wiper (dust) seals	Prevent dust, debris, or outside weather conditions from entering the valve Maintain a sealing contact with the stem	<b>Performance</b> <b>Reliability</b>
Spring-loaded gland packing	Spring maintains the load on the gland for a period of time reducing the frequency of manual adjustment and influence of temperature changes Long service life: 10,000 operations	<b>Performance</b> <b>Reliability</b>
Disc and seal retention	The absence of threaded components provides total reliability in systems with vibration	<b>Safety</b> <b>Reliability</b>
One piece body with unique internal design	Reduced number of potential leak paths Simplified piping system Reduced pressure drop Reduced vessel filling time	<b>Safety</b> <b>Reliability</b> <b>Performance</b>
Complete valve assembly	Reduced welding needs Reduced maintenance time	<b>Performance</b> <b>Lower overall cost</b>

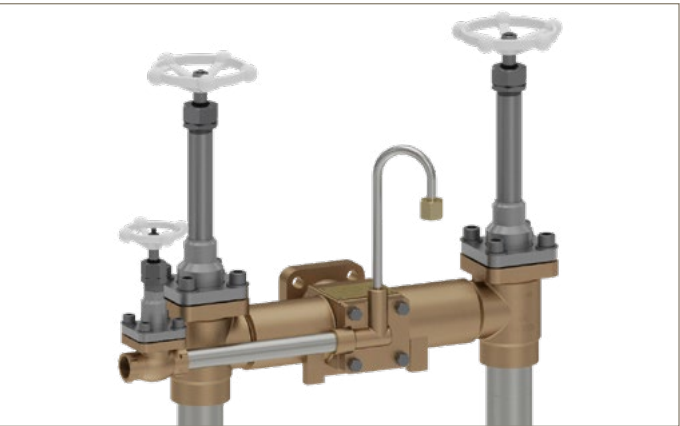


Parker Bestobell Cryogenic Fill Manifold Assembly in Bronze with Mueller Flange Inlet and Stainless Steel Stubs



Parker Bestobell Cryogenic Fill Manifold Assembly in Bronze with Mueller Flange Inlet and Copper Stubs with Redundant Valves

**WARNING**

The products described in this catalog can expose you to chemicals, including Lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to [www.p65warnings.ca.gov](http://www.p65warnings.ca.gov).

**WARNING**



The products described in this catalog can expose you to chemicals, including Lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to [www.p65warnings.ca.gov](http://www.p65warnings.ca.gov).


# Fill Manifold Assemblies

## Technical Information

### Bill of Materials

Description	Bronze CTB Series
Body	Gunmetal BS EN 1982 CC491K
Cover	Gunmetal BS EN 1982 CC491K
Stem	Stainless Steel BS EN 10088-3 1.4401
Disc	HT Brass BS EN 12164 CW721R
Seal	PCTFE
Gland packing	Virgin PTFE
Extension tube	Stainless Steel ASTM A312 TP304L
Gasket	Sigma 511
Fasteners	Stainless Steel BS6105 A2/A4 Gr.70
Handwheel	Aluminum LM4
Down pipe	Stainless Steel ASTM A312 TP304L
Central body	Gunmetal BS EN 1982 CC491K
Strainer	Copper / Monel
Spring	Phosphor Bronze BS EN 12163 CW451K

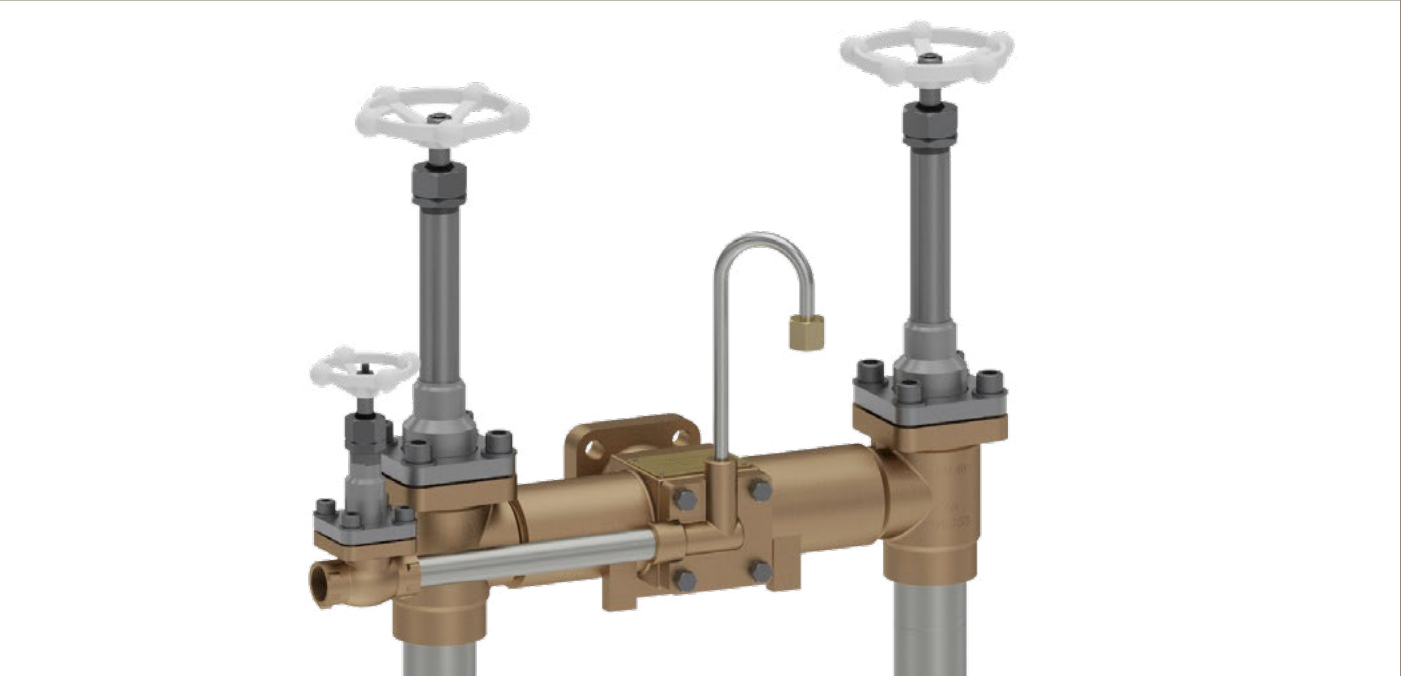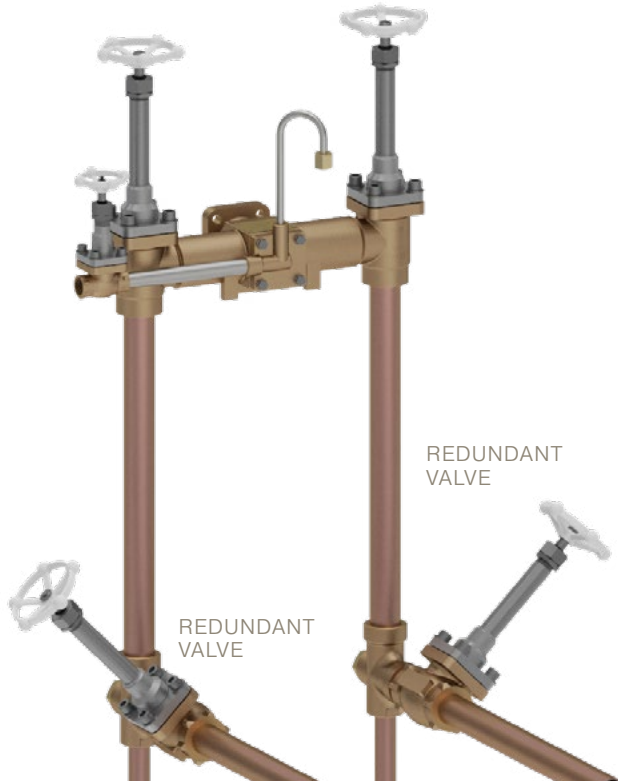

**WARNING**

The products described in this catalog can expose you to chemicals, including Lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to [www.p65warnings.ca.gov](http://www.p65warnings.ca.gov).

## Ordering Information


### Fill Manifold Assemblies - Bronze CTB Series


CTB		DN40		FM		ST		B		2	
Series		Valve Size		Inlet Connection		Outlet Connection		Bonnet Type		Stem Length	
Cryogenic Fill Manifold Assemblies - Bronze	CTB	40 mm	DN40	Mueller Flange	FM	Stainless Steel Stubs	ST	Bolted	B	230 mm	2
						Copper Stubs	CT				
						Copper Stubs with Redundant Valves	RT				

**Note:**  
Options available on request: Colored handwheel; Non-extended, 300 mm stem extension; Various flanged inlet connections; Stainless Steel valve body material.

### Specifications Stubs

Valve Size		DN40 40 mm	
Stubs Material		Stainless Steel Stubs	Copper Stubs
A	mm	301	
B	mm	85	
C	mm	230	
D	mm	121	
E	mm	90	
F	US GPM	118	
G		1-1/2" NB Schedule 10	Ø 1-5/8" x 1.83 Thick
Cv	US GPM	26.5	
Weight	kg	17.3	19.1
Stub Length	mm	77	473

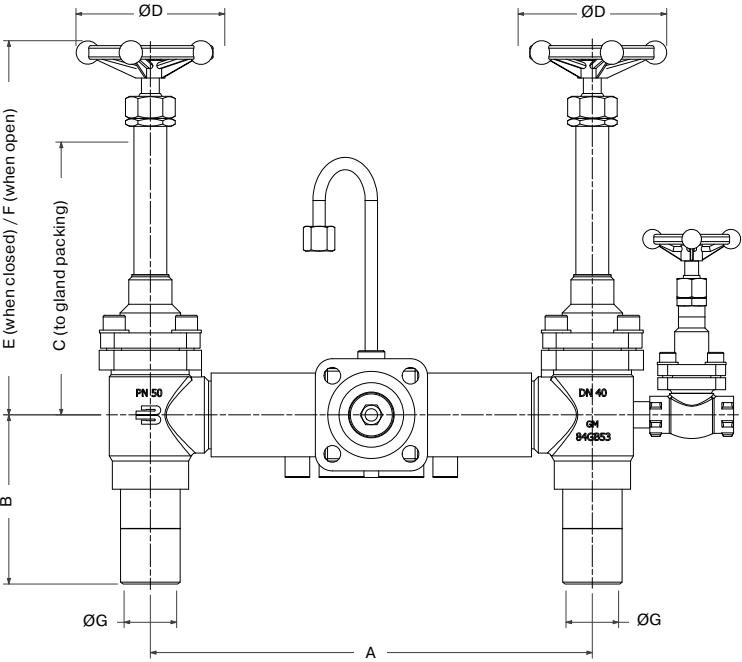

**WARNING**

The products described in this catalog can expose you to chemicals, including Lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to [www.p65warnings.ca.gov](http://www.p65warnings.ca.gov).



# Ball Valves

## Overview

Parker Bestobell cryogenic uni-directional ball valves are used as shut-off valves in low-temperature applications.

These valves are available in full and reduced bore designs. The cryogenic full bore ball valves deliver a high flow of media and decreased pressure drop. They are suitable for filling stations and portable delivery systems, providing faster opening and closing times, and reducing the filling time.

The cryogenic reduced port ball valves are more compact than full bore ball valves, which makes them suitable for systems with confined space. These valves

are also about 30% lighter than the full bore ball valves, which reduces the pipe load and transportation costs.

The preferred orientation of the Parker Bestobell cryogenic ball valves is vertical. It should not be less than 30° from the horizontal position if installed at an angle. The relief hole in the ball should be facing upstream when the valve is in the closed position.

Parker Bestobell cryogenic ball valves are available as manual and pneumatic actuation types. The uni-directional pneumatic actuated valves are used for shut-off of flow and enable remote control.


### Function:

- Shut off

### Applications:


- Fill or drain lines
- Transportation of Liquefied Gases
- Storage of Liquefied Gases

Valve size	DN15 - DN50
Maximum Working Pressure (MWP)	50 bar (725 PSI) dependent on end connections
Working temperature	-196°C to +65°C (-319°F to +149°F)
End connections	NPT, BSP, Socket Weld, Butt Weld
Body materials	Bronze, Stainless Steel
Suitable for media type	Group 1 gases Cleaned for oxygen service
Design and testing standards	ASTM B31.1, BS EN 1626, BS ISO 21011 Optional full material traceability backed by BS EN 10204 3.1/3.2 certification
Approvals	CRN, UKCA and PED approved
Marking	CE and UKCA marked
Pneumatic Actuator	• Max. air pressure: 8 bar (116 PSI) • Working temperature: -20°C to +80°C (-4°F to + 176°F) • Inlet connections: 1/8" or 1/4" BSP-PL (ISO 228) dependent on actuator size

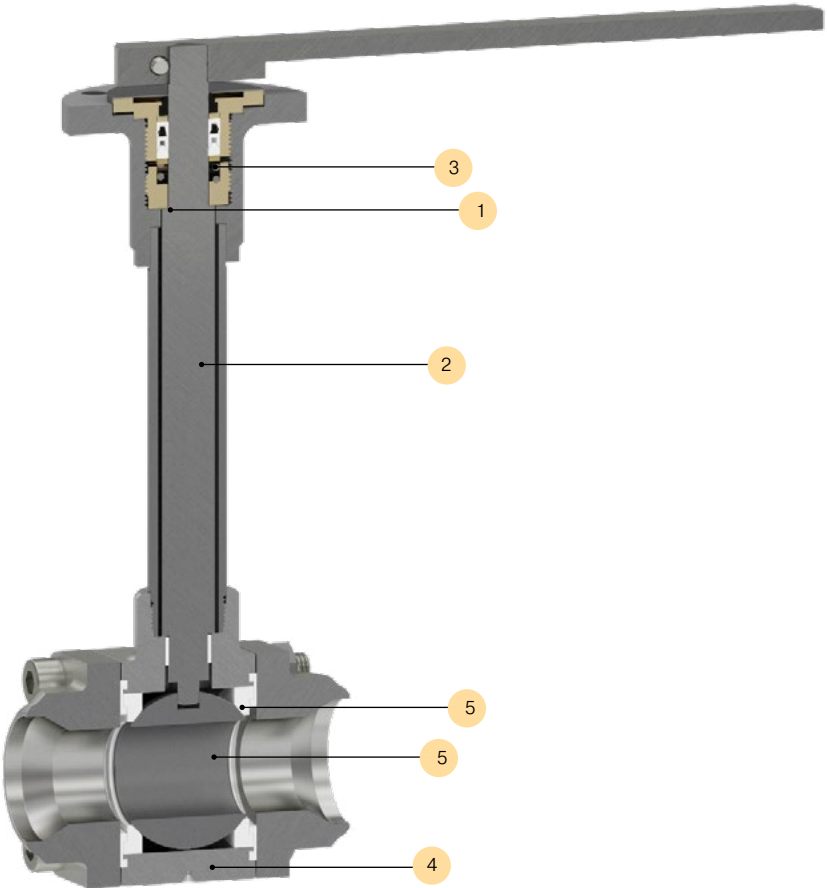


## Features, Benefits and Values

Reference	Feature	Benefit	Value
1	Anti-blowout stem	The anti-blowout design prevents the stem being pushed out by internal valve pressure during maintenance of the packing A machined flat on the collar prevents liquid from being trapped in the headwork which could lead to a rapid build-up of pressure as liquid warms up	<b>Safety</b> <b>Reliability</b>
2	Extended stem	Enables an easy access for valve operation and maintenance Prevents the loss of cold energy Prevents the damage of valve packings from low liquid temperatures Ease of use of the jacketing material	<b>Performance</b> <b>Reliability</b> <b>Ease of Operation</b>
3	Spring-loaded gland packing	Spring maintains the load on the gland for a period of time reducing the frequency of manual adjustment and influence of temperature changes Long service life: 10,000 operations	<b>Performance</b> <b>Reliability</b>
4	Removable centre section	Interchangeability in existing installations	<b>Ease of Operation</b>
5	Replaceable disc and seat	Ease of maintenance	<b>Ease to Operation</b>
N/A	Relief hole	Prevents trapping of liquefied gases, when the ball rotates into the closed position.	<b>Safety</b> <b>Reliability</b>
N/A	Full bore	High flow Low pressure drop Quick filling	<b>Performance</b>
N/A	Reduced bore	Require smaller installation space 30% lighter than full bore ball valve	<b>Ease of Operation</b> <b>Overall cost</b>
N/A	Quarter-turn valve	Fast opening Ease of actuation	<b>Performance</b> <b>Ease of Operation</b> <b>Safety</b>
N/A	Rack & pinion pneumatic actuator	Fast operation of the valve Remote control Easy convert from manual to actuated due to the ISO mounting flange	<b>Safety</b> <b>Ease of Operation</b> <b>Performance</b>
N/A	Visual detection	Open and close state of valve can be visually detected by position of the handle	<b>Safety</b> <b>Ease to Operation</b>

**WARNING**

The products described in this catalog can expose you to chemicals, including Lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to [www.p65warnings.ca.gov](http://www.p65warnings.ca.gov).

**WARNING**


The products described in this catalog can expose you to chemicals, including Lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to [www.p65warnings.ca.gov](http://www.p65warnings.ca.gov).


# Ball Valves

## Technical Information

### Bill of Materials

	Description	Bronze	Full Stainless Steel
1	Body	Gunmetal BS EN 1982 CC491K	Stainless Steel ASTM A351 CF8M
2	End adaptors	Gunmetal BS EN 1982 CC491K	Stainless Steel ASTM A351 CF8M
3	Stem	Stainless Steel BS EN 10088-3 1.4401	
4	Ball	Brass BS EN 12164 CW614N	Stainless Steel 316 S31 BS970
5	Ball seal	Hostaflon	
6	Gland housing	Stainless Steel ASTM A351 CF8M	
7	Extension tube	Stainless Steel ASTM A269 TP304L	
8	End adaptor seal	Virgin PTFE	
9	Gland packing	Virgin PTFE	
10	Fasteners	Stainless Steel BS6105 A2/A4 Gr.70	
11	Lever	Stainless Steel ASTM A351 CF8M	

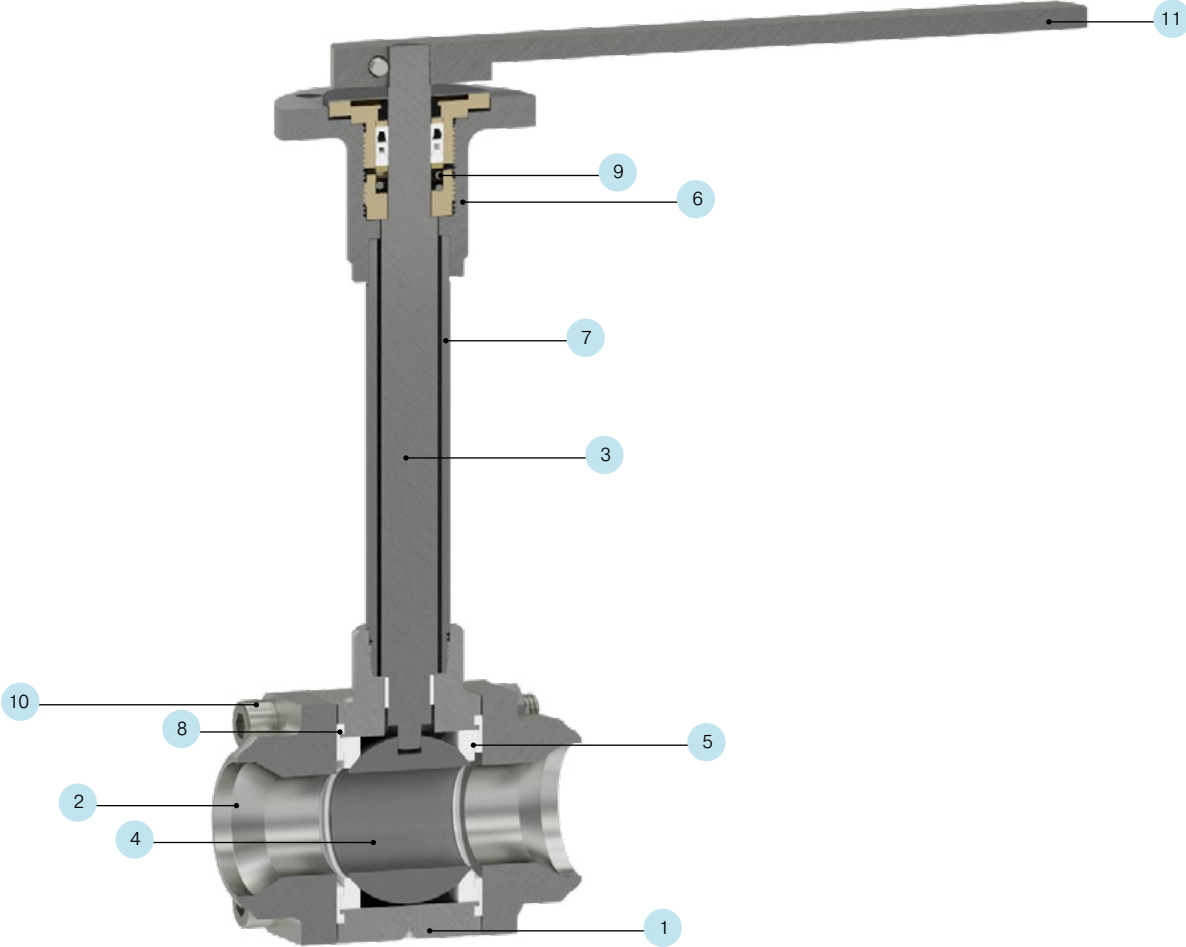

**WARNING**

The products described in this catalog can expose you to chemicals, including Lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to [www.p65warnings.ca.gov](http://www.p65warnings.ca.gov).

## Ordering Information

### Manual and Actuated Ball Valves - Bronze and Full Stainless Steel CZF Series

Series		Valve Size		Body Material		Inlet Connection			Outlet Connection			Stem Length		Actuation	
Cryogenic Ball Valves - Full Bore	CZFF	15 mm	DN15	Bronze	B	Bronze	BSP-PL Female	TA	Bronze	BSP-PL Female	TA	230 mm	2	Manual	*
Cryogenic Ball Valves - Reduced Bore	CZFR	25 mm	DN25	Full Stainless Steel	S		BSP-TR Female	TC		BSP-TR Female	TC			Pneumatic Actuator	A
		40 mm	DN40				NPT Female	TE		NPT Female	TE				
		50 mm*	DN50			Full Stainless Steel	Butt Weld schedule 10	B1	Full Stainless Steel	Butt Weld schedule 10	B1				
				Socket Weld	SW		Socket Weld			SW					

\* Reduced bore valves (CZFR) only


#### Notes:


- 1. Inlet and outlet connections can be of different types.
- 2. Options available on request: Flanged end connections; Rack & Pinion Pneumatic Actuator with solenoid valve; Positioner; Switch limit; Coloured lever.

## Specifications

### Threaded/Butt Weld/Socket Weld Ends

Valve Size		DN15 15 mm		DN25 25 mm		DN40 40 mm		DN50 50 mm	
Actuation		Manual	Pneumatic	Manual	Pneumatic	Manual	Pneumatic	Manual	Pneumatic
Full Bore	mm	15		25		40		N/A	
Reduced Bore	mm	11		20		32		37	
A	mm	230							
B	mm	250	352	250	352	250	405	250	405
C	mm	21		32		49		56	
D	mm	67		96		117		129	
E	mm	190	210	190	210	230	315	230	315
Cv	US GPM	9		30		90		138	
Weight	kg	2.1	4.7	3.0	5.5	4.7	15.5	6.8	16.0

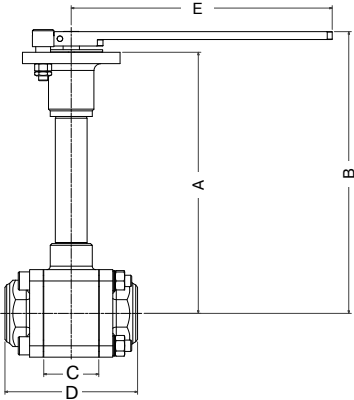

**WARNING**

The products described in this catalog can expose you to chemicals, including Lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to [www.p65warnings.ca.gov](http://www.p65warnings.ca.gov).

# Check Valves

## Overview

Parker Bestobell cryogenic check valves are used in pipelines to prevent the backflow of the media. Parker Bestobell offers two types of cryogenic check valves: lift and swing check valves.

Lift check valves are recommended for use with pipelines with high pressures. The media to lift check valves must always enter below the seat. The valve's disc is then lifted off its seat by higher pressure of inlet media to allow flow to the outlet end. Parker Bestobell cryogenic lift check valves feature a cone seat design for a tight shut-off. A guideway keeps the motion of the disc on a vertical line, so the check valve can reseal

### Function:

- Non-return valve
- Backflow prevention

### Applications:

- Transportation of Liquefied Gases
- Storages of Liquefied Gases
- Gas Processing

properly when the flow stops by gravity or is reversed by backflow. These lift check valves are suitable for installation with the upward flow in a horizontal or vertical position.

Parker Bestobell cryogenic swing check valves have a full bore design with a wide opening that allows high flow rates at low-pressure drops. These valves should not be used on lines with pulsating flow, where a constantly fluctuating disc can destroy the seating elements. A swing check valve automatically closes as pressure decreases and prevents backflow. These swing check valves should only be installed horizontally.

Valve size	DN15 - DN100
Maximum Working Pressure (MWP)	50 bar (725 PSI) dependent on end connections
Working temperature	-196°C to +65°C (-319°F to +149°F)
End connections	NPT, BSP, Socket Weld, Butt Weld, Flanged
Body materials	Bronze, Stainless Steel
Suitable for media type	Group 1 gases Cleaned for oxygen service
Design and testing standards	ASTM B31.1, BS EN 1626, BS ISO 21011 Optional full material traceability backed by BS EN 10204 3.1/3.2 certification
Approvals	CRN, UKCA and PED approved
Marking	CE and UKCA marked




Parker Bestobell Cryogenic Bronze Lift Check Valve (DN 25; BSP-PL Female Ends)



Parker Bestobell Cryogenic Stainless Steel with Bronze Internals Lift Check Valve (DN 25; Flange CL150 Ends)




Parker Bestobell Cryogenic Full Stainless Steel Swing Check Valve (DN 25; BSP-PL Female Ends)


**WARNING**

The products described in this catalog can expose you to chemicals, including Lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to [www.p65warnings.ca.gov](http://www.p65warnings.ca.gov).

## Features, Benefits and Values

Reference	Feature	Benefit	Value
1	Bolted bonnet	Ease of maintenance Reduced maintenance area Allows for thermal expansion and contraction at cryogenic temperatures Eliminates leakage at the bonnet gasket	<b>Safety</b> <b>Reliability</b> <b>Ease to Operation</b>
2	Replaceable disc and seal	Ease of maintenance	<b>Ease to Operation</b>
3	PTFE seal	Ensures tight shut off Fast/easy maintenance	<b>Safety</b> <b>Ease to Operation</b>
4	Offset centre of gravity of the disc (swing check valves only)	Ensures valve is fully closed when the flow reaches zero	<b>Safety</b>
5	Unique cover (swing check valves only)	Error-proof (Poka Yoke) design and flow direction arrow prevent incorrect valve installation	<b>Safety</b> <b>Ease to Operation</b>
N/A	Full bore	High flow Low pressure drop Increased media velocity	<b>Performance</b>

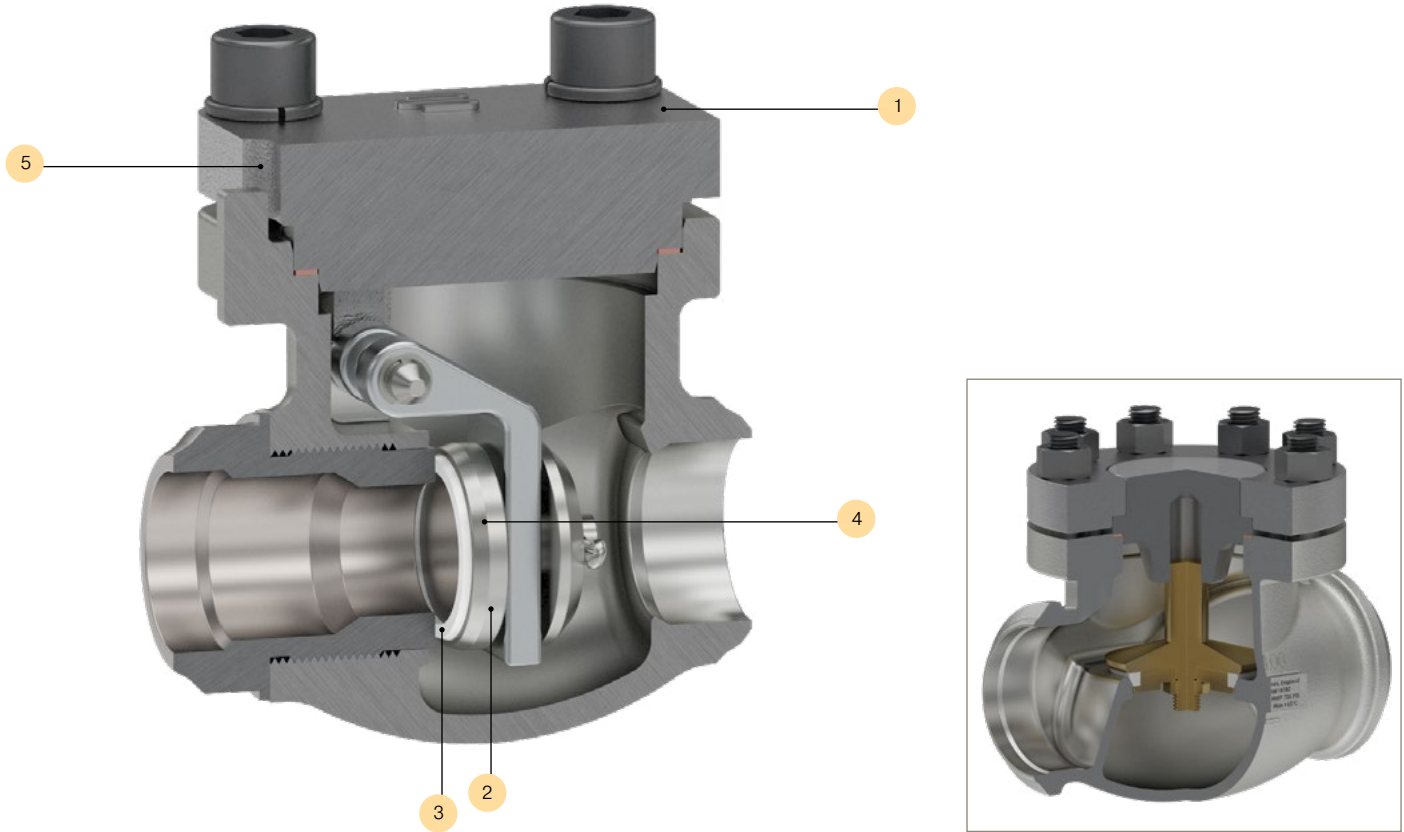

**WARNING**

The products described in this catalog can expose you to chemicals, including Lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to [www.p65warnings.ca.gov](http://www.p65warnings.ca.gov).




# Check Valves

## Technical Information

### Bill of Materials

	Description	Bronze	Stainless Steel with Bronze Internals	Full Stainless Steel
		Lift Check Valve CGB Series	Lift Check Valve CGT Series	Swing Check valve CHC Series
1	Body	Gun Metal BS EN 1982 CC491K		Stainless Steel ASTM A351 CF8M
2	Cover	Stainless Steel BS EN 10088-3 1.4301		Stainless Steel ASTM A351 CF8M
3	Disc	HT Brass BS EN 12164 CW 721R		Stainless Steel BS EN 10088-3 1.4401
4	Seal	Virgin PTFE		
5	Gasket	Sigma 511		
6	Fasteners	Stainless Steel ASTM A351 CF8M		
7	Bonnet flange	Stainless Steel ASTM A269 TP304L		N/A
8	Arm	N/A		Stainless Steel ASTM A351 CF8M

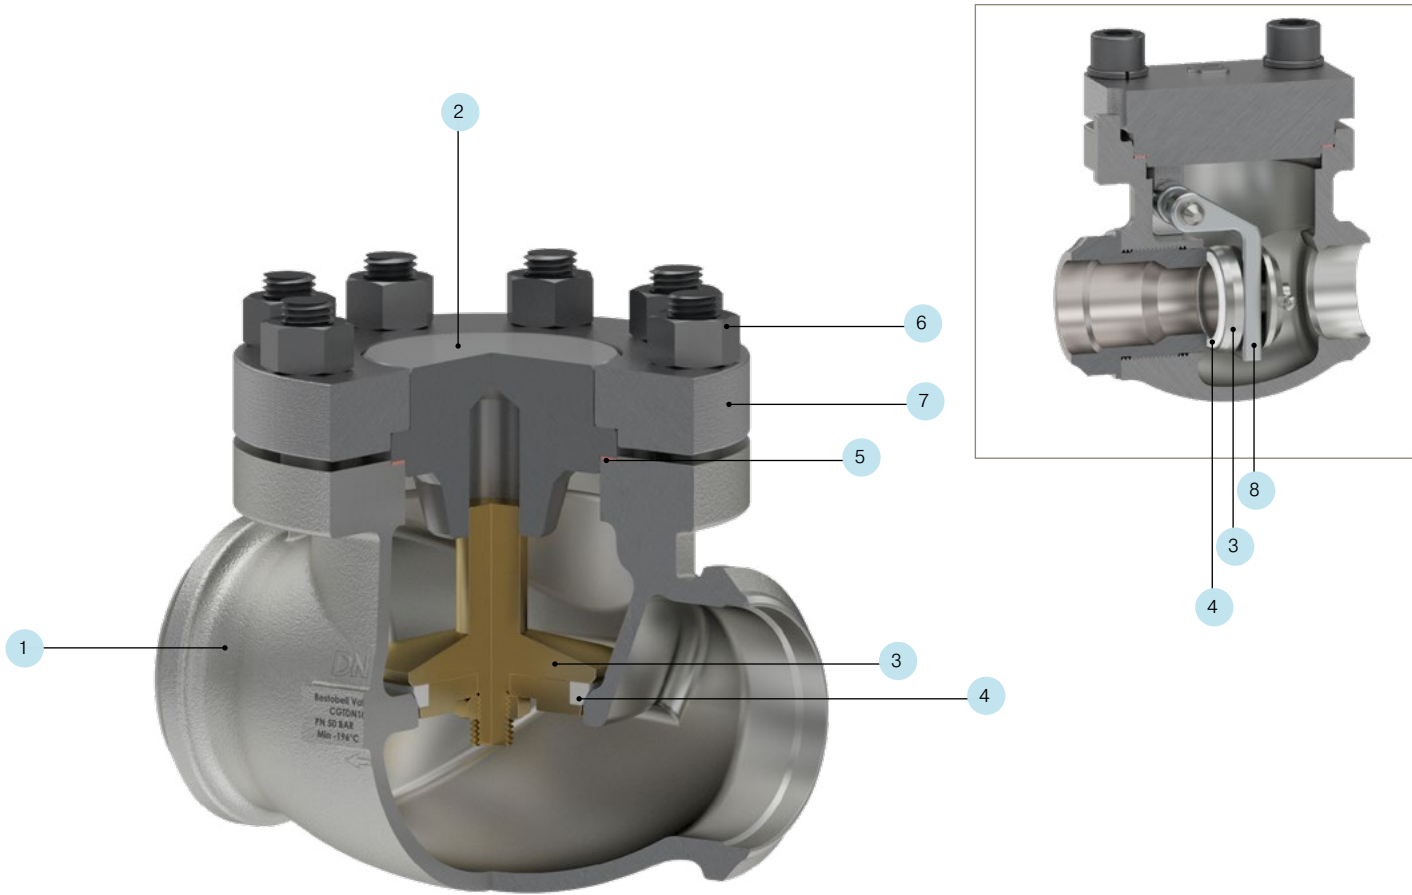

**WARNING**  
The products described in this catalog can expose you to chemicals, including Lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to [www.p65warnings.ca.gov](http://www.p65warnings.ca.gov).

## Ordering Information

### Lift Check Valves - Bronze CGB Series


CGB		DN15		TA		TA		B	
Series		Valve Size		Inlet Connection		Outlet Connection		Bonnet Type	
Cryogenic Lift Check Valves - Bronze	CGB	15 mm	DN15	BSP-PL Female	TA	BSP-PL Female	TA	Bolted	B
		25 mm	DN25	BSP-TR Female	TC	BSP-TR Female	TC		
		40 mm	DN40	NPT Female	TE	NPT Female	TE		
		50 mm	DN50	Screwed Schedule 10 Stainless Steel Stubs	ST	Screwed Schedule 10 Stainless Steel Stubs	ST		

- Notes:**
- Inlet and outlet connections can be of different types.
  - Options available on request: Spring-loaded; DN6, DN10 size valves; Socket Weld end connections.

### Specifications

#### Threaded Ends/Threaded Ends with Stainless Steel Stubs

Valve Size		DN15 15 mm	DN25 25 mm	DN40 40 mm	DN50 50 mm
A	mm	68	92	121	146
B	mm	51	71	84	107
C	mm	55	66	81	108
Cv	US GPM	3.6	13.2	26.5	43.0
Weight	kg	1.0	1.8	3.7	6.4
Opening Pressure	PSI	0.37	0.37	0.24	0.21

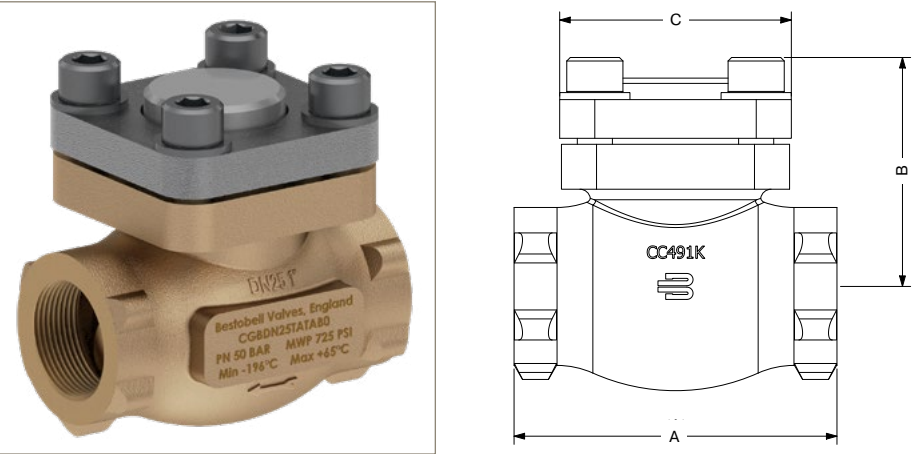

**WARNING**  
The products described in this catalog can expose you to chemicals, including Lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to [www.p65warnings.ca.gov](http://www.p65warnings.ca.gov).

# Check Valves

## Ordering Information

### Lift Check Valves - Stainless Steel with Bronze Internals

#### CGT Series

CGT		DN25		B1		B1		B	
Series		Valve Size		Inlet Connection		Outlet Connection		Bonnet Type	
Cryogenic Lift Check Valves - Stainless Steel with Bronze Internals	CGT	15 mm	DN15	Butt Weld Schedule 10	B1	Butt Weld Schedule 10	B1	Bolted	B
		25 mm	DN25						
		40 mm	DN40						
		50 mm	DN50						
		65 mm	DN65						
		80 mm	DN80						
		100 mm	DN100						
				Inlet Connection		Outlet Connection			
				Socket Weld		Socket Weld			
				Flange ASME CL150		Flange ASME CL150			
				Flange ASME CL300		Flange ASME CL300			


#### Notes:

- Inlet and outlet connections must be of the same type.
- Options available on request: Spring; DIN Flanges; Butt Weld Schedule 40; DN6, DN10, DN150 size valves.

## Specifications

### Butt Weld/Socket Weld Ends


Valve Size		DN15 15 mm	DN25 25 mm	DN40 40 mm	DN50 50 mm	DN65 65 mm	DN80 80 mm	DN100 100 mm
A	mm	68	92	121	146	178	178	292
B	mm	51	71	84	107	145	145	193
C	mm	55	66	81	108	130	133	169
Cv	US GPM	3.6	13.2	26.5	43.0	68	98	174
Weight	kg	1.0	1.6	3.2	6.5	9.0	13.4	35.0
Opening pressure	PSI	0.37	0.37	0.24	0.21	0.25	0.27	0.34

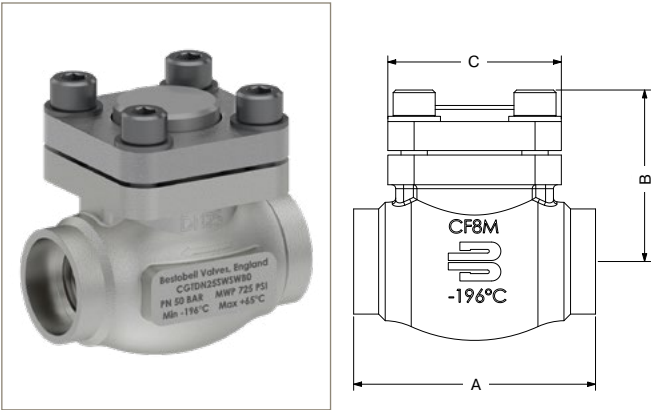

### Flanged Ends

Valve Size			DN15 15 mm	DN25 25 mm	DN40 40 mm	DN50 50 mm	DN65 65 mm	DN80 80 mm	DN100 100 mm
A	mm	Class 150	115	140	165	203	216	243	350
		Class 300	130	160	200	230	290	310	350
G	mm	Class 150	89	108	127	152	178	190	228
		Class 300	95	124	155	165	191	210	254
Flange thickness	mm	Class 150	13.00	14.50	17.50	19.05	25.40	24.90	23.90
		Class 300	14.00	18.00	21.00	22.00	25.00	28.00	32.00
Weight	kg	Class 150	1.9	4.2	7.7	12.3	16.0	22.4	67.0
		Class 300	2.2	4.5	8.6	13.5	19.5	27.4	53.0

Dimensions B, C and Cv values are the same as for Butt Weld/Socket Weld ends.

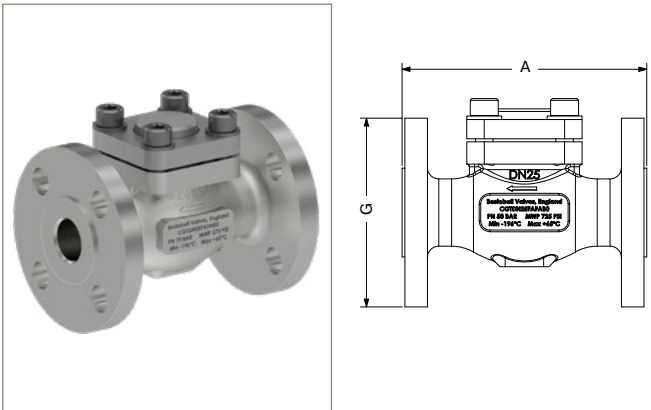

#### WARNING

The products described in this catalog can expose you to chemicals, including Lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to [www.p65warnings.ca.gov](http://www.p65warnings.ca.gov).

## Swing Check Valves - Full Stainless Steel

### CHC Series

CHC		DN25		SW		SW				
Series		Valve Size		Inlet Connection		Outlet Connection				
Cryogenic Swing Check Valves - Full Stainless Steel	CGT	25 mm	DN25	Butt Weld Schedule 10	B1	Butt Weld Schedule 10	B1			
		40 mm	DN40							
		50 mm	DN50							
		80 mm	DN80							
				Inlet Connection		Outlet Connection				
				Socket Weld		Socket Weld				
				Flange ASME CL150		Flange ASME CL150				
				Flange ASME CL300		Flange ASME CL300				


#### Notes:

- Inlet and outlet connections must be of the same type.
- Options available on request: DIN Flanges; Butt Weld Schedule 40; DN65, DN100 (only flanged end connections CL150).

## Specifications

### Butt Weld/Socket Weld Ends


Valve Size		DN25 25 mm	DN40 40 mm	DN50 50 mm	DN80 80 mm
A	mm	92	121	146	260
B	mm	64	73	92	110
C	mm	70	110	125	155
Cv	US GPM	20	48	90	192
Weight	kg	2.0	3.8	5.9	15.2
Opening pressure	PSI	0.21	0.22	0.22	0.50

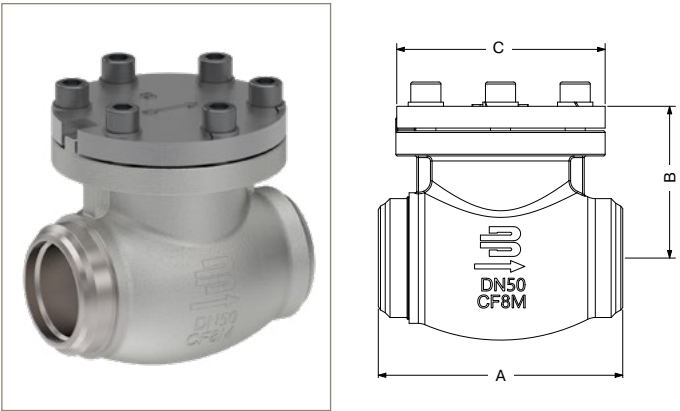

### Flanged Ends

Valve Size			DN25 25 mm	DN40 40 mm	DN50 50 mm	DN80 80 mm
A	mm	Class 150	127	200	203	241
		Class 300	208	N/A	267	N/A
G	mm	Class 150	123.8	127.0	152.4	190.5
		Class 300	108.0	N/A	165.0	N/A
Flange thickness	mm	Class 150	11.00	19.05	19.05	23.80
		Class 300	17.50	N/A	22.20	N/A
Weight	kg	Class 150	3.2	7.2	8.0	20.0
		Class 300	4.0	N/A	9.0	N/A

Dimensions B, C and Cv values are the same as for Butt Weld/Socket Weld ends.

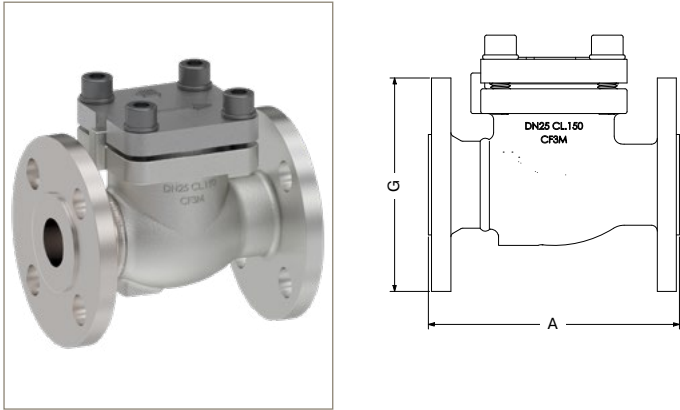

#### WARNING

The products described in this catalog can expose you to chemicals, including Lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to [www.p65warnings.ca.gov](http://www.p65warnings.ca.gov).

# Strainers

## Overview

Parker Bestobell cryogenic T-type strainers are used in pipelines to prevent contaminants from entering an end product in industrial gas applications. The large clearance around the entire strainer circumference ensures an effective straining function. The 100 mesh strainer element is compatible with all common cryogenic liquids and gases and is supported by a metal cylinder for additional strength.

These cryogenic strainers should only be installed horizontally with the cover at the bottom.

**Function:**

- Prevent contaminants in media

**Applications:**

- Transportation of Liquefied Gases
- Storages of Liquefied Gases
- Gas Processing



Parker Bestobell Cryogenic Strainer in Bronze (DN 50; BSP-PL Female Ends)




Parker Bestobell Cryogenic Strainer in Stainless Steel (DN 40; Butt Weld Schedule 10 Ends)




Parker Bestobell Cryogenic Strainer in Stainless Steel (DN 40; Flange ASME CL150 Ends)

### Features, Benefits and Values

Reference	Feature	Benefit	Value
A	Bolted bonnet	Ease of maintenance Reduced maintenance area Allows for thermal expansion and contraction at cryogenic temperatures Eliminates leakage at the bonnet gasket	<b>Safety</b> <b>Reliability</b> <b>Ease of Operation</b>
B	Large strainer area	Ensures full flow of fluid through the unit	<b>Performance</b>
N/A	Full bore	High flow Low pressure drop Increased media velocity	<b>Performance</b>

**WARNING**


The products described in this catalog can expose you to chemicals, including Lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to [www.p65warnings.ca.gov](http://www.p65warnings.ca.gov).

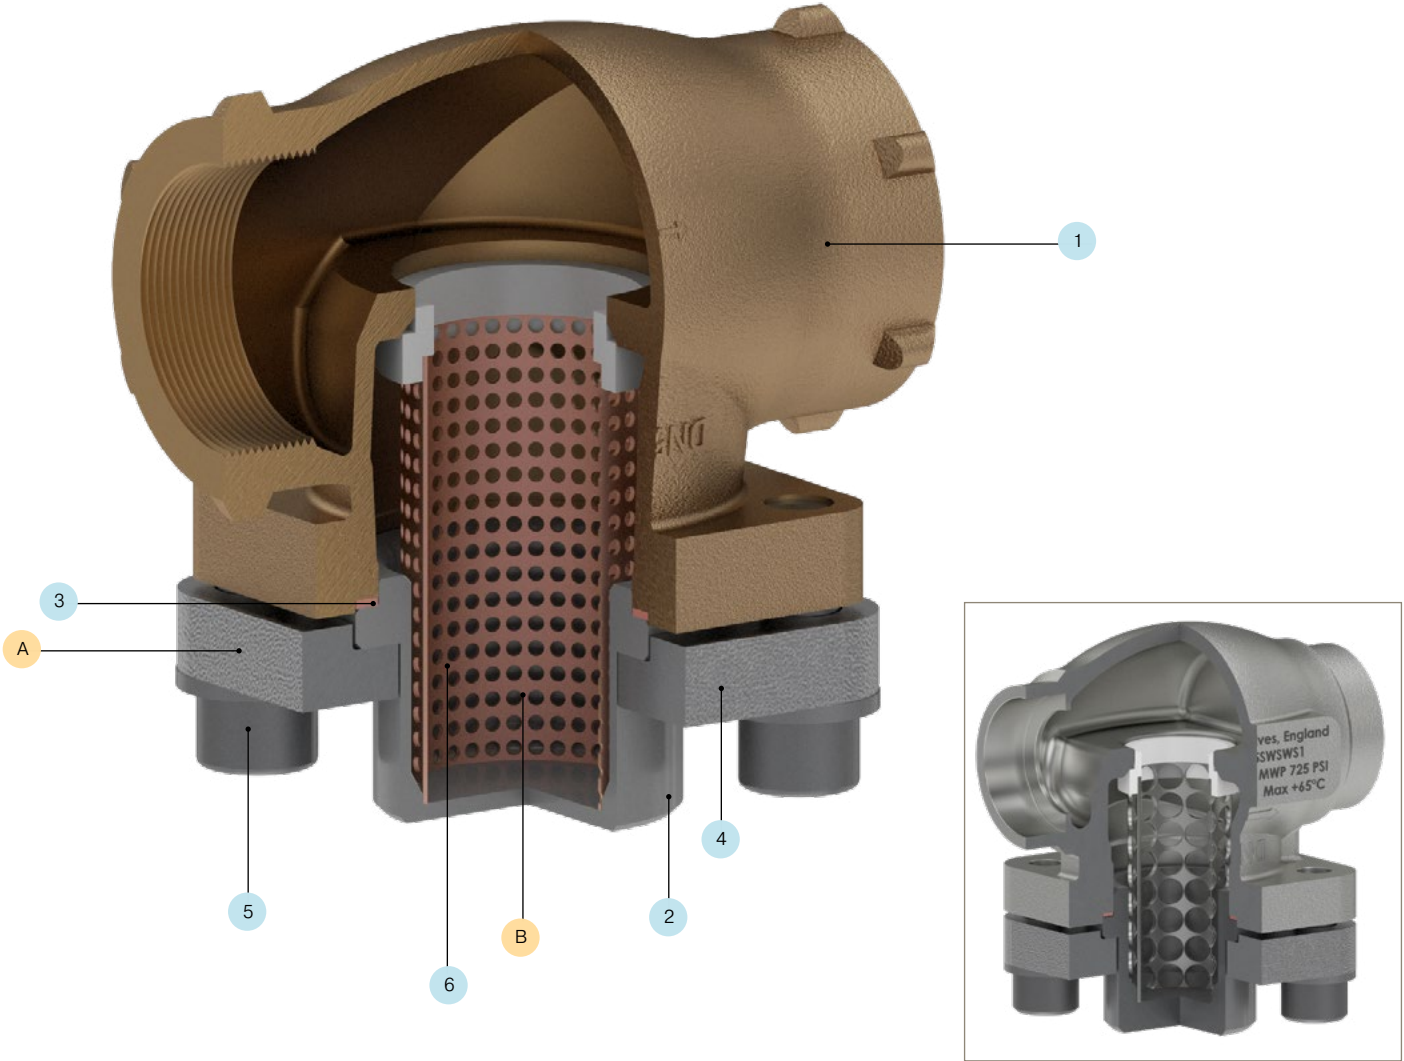

## Technical Information

### Bill of Materials

	Description	Bronze CSB Series	Stainless Steel CSS Series
1	Body	Gunmetal BS EN 1982 CC491K	Stainless Steel ASTM A351 CF8M
2	Cover	Stainless Steel BS EN 10088-3 1.4401	
3	Gasket	Sigma 511	
4	Loose Flange	Stainless Steel ASTM A351 CF8M	
5	Fasteners	Stainless Steel BS6105 A2 / A4 Gr.70	
6	Filter	Copper / Monel Gauze / Stainless Steel 304	

**WARNING**

The products described in this catalog can expose you to chemicals, including Lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to [www.p65warnings.ca.gov](http://www.p65warnings.ca.gov).



# Strainers

## Ordering Information

### Strainers - Bronze CSB Series


CSB		DN25		TE		TE		F		1	
Series		Valve Size		Inlet Connection		Outlet Connection		Filter Material		Filter Size	
Cryogenic Strainers - Bronze	CSB	15 mm	DN15	BSP-PL Female	TA	BSP-PL Female	TA	Copper/Monel	F	100 Mesh	1
		25 mm	DN25	BSP-TR Female	TC	BSP-TR Female	TC	Stainless Steel	S	40 Mesh	4
		40 mm	DN40	NPT Female	TE	NPT Female	TE			60 Mesh	6
		50 mm	DN50	Screwed Schedule 10 Stainless Steel Stubs	ST	Screwed Schedule 10 Stainless Steel Stubs	ST				

- Notes:**
- Inlet and outlet connections can be of different types.
  - Options available on request: DN6, DN10 size valves; Socket Weld end connections.

## Specifications

### Threaded Ends/Threaded Ends with Stainless Steel Stubs

Valve Size		DN15 15 mm	DN25 25 mm	DN40 40 mm	DN50 50 mm
A	mm	68	92	121	146
B	mm	55	66	81	108
Cv	US GPM	16	44	80	128
Weight	kg	1.0	1.8	3.1	5.1

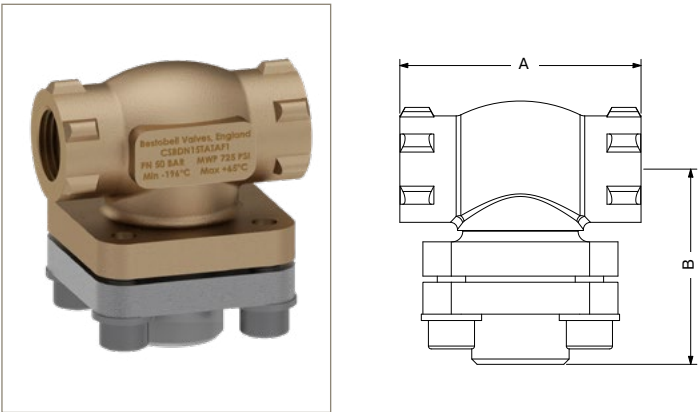

**WARNING**

The products described in this catalog can expose you to chemicals, including Lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to [www.p65warnings.ca.gov](http://www.p65warnings.ca.gov).

### Strainers - Full Stainless Steel CSS Series


CSS		DN40		FA		FA		F		1					
Series		Valve Size		Inlet Connection		Outlet Connection		Filter Material		Filter Size					
Cryogenic Strainers - Full Stainless Steel	CSS	15 mm	DN15	Butt Weld Schedule 10	B1	Butt Weld Schedule 10	B1	Copper/Monel	F	100 Mesh	1				
		25 mm	DN25					Socket Weld	SW	Flange ASME CL150	FA	Stainless Steel	S	40 Mesh	4
		40 mm	DN40											Flange ASME CL300	FC
		50 mm	DN50												
		65 mm	DN65												
		80 mm	DN80												
		100 mm	DN100												

- Notes:**
- Inlet and outlet connections must be of the same type.
  - Options available on request: DIN Flanges; Butt Weld Schedule 40; DN6, DN10, DN150 size valves.

## Specifications

### Butt Weld/Socket Weld Ends


Valve Size		DN15 15 mm	DN25 25 mm	DN40 40 mm	DN50 50 mm	DN65 65 mm	DN80 80 mm	DN100 100 mm
A	mm	68	92	121	146	178	178	292
B	mm	55	66	81	108	145	160	229
Cv	US GPM	16	44	80	128	192	260	390
Weight	kg	1.0	2.0	2.6	5.4	7.0	10.0	33.0

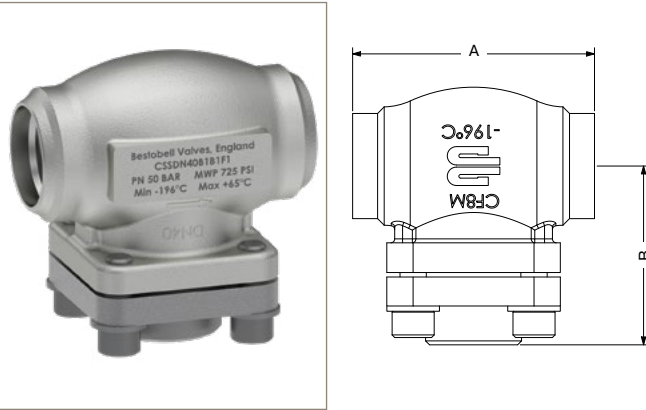

### Flanged Ends

Valve Size			DN15 15 mm	DN25 25 mm	DN40 40 mm	DN50 50 mm	DN65 65 mm	DN80 80 mm	DN100 100 mm
A	mm	Class 150	115	140	165	203	216	243	350
		Class 300	130	160	200	230	290	310	350
G	mm	Class 150	89	108	127	152	178	190	228
		Class 300	95	124	155	165	191	210	254
Flange thickness	mm	Class 150	13.00	14.50	17.50	19.05	25.40	24.90	23.90
		Class 300	14.00	18.00	21.00	22.00	25.00	28.00	32.00
Weight	kg	Class 150	2.0	4.3	8.3	13.0	18.8	26.5	46.0
		Class 300	2.2	4.5	8.6	13.5	19.5	27.4	53.0

Dimension B and Cv values are the same as for Butt Weld/Socket Weld ends.

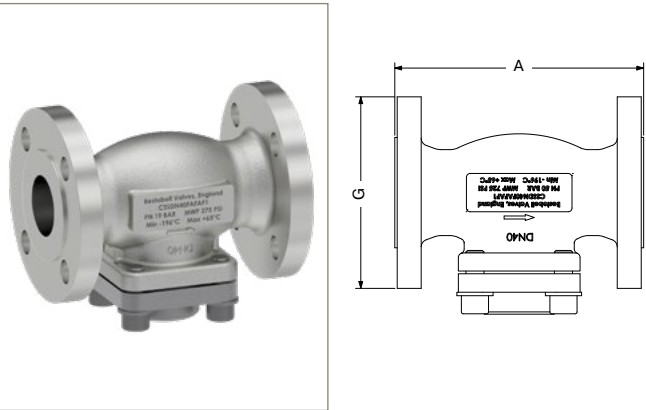

**WARNING**

The products described in this catalog can expose you to chemicals, including Lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to [www.p65warnings.ca.gov](http://www.p65warnings.ca.gov).

# Safety Relief Valves

## Overview

Parker Bestobell cryogenic safety relief valves are designed to protect piping, cryogenic static storage, and trailer tanks against damage from excessive over-pressure.

Each relief valve is characterized by a set pressure, which is the pressure at which the valve starts to open to discharge the excess pressure in the tank or piping. The Parker Bestobell cryogenic safety relief valve is designed with an accuracy of +/-3%, which means that the valve starts to open within the limits of +/-3% of the set pressure.

When the excess pressure is released, the valve returns to the closed position (reseats), thus preventing the waste of expensive cryogenic gases. The valve's minimum pressure when closed, is around 92% of the set pressure.

**Function:**

- Prevents over-pressure

**Applications:**

- Transportation of Liquefied Gases
- Storages of Liquefied Gases
- Gas Processing

A lift-limiting stop helps prevent valve instability when discharging from or into the lengthy piping runs that can be a part of cryogenic systems.

Each valve is individually set to the required set pressure, which is clearly marked on the body, flow tested, and then stamped with the date of manufacture and its own unique serial number before dispatch. All valves are supplied protected with a tamper-proof seal.


Parker Bestobell cryogenic safety relief valves are available in three sizes, defined by the orifice diameter. Each size is available with a variety of inlet and outlet connections.

The valve can be installed vertically and horizontally.


Valve size	DN10 - DN20
Maximum Working Pressure (MWP)	Bronze: 40 bar (580 PSI) Stainless Steel: 30 bar (435 PSI)
Working temperature	-196°C to +65°C (-319°F to +149°F)
End connections	NPT, BSP
Body materials	Bronze, Stainless Steel
Suitable for media type	Group 1 gases Cleaned for oxygen service
Design and testing standards	ASTM B31.1, BS EN 1626, BS ISO 21011 Optional full material traceability backed by BS EN 10204 3.1/3.2 certification
Approvals	CRN, UKCA and PED approved
Marking	CE and UKCA marked

## Features, Benefits and Values

Reference	Feature	Benefit	Value
A	Lift-limiting stop	Smooth operation Constant discharge pressure	Safety Performance Reliability
B	Unique serial number	Helps to identify each item Warranty control Enables location of the relevant certificate	Performance
C	Reseat design	Recloses and prevents loss of fluid when system pressure returns to acceptable	Performance Lower overall cost
D	Anti-tamper	Protection from unauthorized tampering	Safety
N/A	Weather proof cap	Prevents dirt and moisture from entering the valve	Reliability
N/A	Lever	Manual override to open the valve manually and release pressure from the valve in case of emergency	Performance & Safety

**WARNING**


The products described in this catalog can expose you to chemicals, including Lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to [www.p65warnings.ca.gov](http://www.p65warnings.ca.gov).

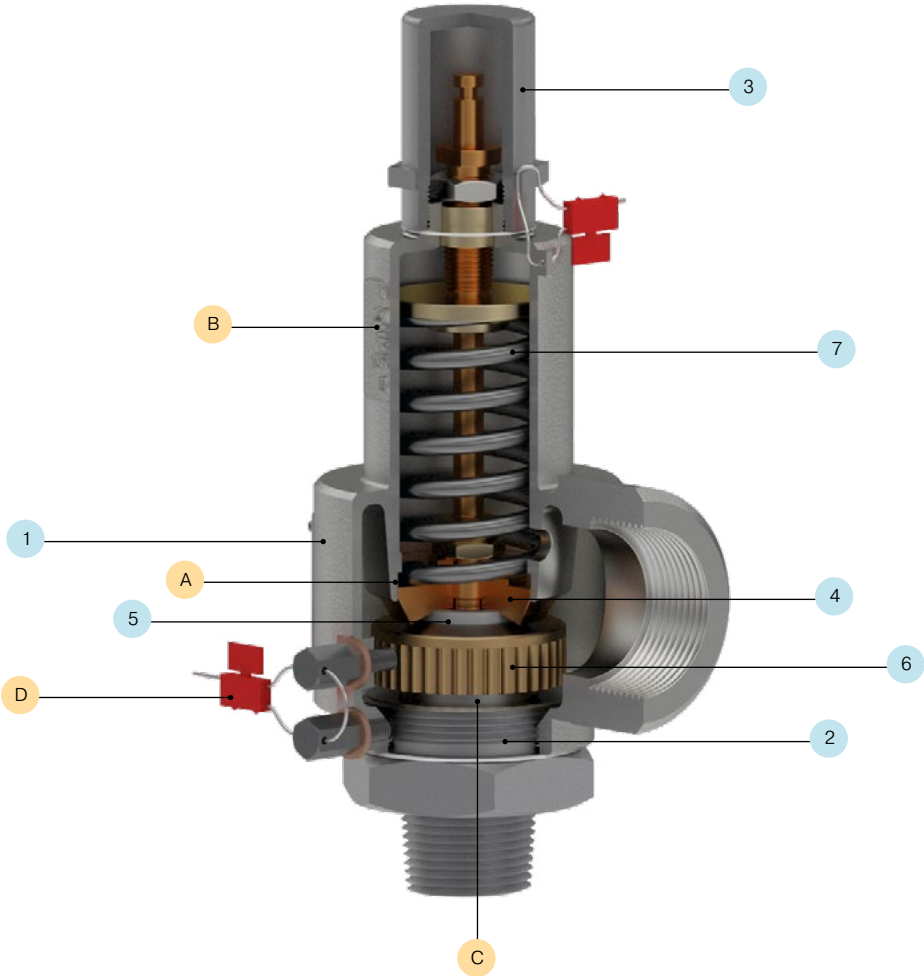

## Technical Information

### Bill of Materials

	Description	Bronze CWF, CWL Series	Stainless Steel CWT Series
1	Body	Gunmetal BS EN 1982 CC491K	Stainless Steel ASTM A351 CF8M
2	Seat	HT Brass BS EN 12164 CW721R	
3	Adjusting cap	Gunmetal BS EN 1982 CC491K	SS ASTM A351 CF8M
4	Disc DN10	Brass BS EN 12163 CW712R	
	Disc DN15, DN20	Phosphor Bronze BS EN 12163 CW451R	
5	Seal	PTFE TF7196	
6	Blow down ring	Gunmetal BS EN 1982 CC491K	
7	Spring	Stainless Steel 302 S26 BS2056	
N/A	Weather proof cap	HT Brass BS EN 12164 CW721R	SS 316 BS EN 10088-3 1.4401
N/A	Lever	Gunmetal BS EN 1982 CC491K	N/A

**WARNING**

The products described in this catalog can expose you to chemicals, including Lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to [www.p65warnings.ca.gov](http://www.p65warnings.ca.gov).

# Safety Relief Valves

## Ordering Information

### Safety Relief Valves - Orifice Diameter 11.4 mm CWF20/CWL20/CWT20 Series

CWF		20		J		M		55		1	
Series		Orifice Diameter		Inlet Connection		Outlet Connection		Set Pressure (in PSI)		Options (Bronze valves only)	
Cryogenic Safety Relief Valves - Bronze (without lever)	CWF	11.4 mm	20	1/2" BSP-PL Male	J	3/4" BSP-PL Female	H	Insert number from 25 to 580 (See table 1)	No Drain	*	
				1/2" BSP-TR Male	K	3/4" BSP-TR Female	J		Elbow	1	
Cryogenic Safety Relief Valves - Bronze (with lever)	CWL			1/2" NPT Male	L	3/4" NPT Female	K		Inlet Adaptor, Elbow, Downpipe & Coupling	2	
				3/4" BSP-PL Male	M	1" BSP-PL Female	L			3	
Cryogenic Safety Relief Valves - Stainless Steel with Bronze Internals (without lever)	CWT			3/4" BSP-PL Male c/w 60 Deg Cone	N	1" BSP-PL Male c/w 60 Deg Cone	M			Elbow, Downpipe & Coupling	4
				3/4" BSP-TR Male	P	1" BSP-TR Female	N				
				3/4" NPT Male	R	1" BSP-TR Male	P				
						1" NPT Female	R				
*No designator required.											

Table 1 - Set Pressure (in PSI)																			
25	41	57	73	92	116	140	164	188	212	245	285	325	365	405	445	485	525	565	
27	43	59	75	95	119	143	167	191	215	250	290	330	370	410	450	490	530	570	
29	45	61	77	98	122	146	170	194	218	255	295	335	375	415	455	495	535	575	
31	47	63	79	101	125	149	173	197	220	260	300	340	380	420	460	500	540	580	
33	49	65	80	104	128	152	176	200	225	265	305	345	385	425	465	505	545		
35	51	67	83	107	131	155	179	203	230	270	310	350	390	430	470	510	550		
37	53	69	86	110	134	158	182	206	235	275	315	355	395	435	475	515	555		
39	55	71	89	113	137	161	185	209	240	280	320	360	400	440	480	520	560		

#### Notes:

- Inlet and outlet connections can be of different types.
- Offered with No Drain as standard. See the table above for available options. Options available on request: Full Stainless Steel valves.




Parker Bestobell Cryogenic Safety Relief Valve in Stainless Steel without Lever (Male NPT Inlet x Female NPT Outlet; No Drain)



Parker Bestobell Cryogenic Safety Relief Valve in Bronze without Lever (BSP-TR Male Inlet x BSP-PL Female Outlet; Elbow)



Parker Bestobell Cryogenic Safety Relief Valve in Bronze without Lever (BSP-TR Male Inlet x BSP-PL Female Outlet; Inlet Adaptor, Elbow, Downpipe & Coupling)

**WARNING**

The products described in this catalog can expose you to chemicals, including Lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to [www.p65warnings.ca.gov](http://www.p65warnings.ca.gov).

### Safety Relief Valves - Orifice Diameter 14.0 mm CWF30/CWT30 Series

CWF		30		M	U	25		
Series		Orifice Diameter		Inlet Connection		Outlet Connection		Set Pressure (in PSI)
Cryogenic Safety Relief Valves - Bronze (without lever)	CWF	14.0 mm	30	3/4" BSP-PL Male	M	1-1/4" BSP-PL Female	T	Insert number from 25 to 580 (See table 1)
Cryogenic Safety Relief Valves - Stainless Steel with Bronze Internals (without lever)	CWT	14.0 mm	30	3/4" BSP-TR Male	P	1-1/4" BSP-TR Female	U	
				3/4" NPT Male	R	1-1/4" NPT Female	V	
				1" BSP-PL Male	S			
				1" BSP-TR Male	T			
				1" NPT Male	U			

#### Notes:

- Inlet and outlet connections can be of different types.
- Offered with No Drain as standard. Options available on request: Full Stainless Steel valves.

### Safety Relief Valves - Orifice Diameter 20.5 mm CWF40/CWT40 Series

CWF		40		M	U	230		
Series		Orifice Diameter		Inlet Connection		Outlet Connection		Set Pressure (in PSI)
Cryogenic Safety Relief Valves - Bronze (without lever)	CWF	20.5 mm	40	1" BSP-TR Male	T	1-1/4" BSP-PL Female	T	Insert number from 25 to 435 (See table 1)
				1" NPT Male	U	1-1/4" BSP-TR Female	U	
				1-1/4" BSP-PL Male	V	1-1/4" NPT Female	V	
				1-1/4" BSP-TR Male	W	1-1/2" BSP-PL Female	W	
				1-1/4" NPT Male	Y	1-1/2" NPT Female	Z	
Cryogenic Safety Relief Valves - Stainless Steel with Bronze Internals (without lever)	CWT							


#### Notes:


- Inlet and outlet connections can be of different types.
- Offered with No Drain as standard. Options available on request: Full Stainless Steel valves.

## Specifications

### Threaded Ends

Valve Size		DN10	DN15	DN20
Orifice Diameter	mm	11.4	14.0	20.5
A	mm	48	64	64
B	mm	130	133	133
C	mm	60	73	73
Coefficient of discharge		0.37	0.53	0.45
Weight	kg	1.5	3.0	3.0

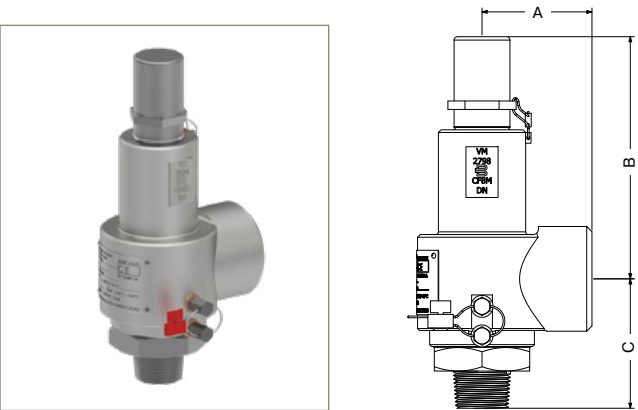

**WARNING**

The products described in this catalog can expose you to chemicals, including Lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to [www.p65warnings.ca.gov](http://www.p65warnings.ca.gov).



# Thermal Relief Valves

## Overview

Parker Bestobell cryogenic thermal relief valves are compact valves designed to prevent damage to piping and equipment caused by the expansion of liquefied gases. They relieve the overpressure in a fluid piping system caused by a temperature rise.

When liquefied gases are trapped between two closed valves (a situation known as a liquid lock), the reheating and consequent boiling can lead to a dangerous rise in pressure. The Parker Bestobell cryogenic thermal relief valves have been designed specifically for this application. The materials used prevent the valve from sticking in its seat even when left unused for long periods of time.

A set pressure, which characterizes each relief valve, defines when the valve starts to open to discharge excess pressure in the tank or piping. The Parker Bestobell cryogenic safety relief valves are designed with an accuracy of +/-3%, which means that the valves start to open within the limits of +/-3% of the set pressure.

### Function:

- Prevent pipe damage

### Applications:

- Transportation of Liquefied Gases
- Storages of Liquefied Gases
- Gas Processing



Parker Bestobell Cryogenic Thermal Relief Valve in Full Stainless Steel (12mm Two Ferrule A-LOK® Inlet and Outlet connections)



Parker Bestobell Cryogenic Thermal Relief Valve in Bronze (1/4" NPT Male Inlet and Protection Cap Outlet)

When the excess pressure is released, the valve returns to the closed position (reseats), thus preventing the waste of expensive cryogenic gases. Parker Bestobell cryogenic safety relief valves' minimum pressure, when closed, is around 50% of the set pressure.

The Parker cryogenic thermal relief valves have various outlet connections to suit the customers' requirements. The Stainless Steel valves are also available with integral A-LOK® two ferrule connections. These allow very simple implementation of leak-free connections for process, power, and instrumentation applications. A-LOK® fittings use an advanced two ferrule system for reliability and easy assembly and disassembly. No special tools are required, and the design ensures that all make and remake motion is transmitted axially to the tubing. Its mechanical integrity is uncompromised with no radial movement to stress the tubing.


These cryogenic thermal relief valves should be fitted with the outlet vertically downwards to prevent moisture ingress.

Valve size	DN6
Maximum Working Pressure (MWP)	40 bar (580 PSI)
Working temperature	-196°C to +65°C (-319°F to +149°F)
End connections	NPT, BSP, A-LOK® Fully Integrated Two Ferrule Connection
Body materials	Bronze, Stainless Steel
Suitable for media type	Group 1 gases Cleaned for oxygen service
Design and testing standards	ASTM B31.1, BS EN 1626, BS ISO 21011 Optional full material traceability backed by BS EN 10204 3.1/3.2 certification
Approvals	CRN, UKCA and PED approved
Marking	CE and UKCA marked

**WARNING**  
The products described in this catalog can expose you to chemicals, including Lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to [www.p65warnings.ca.gov](http://www.p65warnings.ca.gov).

## Features, Benefits and Values

Reference	Feature	Benefit	Value
A	Reseat design	Repeatable performance Prevents loss of fluid when system pressure returns to acceptable	Safety Performance Lower overall cost
B	A-LOK® end connections	Two ferrule system for leak-free operation No special tools required for installation	Safety Ease of operation Reliability
N/A	Unique serial number	Helps to identify each item Warranty control Enables location of the relevant certificate	Safety
N/A	Weather proof cap	Prevents dirt and moisture from entering the valve	Reliability

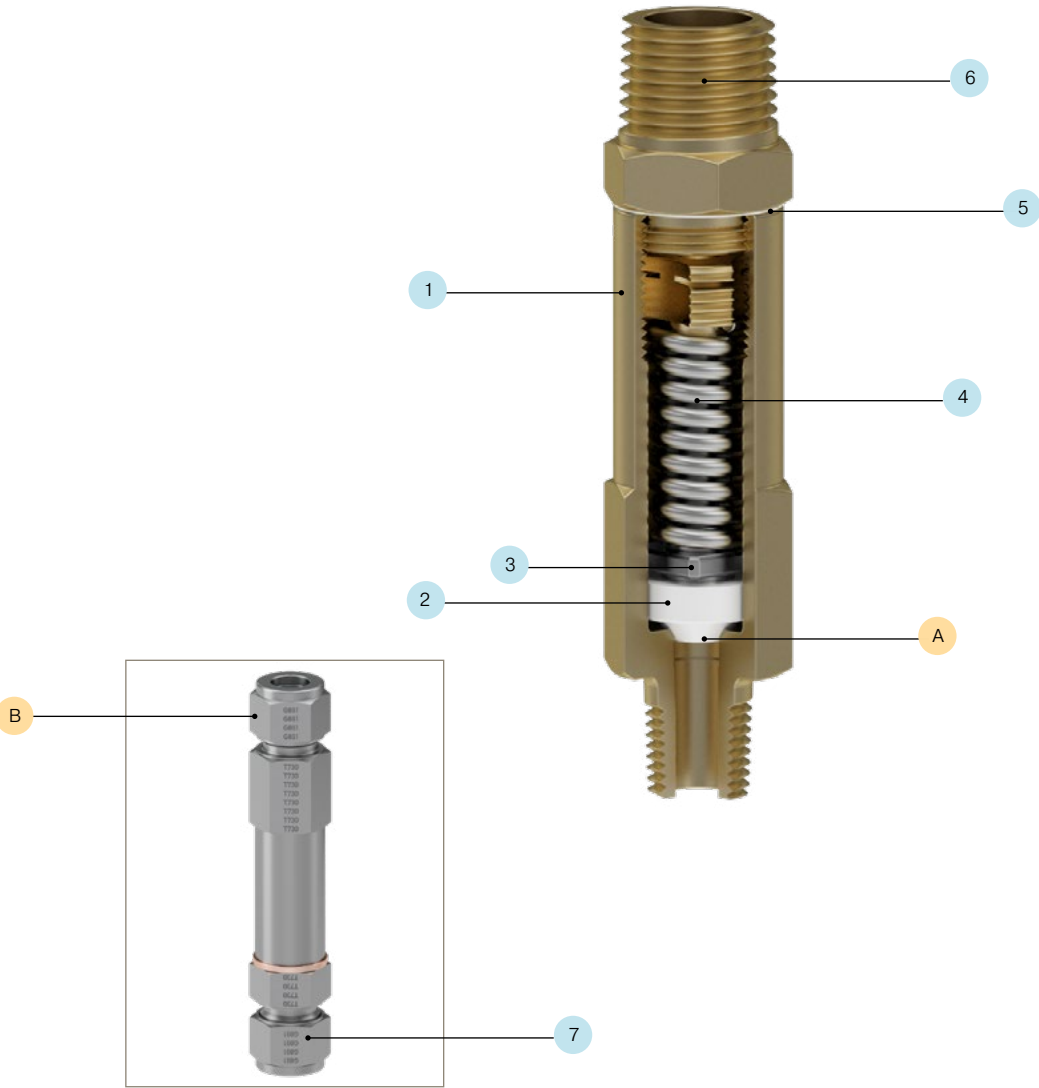


**WARNING**  
The products described in this catalog can expose you to chemicals, including Lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to [www.p65warnings.ca.gov](http://www.p65warnings.ca.gov).


# Thermal Relief Valves

## Technical Information

### Bill of Materials

	Description	Brass CVF Series	Full Stainless Steel CYF Series
1	Body	Naval Brass BS EN 12163 CW712R	Stainless Steel 316 BS EN 10088-3.1.4401
2	Seal	Hostafion Electro Carbon Filled	
3	Stem	Stainless Steel 10088-3 1.4401	Stainless Steel 316 BS EN 10088-3.1.4401
4	Spring	Stainless Steel 302 S26 BS 2056	
5	Washer	Copper/Virgin PTFE	
6	Adjusting cap	Naval Brass BS EN 12163 CW712R	Stainless Steel 304 BS EN 10088-3.1.4301
7	A-LOK® connections	N/A	Stainless Steel 316/316L

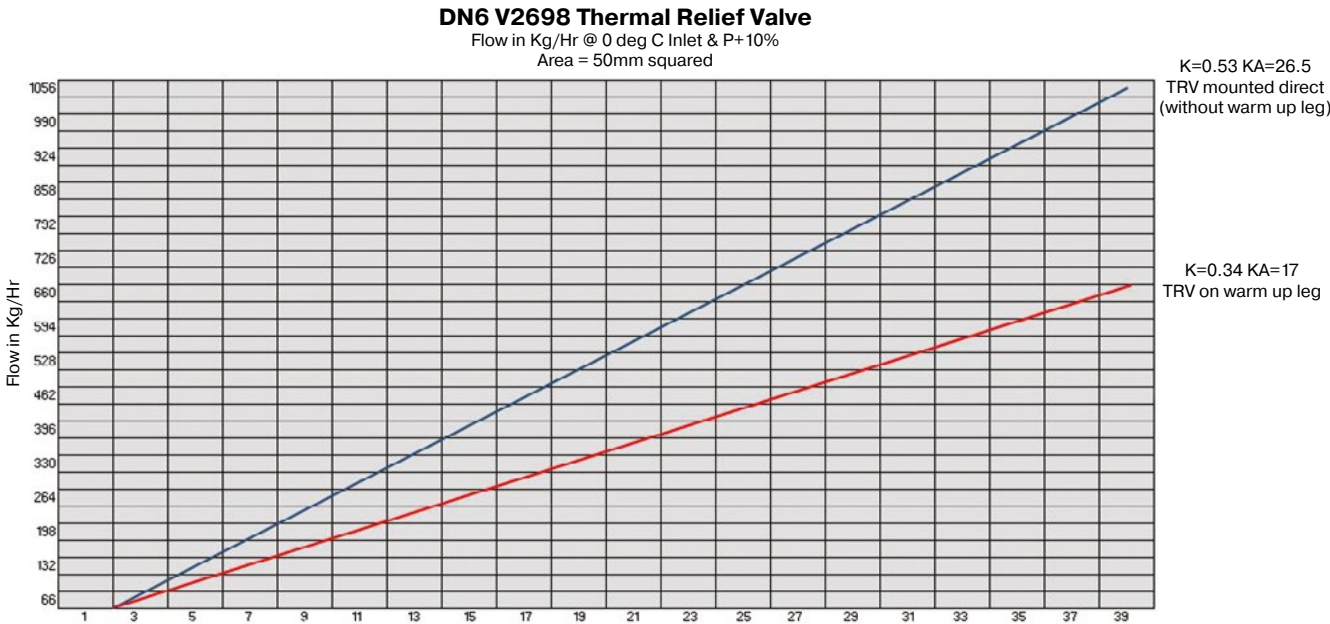

**WARNING**

The products described in this catalog can expose you to chemicals, including Lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to [www.p65warnings.ca.gov](http://www.p65warnings.ca.gov).

## Ordering Information

### Thermal Relief Valves - Bronze and Full Stainless Steel CVF/CYF Series

CVF

10

M

M

130


Series	Orifice Diameter	Inlet Connection	Outlet Connection	Set Pressure (in PSI)
Cryogenic Thermal Relief Valve - Bronze	8.0 mm	1/4" BSP-TR Male	Open to Atmosphere	Insert number from 25 to 580 (See table 1)
Cryogenic Thermal Relief Valve - Full Stainless Steel		1/4" NPT Male	Protection Cap	
		1/2" BSP-TR Male	Ring Pull	
		1/2" NPT Male	1/2" BSP-TR Male	
		12 mm A-LOK® 2	1/2" NPT Male	
			12 mm A-LOK® 2	


Table 1 - Set Pressure (in PSI)																			
25	41	57	73	92	116	140	164	188	212	245	285	325	365	405	445	485	525	565	
27	43	59	75	95	119	143	167	191	215	250	290	330	370	410	450	490	530	570	
29	45	61	77	98	122	146	170	194	218	255	295	335	375	415	455	495	535	575	
31	47	63	79	101	125	149	173	197	220	260	300	340	380	420	460	500	540	580	
33	49	65	80	104	128	152	176	200	225	265	305	345	385	425	465	505	545		
35	51	67	83	107	131	155	179	203	230	270	310	350	390	430	470	510	550		
37	53	69	86	110	134	158	182	206	235	275	315	355	395	435	475	515	555		
39	55	71	89	113	137	161	185	209	240	280	320	360	400	440	480	520	560		

**Note:**  
A-LOK® connections are available only with Stainless Steel body material option (CYF) with set pressures from 200 to 580 PSI - COMING SOON

### Specifications

Outlet Type		Open to Atmosphere	Ring Pull	Male Threaded	12 mm A-LOK®
A	mm	73.0	84.0	99.0	126.0
B (Inlet type)	inch/mm	1/4" Male BSPT/Male NPT or 1/2" Male BSPT/Male NPT			12 mm
Hexagon size	mm	22.2			
C	mm	8.0			
Coefficient of discharge		0.34			
Weight	kg	0.20	0.30	0.35	0.50

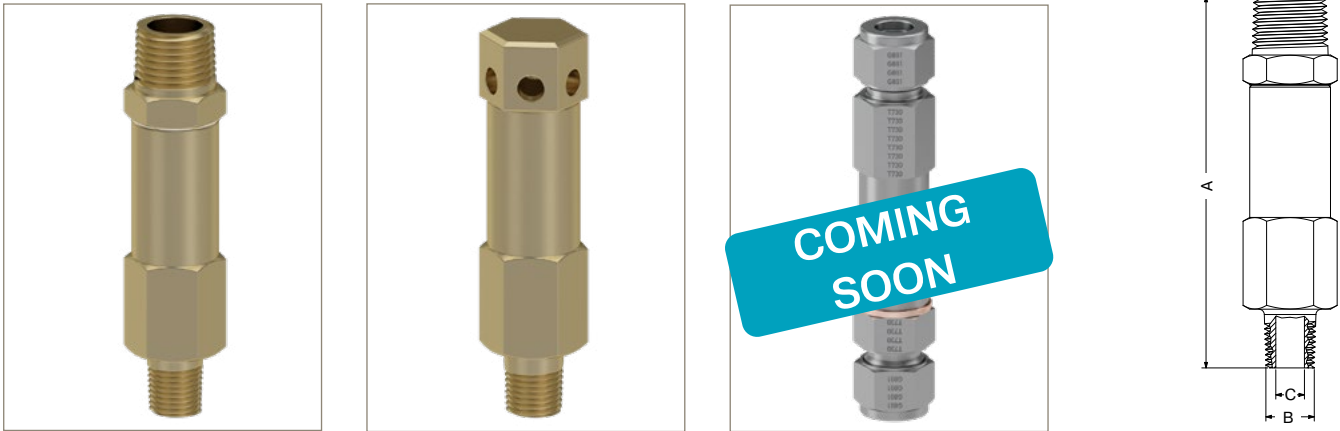

**WARNING**

The products described in this catalog can expose you to chemicals, including Lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to [www.p65warnings.ca.gov](http://www.p65warnings.ca.gov).

# Pressure Regulators

## Overview

The Parker Bestobell cryogenic pressure regulator (also known as Cryoreg) regulates the pressure of storage vessels, including static and transportable tanks.

The cryoreg valve combines the following functions:

- Pressure build-up regulator
- Economizer valve
- Thermal relief valve on two ports

To prevent contaminants from entering the regulator, strainers with monel mesh are installed on the inlet and outlet of the regulator. A check valve is fitted on the outlet of the economizer ball to prevent the backflow of the media.

The Parker Bestobell pressure regulator - Cryoreg, is available with a choice of springs to give optimum control in all applications. Set pressure tolerance will normally be held on gas  $\pm 3\%$  and liquid side  $\pm 5\%$ .

Install the Cryoreg with the pressure setting screw downwards; this prevents ice formation inside the cover, which would impede the correct operation of the valve. To set the valve at the correct pressure (it is usually supplied with the pressure setting screw at mid-spring range unless otherwise requested) slacken off the setting screw locknut. Screw the pressure setting screw into the valve until the correct working pressure is obtained.

A name plate will be fitted on the body of the valve.



Parker Bestobell Cryogenic Pressure Regulator (Cryoreg) in Bronze (Inlet and outlet Ports 1-1/4" BSP-PL c/w 60° Cone; Economizer Port: 3/4" BSP-PL c/w 60° Cone)

Valve size	DN15
Maximum Working Pressure (MWP)	25 bar (360 PSI) dependent on end connections
Working temperature	-196°C to +65°C (-319°F to +149°F)
End connections	BSP, NPT, Butt Weld
Body materials	Bronze
Suitable for media type	Group 1 gases Cleaned for oxygen service
Design and testing standards	ASTM B31.1, BS EN 1626, BS ISO 21011 Optional full material traceability backed by BS EN 10204 3.1/3.2 certification
Approvals	CRN, UKCA and PED approved
Marking	CE and UKCA marked

### Function:

- Vessel pressure regulation

### Applications:

- Transportation of Liquefied Gases
- Storages of Liquefied Gases
- Gas Processing



Parker Bestobell Cryogenic Pressure Regulator (Cryoreg) in Bronze (1" Inlet and outlet Ports: 1" NB x Butt Weld Schedule 10; Economizer Port: 1/2" NB x Butt Weld Schedule 10)

**WARNING**

The products described in this catalog can expose you to chemicals, including Lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to [www.p65warnings.ca.gov](http://www.p65warnings.ca.gov).

## Valve Operation

This cryogenic pressure regulator is usually installed after the pressure build-up (PBU) coil of the storage unit and therefore controls the gaseous flow during the pressure build-up phase. There should be a minimum of 200mm head (A) between the highest liquid level and the point at which the economiser outlet joins the customer supply line.

The valve operation is such that it maintains a system pressure on a storage tank during the transfer of gas from the trailer to a storage unit or vice versa. Pressure must be maintained to allow flow at desired rates during transfer. If the regulator is fitted before the PBU coil, the operation is identical, except that liquid will be passed during the pressure build-up phase.

The following explanation of the cryoreg assumes that it is fitted after the pressure build-up coil of the storage unit. It will therefore control a gaseous flow during the pressure build-up phase of its operation.

### Pressure build-up regulator function:


As liquid or gas is drawn down from the tank, the pressure inside the tank will fall. To compensate for this, the cryoreg will open to allow liquid to pass through the pressure build-up coil of the storage tank. Sufficient gas will thus be generated to bring the tank back to its normal working pressure.

When media is drawn down, the outlet pressure drops slightly, allowing the pressure setting spring to extend. A sensitive diaphragm assembly, connected to the spring, will lift the multi-function disc away from the main seat. This allows flow through the body, from port A to port B, via the pressure build-up seat on the multi-function disc to the downstream system. As soon as the pressure in the tank has recovered, the diaphragm assembly is pushed back down again, closing off the flow path.


### Economizer valve function:

When heat leaks into a cryogenic storage tank, the liquid will revert to its gas phase leading to a pressure rise in the tank. If left unchecked, the process may continue until the relief valve lifts, wastefully venting gas into the atmosphere.


The economizer valve diverts excess gas into the customer's supply line. Diverting the flow in this manner will prevent the relief valve from lifting, avoiding waste, and reducing the cost of storing the liquefied gas. To accomplish this, inside the Cryoreg is a flow path that allows gas to pass from port B up to the economizer port C. This occurs when the tank pressure exceeds the valve set pressure by more than 0.54 barg. A diaphragm assembly sensitive to tank pressure will be moved down having overcome the force of the pressure setting spring; it opens a flow path from port B up through the center of the valve to exit via the economizer port C. This mechanism is also used to provide thermal relief into the economizer port C from outlet B.

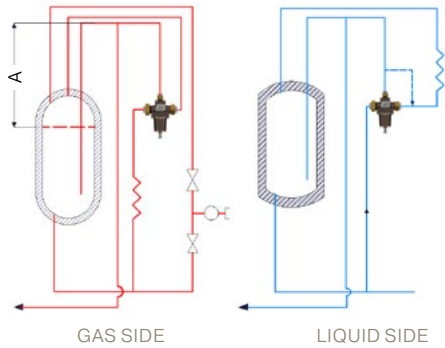

Typical Cryoreg installation

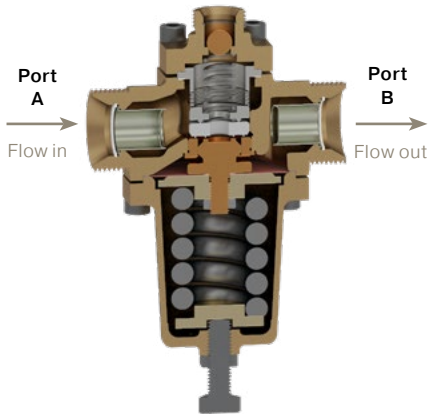

Pressure build-up regulator function

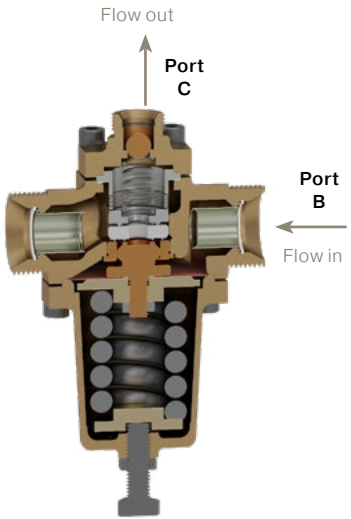

Economizer valve function

**WARNING**

The products described in this catalog can expose you to chemicals, including Lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to [www.p65warnings.ca.gov](http://www.p65warnings.ca.gov).




# Pressure Regulators

## Overview

### Thermal relief valve function:

When liquefied gases are trapped between two closed valves, supplying the pressure build-up coil and the cryoreg (a situation known as a liquid lock), the reheating and consequent boiling can lead to a dangerous rise in pressure. A thermal relief valve would usually be required to protect the coil-associated pipework from the high pressures generated by warming the trapped liquid. This function, however, is built into the Cryoreg, which will automatically vent the gas into either the economizer line (port C), if the valve operates in pressure build-up function, or into the gas supply line to the tank (port A) when the regulator is in the economizer function mode. As described above, this gives protection under all foreseeable circumstances.


This function is accomplished by the differential pressure across the bellows assembly, forcing it to compress, leaving the multi-function disc in place. This allows a flow path from port A, up through the center of the bellows to exit from the economizer port C. Note that if an isolating valve is fitted in the economizer line, it will be necessary to fit a separate thermal relief valve between the economizer port C and the isolation valve. This is not necessary if a Parker Bestobell check valve is installed.

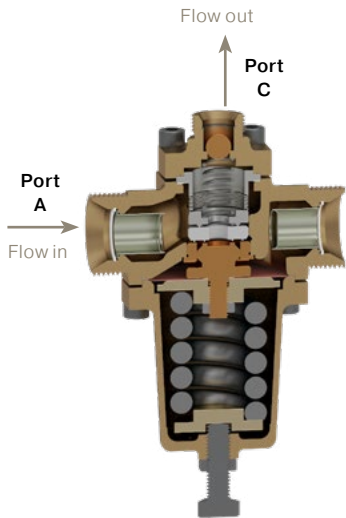

Thermal relief valve function when operating as a pressure build-up valve

### Features, Benefits and Values

Feature	Benefit	Value
Combined pressure build-up regulator and economizer	Simpler pipework Fewer joints Reduced leakage Added system protection	Safety Performance Reliability Lower overall cost
High flow characteristic	Precision pressure control Flow capability	Performance
Single adjustment for PBU and economizer functions	Simpler tank setting	Performance
High accuracy/low deadband	Reduced boil-off in pipelines	Safety Performance Reliability


**WARNING**


The products described in this catalog can expose you to chemicals, including Lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to [www.p65warnings.ca.gov](http://www.p65warnings.ca.gov).

## Technical Information

### Bill of Materials

	Description	Bronze CK Series
1	Body	Gunmetal BS EN1982 CC491K
2	Spring Housing	Gunmetal BS EN1982 CC491K
3	Seat	Phosphor Bronze BS EN 12163 CW451K
4	Disc Assembly	Beryllium Copper/Phosphor Bronze
5	Spring	Stainless Steel Series 300
6	Seal	Virgin PTFE
7	Bellows Assembly	Stainless Steel Series 300
8	Strainer	Monel
9	Fasteners	Stainless Steel BS6105 A2/A4 Gr.70
10	Ball	Phosphor Bronze BS EN 12163 CW451K

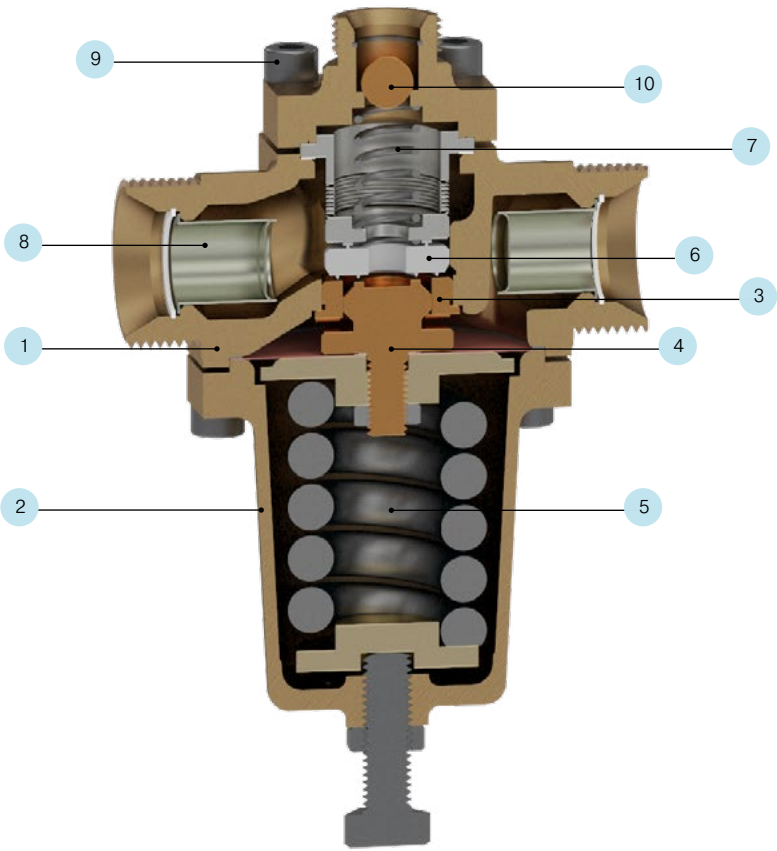

**WARNING**

The products described in this catalog can expose you to chemicals, including Lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to [www.p65warnings.ca.gov](http://www.p65warnings.ca.gov).

# Pressure Regulators

## Technical Information

### Maximum Flow through regulator to give pressure build kg/hr


Bar g		2	4	6	8	10	12	14	16	18	20	25	30	35	40
PSI g		29	58	87	116	145	174	203	232	261	290	362.5	435	507.5	580
LIN	kg/hr	513	499	477	460	445	431	418	407	393	378	347	310	-	-
LOX	kg/hr	728	711	686	667	651	636	622	609	595	581	551	524	495	467
LAR	kg/hr	888	888	837	813	792	774	757	741	726	704	669	634	597	563
CO2	kg/hr	-	-	758	746	727	715	703	692	681	672	648	627	607	586

### Maximum gas withdrawal from tank M3/hr

Bar g		PSI g	LIN M3/hr	LOX M3/hr	LAR M3/hr	CO2 M3/hr	Liquid Density kg/M3				Vapour Density kg/M3			
							LIN	LOX	LAR	CO2	LIN	LOX	LAR	CO2
2		29	25313	48940	43151	-								
4		58	14544	28991	25388	-	780	1106	1350	-	12.45	11.4	15.4	-
6		87	9434	18940	16929	24155	758	1080	1319	-	20.24	18.2	24.8	-
8		116	6708	13798	12359	17835	725	1043	1272	1152	28.19	25.8	34.3	18
10		145	5014	10680	9494	13646	699	1014	1235	1134	36.35	33.2	43.9	23.5
12		174	3861	8533	7549	11184	676	989	1204	1105	44.8	40.4	53.8	29
14		203	3040	6998	6141	9379	655	966	1176	1086	53.7	47.9	63.9	34
16		232	2436	5805	5080	8006	636	946	1150	1068	63.1	55.4	74.3	39
18		261	1938	4867	4267	6786	618	925	1126	1051	72.8	63.2	85.1	44
20		290	1537	3991	3552	5968	597	904	1103	1035	83.3	71.2	96	50
25		362.5	877	2664	2409	4285	574	883	1070	1021	94.3	81.6	107	55
30		435	507	1841	1669	3281	527	838	1017	985	126.6	106.0	137	70
35		507.5	-	1262	1131	2522	471	796	963	953	154.6	132.2	169	84
40		580	-	853	750	1901	-	752	907	922	-	162.0	207	100
							-	710	855	890		196.8	253	120

Q = kw √Δp / p where  
Q = Actual flow in m³/h  
Δp = Pressure drop in bar  
p = Liquid density in kg/m³

**Cryoreg Flow Data**  
Cryoreg on liquid side of vapouriser.  
Flow rates given are in kg/hr with 1 meter liquid head in vessel.  
For change in liquid head multiply flow by square root liquid head.

**WARNING**

The products described in this catalog can expose you to chemicals, including Lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to [www.p65warnings.ca.gov](http://www.p65warnings.ca.gov).

## Ordering Information

### Pressure Regulators - Bronze CK Series

CK

DN15

M

M

M



1


Series		Valve Size		Inlet Connection Port A		Outlet Connection Port B		Economizer Port Port C		Pressure Range	
Cryogenic Pressure Regulator - Bronze		15 mm	DN15	1-1/4" BSP-PL c/w 60° Cone		1-1/4" BSP-PL c/w 60° Cone		3/4" BSP-PL c/w 60° Cone		22-58 PSI (1.5-4.0 bar)	1
				1/2" NPT Male		1/2" NPT Male		3/8" NPT Male		59 - 145 PSI (4.1 - 10.0 bar)	2
				1" NPT Male		1" NPT Male		1/2" NPT Male		146-363 PSI (10.1 - 25.0 bar)	3
				1/2" NB x Butt Weld Schedule 10		1/2" NB x Butt Weld Schedule 10		3/4" NPT Male			
				1" NB x Butt Weld Schedule 10		1" NB x Butt Weld Schedule 10		1/2" NB x Butt Weld Schedule 10			

**Note:**  
Inlet and outlet connections can be of different types.

### Specifications

Dimension		
A	mm	134.0
B	mm	57.5
C	mm	126.0
Weight	kg	3.5

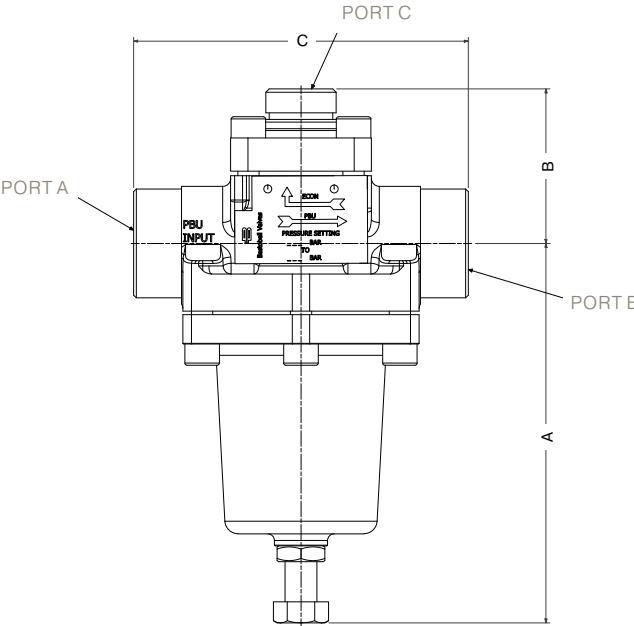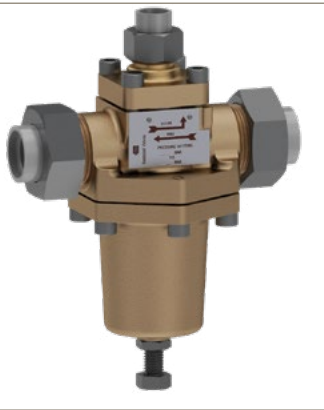

**WARNING**

The products described in this catalog can expose you to chemicals, including Lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to [www.p65warnings.ca.gov](http://www.p65warnings.ca.gov).

# Spares Kits

## Globe Valves

### Manual Globe Valves - Bronze

#### CNB Series

Valve Size		DN15	DN25	DN40	DN50
Gasket & Packing Kit		CNBRDN15	CNBRDN25	CNBRDN40	CNBRDN50
Bolted Bonnet Assembly	Non-extended	CNBB1DN15	CNBB1DN25	CNBB1DN40	CNBB1DN50
	230mm Extension	CNBB2DN15	CNBB2DN25	CNBB2DN40	CNBB2DN50
	300mm Extension	CNBB3DN15	CNBB3DN25	CNBB3DN40	CNBB3DN50
Handwheel Kit *		KHDN15W	KHDN25W	KHDN40W	KHDN50W

\* White color as standard

### Manual Globe Valves - Full Stainless Steel

#### CNS Series

Valve Size		DN15	DN25	DN40	DN50
Gasket & Packing Kit		CNSRDN15	CNSRDN25	CNSRDN40	CNSRDN50
Bolted Bonnet Assembly	Non-extended	CNSB1DN15	CNSB1DN25	CNSB1DN40	CNSB1DN50
	230mm Extension	CNSB2DN15	CNSB2DN25	CNSB2DN40	CNSB2DN50
	300mm Extension	CNSB3DN15	CNSB3DN25	CNSB3DN40	CNSB3DN50
Handwheel Kit *		KHDN15W	KHDN25W	KHDN40W	KHDN50W

\* White color as standard

### Manual Globe Valves - Stainless Steel with Bronze Internals

#### CNT Series


Valve Size		DN15	DN25	DN40	DN50	DN65	DN80	DN100
Gasket & Packing Kit		CNTRDN15	CNTRDN25	CNTRDN40	CNTRDN50	CNTRDN65	CNTRDN80	CNTRDN100
Bolted Bonnet Assembly	Non-extended	CNTB1DN15	CNTB1DN25	CNTB1DN40	CNTB1DN50	CNTB1DN65	CNTB1DN80	CNTB1DN100
	230mm Extension	CNTB2DN15	CNTB2DN25	CNTB2DN40	CNTB2DN50	CNTB2DN65	CNTB2DN80	CNTB2DN100
	300mm Extension	CNTB3DN15	CNTB3DN25	CNTB3DN40	CNTB3DN50	CNTB3DN65	CNTB3DN80	CNTB3DN100
Handwheel Kit *		KHDN15W	KHDN25W	KHDN40W	KHDN50W	KHDN65W	KHDN80W	KHDN100W

\* White color as standard

### Actuated Globe Valves - Stainless Steel with Bronze Internals


#### CNT\*TA Series

Valve Size		DN25	DN40	DN65
Gasket & Packing Kit		CNTRDN25	CNTRDN40	CNTRDN65
Bolted Bonnet Assembly	300mm Extension	CNTB3DN25	CNTB3DN40	CNTB3DN65
Spare Tyre		CNTTDN25	CNTTDN40	CNTTDN65
Tyre Seal Repair		CNTTSDN25	CNTTSDN40	CNTTSDN65
Handwheel Override Kit		KHODN25W	KHODN40W	KHODN65W

**WARNING**

The products described in this catalog can expose you to chemicals, including Lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to [www.p65warnings.ca.gov](http://www.p65warnings.ca.gov).

Gasket & Packing Kit	
Content	Quantity
Wiper Seal	1
Chevron Top	2
‘O’ Seal	1
Chevron Bottom	1
Gasket	1
Anti-Friction Disc	1
Valve Seal Flat	1

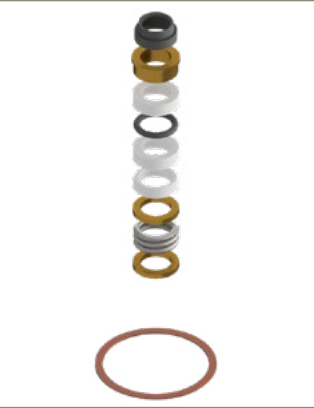

Gasket & Packing Kit for Parker Bestobell Cryogenic Manual Globe Valves

Handwheel Kit	
Content	Quantity
Handwheel	1
Locknut	1



Handwheel Kit for Parker Bestobell Cryogenic Manual Globe Valves DN100



Handwheel Kit for Parker Bestobell Cryogenic Manual Globe Valves DN15-DN80

Bolted Bonnet Assembly	
Content	Quantity
Cover	1
Stem	1
Bush	1
Gasket & Packing Kit	1
Nuts	2
Washer	1
Circlip	2
Spring	1
Gland Follower	1
Ball	1



Bolted Bonnet Kit for Parker Bestobell Cryogenic Manual Globe Valves in Bronze and Stainless Steel with Bronze Internals



Bolted Bonnet Kit for Parker Bestobell Cryogenic Manual Globe Valves in Full Stainless Steel

Spare Tyre	
Content	Quantity
Tyre	1



Spare Tyre for Parker Bestobell Cryogenic Tyre Actuated Globe Valves

Tyre Seal Kit	
Content	Quantity
Tyre	1
Seal	8




Tyre Seal Kit for Parker Bestobell Cryogenic Tyre Actuated Globe Valves

Handwheel Override Kit	
Content	Quantity
Handwheel	1
Locknut	2



Handwheel Override Kit for Parker Bestobell Cryogenic Tyre Actuated Globe Valves

**WARNING**

The products described in this catalog can expose you to chemicals, including Lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to [www.p65warnings.ca.gov](http://www.p65warnings.ca.gov).



# Spares Kits

## Gate Valves


### Manual Gate Valves - Full Stainless Steel

#### CMC Series

Valve Size	DN40	DN50	DN65	DN80
Gasket & Packing Kit	CMCRDN40	CMCRDN50	CMCRDN65	CMCRDN80
Disc Assembly	CMCDDN40	CMCDDN50	CMCDDN65	CMCDDN80
Seat Assembly	N/A	CMCSDN50	CMCSDN65	CMCSDN80
Handwheel Kit *	KHDN40W	KHDN50W	KHDN65W	KHDN80W


\* White color as standard

Gasket & Packing Kit	
Content	Quantity
Packing Gland Set	1
Wiper Seal	1
Gasket	1

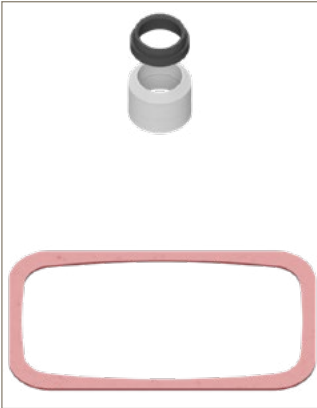

Gasket & Packing Kit for Parker Bestobell Cryogenic Manual Gate Valves

Disc Assembly	
Content	Quantity
Disc	1
Seal	1
Pin Spring	1
Nut	1

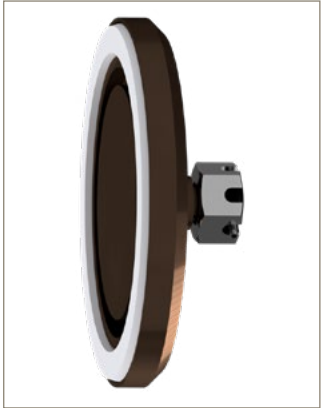

Disc Assembly for Parker Bestobell Cryogenic Manual Gate Valves

Seat Assembly	
Content	Quantity
Seat	1
Seal	1
Circlip	1




Seat Assembly for Parker Bestobell Cryogenic Manual Gate Valves

Handwheel Kit	
Content	Quantity
Handwheel	1
Locknut	1



Handwheel Kit for Parker Bestobell Cryogenic Manual Gate Valves

**WARNING**


The products described in this catalog can expose you to chemicals, including Lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to [www.p65warnings.ca.gov](http://www.p65warnings.ca.gov).

### Tyre Actuated Gate Valves - Full Stainless Steel

#### CMD Series


Valve Size	DN40	DN50	DN65	DN80
Gaskets & Packing Kit	CMDRDN40	CMDRDN50		
Disc Assembly	CMDDDN40	CMDDDN50	CMDDDN65	CMDDDN80
Seat Assembly	N/A	CMDSDN50	CMDSDN65	CMDSDN80
Spare Tyre	CMDTDN40	CMDTDN50		
Tyre Seal Kit	CMDTSDN40	CMDTSDN50		
Handwheel Override Kit	KHODN40W	KHODN50W	KHODN65W	KHODN80W

Gasket & Packing Kit	
Content	Quantity
Chevron Top	2
Chevron BTM	1
Wiper Seal	1
'O' Seal	6
Spring	1
Gland Follower	1
Washer	2
Gasket	2

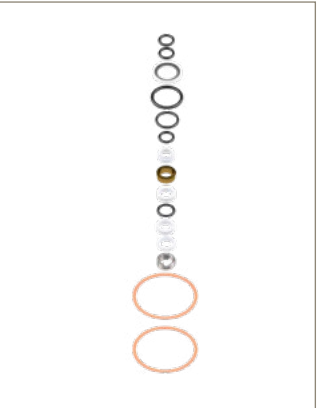

Gasket & Packing Kit for Parker Bestobell Cryogenic Tyre Actuated Gate Valves

Disc Assembly	
Content	Quantity
Disc	1
Seal	1
Pin Spring	1
Nut	1

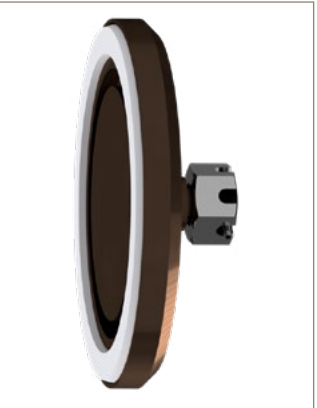


Disc Assembly for Parker Bestobell Cryogenic Tyre Actuated Gate Valves

Seat Assembly	
Content	Quantity
Seat	1
Seal	1
Circlip	1



Seat Assembly for Parker Bestobell Cryogenic Tyre Actuated Gate Valves

Spare Tyre	
Content	Quantity
Tyre	1

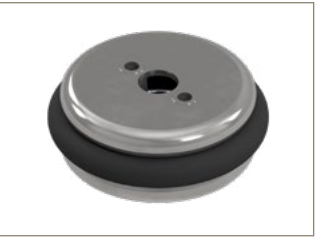

Spare Tyre for Parker Bestobell Cryogenic Tyre Actuated Gate Valves

Tyre Seal Kit	
Content	Quantity
Tyre	1
Seal	8




Tyre Seal Kit for Parker Bestobell Cryogenic Tyre Actuated Gate Valves

Handwheel Override Kit	
Content	Quantity
Handwheel	1
Locknut	2



Handwheel Override Kit for Parker Bestobell Cryogenic Tyre Actuated Gate Valves

**WARNING**

The products described in this catalog can expose you to chemicals, including Lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to [www.p65warnings.ca.gov](http://www.p65warnings.ca.gov).

# Spares Kits


## Fill Manifold Assemblies

### Bronze

#### CTB Series

Valve Size		DN15 (Drain Valve)	DN40
Gasket & Packings		CTBRDN15	CTBRDN40
Bonnet Assembly	Standard Extension	CTBB1DN15	N/A
	230mm Extension	N/A	CTBB2DN40
Handwheel Kit		KHDN15W	KHDN40W
Back Flange Kit		N/A	CTBKFDN40

Gasket & Packing Kit	
Content	Quantity
Wiper Seal	1
Chevron Top	2
‘O’ Seal	1
Chevron Bottom	1
Gasket	1
Anti-Friction Disc	1
Valve Seal Flat	1

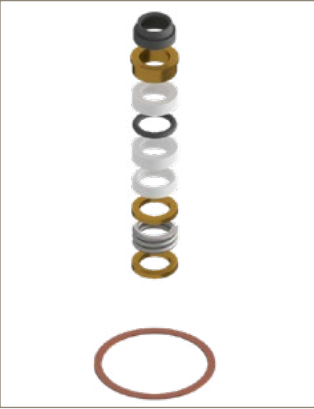

Gasket & Packing Kit for Parker Bestobell Cryogenic Fill Manifold Assemblies

Bolted Bonnet Assembly	
Content	Quantity
Cover	1
Stem	1
Bush	1
Gasket & Packing Kit	1
Nuts	2
Washer	1
Circlip	2
Spring	1
Gland Follower	1
Ball	1




Bolted Bonnet Assembly for Parker Bestobell Cryogenic Fill Manifold Assemblies

Handwheel Kit	
Content	Quantity
Handwheel	1
Locknut	1




Handwheel Kit for Parker Bestobell Cryogenic Fill Manifold Assemblies

Back Flange Kit (Valve DN40)	
Content	Quantity
Gasket	1
Seal	1

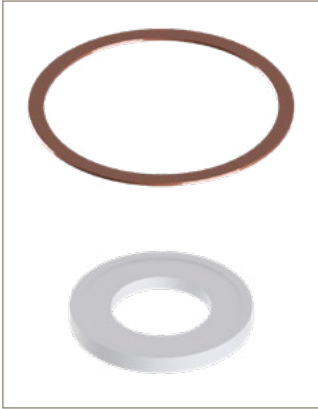

Back Flange Kit for Parker Bestobell Cryogenic Fill Manifold Assemblies DN40

**WARNING**

The products described in this catalog can expose you to chemicals, including Lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to [www.p65warnings.ca.gov](http://www.p65warnings.ca.gov).

## Ball Valves

### Manual Ball Valves - Bronze

#### CZF\*R Series

Valve Size	DN15	DN25	DN40	DN50
Gasket & Packing Kit	CZFRRDN15	CZFRRDN25	CZFRRDN40	CZFRRDN50
Centre Section	CZFRCDN15	CZFRCDN25	CZFRCDN40	CZFRCDN50

### Manual Ball Valves - Full Stainless Steel

#### CZF\*F Series

Valve Size	DN15	DN25	DN40
Gasket & Packing Kit	CZFFRDN15	CZFFRDN25	CZFFRDN40
Centre Section	CZFFCDN15	CZFFCDN25	CZFFCDN40

Gasket & Packing Kit	
Content	Quantity
Chevron Top	2
Chevron BTM	1
Wiper Seal	1
‘O’ Seal	1
Spring	1
Seal ball valve	2
Washer	2
Gasket	2
Bush	1
Protection cap	1




Gasket & Packing Kit for Parker Bestobell Cryogenic Ball Valves

Centre Section	
Content	Quantity
Gasket and packing kit	1
Body	1
Tube	1
Housing	1
Ball	1
Gland follower	1
Bush gland	1
Stem	1
Handlever	1
Stop pin	1
Nut	1
Nut lock	1



Centre-Section for Parker Bestobell Cryogenic Ball Valves

**WARNING**

The products described in this catalog can expose you to chemicals, including Lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to [www.p65warnings.ca.gov](http://www.p65warnings.ca.gov).

# Spares Kits

## Check Valves

### Manual Lift Check Valves - Bronze

#### CGB Series

Valve Size	DN15	DN25	DN40	DN50
Gasket & Seal Kit	CGBRDN15	CGBRDN25	CGBRDN40	CGBRDN50

### Manual Lift Check Valves - Stainless Steel with Bronze Internals

#### CGT Series


Valve Size	DN15	DN25	DN40	DN50
Gasket & Seal Kit	CGTRDN15	CGTRDN25	CGTRDN40	CGTRDN50

### Manual Swing Check Valves - Full Stainless Steel

#### CHC Series

Valve Size	DN25	DN40	DN50	DN80
Gasket & Disc/Seal Kit	CHCRDN25	CHCRDN40	CHCRDN50	CHCRDN80

Gasket & Seal Kit	
Content	Quantity
Gasket	1
Seal	1

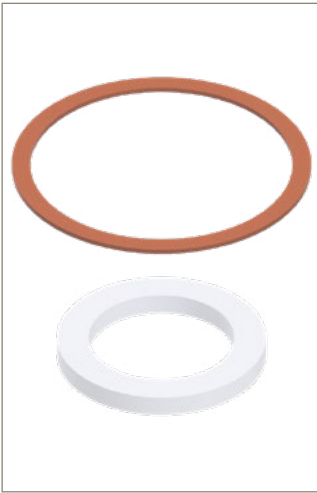


Gasket & Seal Kit for Parker Bestobell Cryogenic Manual Lift Check Valves in Bronze and Stainless Steel with Bronze Internals

Gasket & Disc/Seal Kit	
Content	Quantity
Gasket	1
Pin split	1
Disc	1
Seal	1



Gasket & Disc/Seal Kit for Parker Bestobell Cryogenic Manual Swing Check Valves in Full Stainless Steel

**WARNING**

The products described in this catalog can expose you to chemicals, including Lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to [www.p65warnings.ca.gov](http://www.p65warnings.ca.gov).

## Strainers

### Strainers - Bronze

#### CSB Series

Valve Size		DN15	DN25	DN40	DN50
Gasket & PTFE Slipper		CSBRDN15	CSBRDN25	CSBRDN40	CSBRDN50
Filter	Copper/Monel (100 mesh)	CSBFCDN15	CSBFCDN25	CSBFCDN40	CSBFCDN50
	Stainless Steel (100 mesh)	CSBFSDN15	CSBFSDN25	CSBFSDN40	CSBFSDN50

### Strainers - Stainless Steel

#### CSS Series


Valve Size		DN15	DN25	DN40	DN50	DN65	DN80	DN100
Gasket & PTFE Slipper		CSSRDN15	CSSRDN25	CSSRDN40	CSSRDN50	CSSRDN65	CSSRDN80	CSSRDN100
Filter	Copper/Monel (100 mesh)	CSSFCDN15	CSSFCDN25	CSSFCDN40	CSSFCDN50	CSSFCDN65	CSSFCDN80	CSSFCDN100
	Stainless Steel (100 mesh)	CSSFSDN15	CSSFSDN25	CSSFSDN40	CSSFSDN50	CSSFSDN65	CSSFSDN80	CSSFSDN100

Gasket & PTFE Slipper	
Content	Quantity
Gasket	1
PTFE slipper	1




Gasket & PTFE Slipper for Parker Bestobell Cryogenic Strainers

Filter	
Content	Quantity
Filter	1

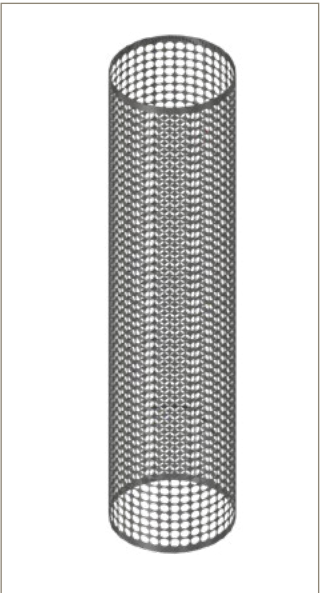

Filter for Parker Bestobell Cryogenic Strainers

**WARNING**

The products described in this catalog can expose you to chemicals, including Lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to [www.p65warnings.ca.gov](http://www.p65warnings.ca.gov).



# Spares Kits

## Pressure Regulators

### Pressure Regulators - Bronze

#### CK Series

Valve Pressure Rating	22-58 PSI (1.5-4.0 bar)	59 - 145 PSI (4.1 - 10.0 bar)	146-363 PSI (10.1 - 25.0 bar)
Gasket/Seal Kit	CKRDN15		
Bellow/Seal Kit	CKBDN15		
Diaphragm Kit	CKDLDN15	CKDMDN15	CKDHDN15
Main Spring Kit	CKSLDN15	CKSMDN15	CKSHDN15

Gasket/Seal Kit	
Content	Quantity
Gasket	1
Seal	1



Gasket & Seal Kit for Parker Bestobell Cryogenic Pressure Regulators

Bellow/Seal Kit	
Content	Quantity
Seal	1
Bellows Seal assembly	1
Gasket	2
Spring	1



Bellow & Seal Kit for Parker Bestobell Cryogenic Pressure Regulators

Diaphragm Kit	
Content	Quantity
Gasket	4
Seal	2
Anti-vibration disc	1
Diaphragm	4
Nut lock	1
Plate Thrust	1




Diaphragm Kit for Parker Bestobell Cryogenic Pressure Regulators


Main Spring Kit	
Content	Quantity
Gasket	1
Spring	1



Main Spring Kit for Parker Bestobell Cryogenic Pressure Regulators

**WARNING**

The products described in this catalog can expose you to chemicals, including Lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to [www.p65warnings.ca.gov](http://www.p65warnings.ca.gov).

**WARNING**

The products described in this catalog can expose you to chemicals, including Lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to [www.p65warnings.ca.gov](http://www.p65warnings.ca.gov).

Offer of Sale


The items described in this document and other documents and descriptions provided by Parker Hannifin Corporation, its subsidiaries and its authorized distributors (“Seller”) are hereby offered for sale at prices to be established by Seller. This offer and its acceptance by any customer (“Buyer”) shall be governed by all of the following Terms and Conditions. Buyer’s order for any item described in its document, when communicated to Seller verbally, or in writing, shall constitute acceptance of this offer. All goods or work described will be referred to as “Products”.

1. **Terms and Conditions.** Seller’s willingness to offer Products, or accept an order for Products, to or from Buyer is expressly conditioned on Buyer’s assent to these Terms and Conditions and to the terms and conditions found on-line at [www.parker.com/saleterms/](http://www.parker.com/saleterms/). Seller objects to any contrary or additional term or condition of Buyer’s order or any other document issued by Buyer.
2. **Price Adjustments; Payments.** Prices stated on the reverse side or preceding pages of this document are valid for 30 days. After 30 days, Seller may change prices to reflect any increase in its costs resulting from state, federal or local legislation, price increases from its suppliers, or any change in the rate, charge, or classification of any carrier. The prices stated on the reverse or preceding pages of this document do not include any sales, use, or other taxes unless so stated specifically. Unless otherwise specified by Seller, all prices are F.O.B. Seller’s facility, and payment is due 30 days from the date of invoice. After 30 days, Buyer shall pay interest on any unpaid invoices at the rate of 1.5% per month or the maximum allowable rate under applicable law.
3. **Delivery Dates; Title and Risk; Shipment.** All delivery dates are approximate and Seller shall not be responsible for any damages resulting from any delay. Regardless of the manner of shipment, title to any products and risk of loss or damage shall pass to Buyer upon tender to the carrier at Seller’s facility (i.e., when it’s on the truck, it’s yours). Unless otherwise stated, Seller may exercise its judgment in choosing the carrier and means of delivery. No deferment of shipment at Buyers’ request beyond the respective dates indicated will be made except on terms that will indemnify, defend and hold Seller harmless against all loss and additional expense. Buyer shall be responsible for any additional shipping charges incurred by Seller due to Buyer’s changes in shipping, product specifications or in accordance with Section 13, herein.
4. **Warranty.** Seller warrants that the Products sold here-under shall be free from defects in material or workmanship for a period of twelve months from the date of delivery to Buyer or 2,000 hours of normal use, whichever occurs first. This warranty is made only to Buyer and does not extend to anyone to whom Products are sold after purchased from Seller. The prices charged for Seller’s products are based upon the exclusive limited warranty stated above, and upon the following disclaimer: DISCLAIMER OF WARRANTY: THIS WARRANTY COMPRISES THE SOLE AND ENTIRE WARRANTY PERTAINING TO PRODUCTS PROVIDED HEREUNDER. SELLER DISCLAIMS ALL OTHER WARRANTIES, EXPRESS AND IMPLIED, INCLUDING MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.
5. **Claims; Commencement of Actions.** Buyer shall promptly inspect all Products upon delivery. No claims for shortages will be allowed unless reported to the Seller within 10 days of delivery.


- No other claims against Seller will be allowed unless asserted in writing within 60 days after delivery or, in the case of an alleged breach of warranty, within 30 days after the date within the warranty period on which the defect is or should have been discovered by Buyer. Any action based upon breach of this agreement or upon any other claim arising out of this sale (other than an action by Seller for any amount due to Seller from Buyer) must be commenced within thirteen months from the date of tender of delivery by Seller or, for a cause of action based upon an alleged breach of warranty, within thirteen months from the date within the warranty period on which the defect is or should have been discovered by Buyer.
6. **LIMITATION OF LIABILITY.** UPON NOTIFICATION, SELLER WILL, AT ITS OPTION, REPAIR OR REPLACE A DEFECTIVE PRODUCT, OR REFUND THE PURCHASE PRICE. IN NO EVENT SHALL SELLER BE LIABLE TO BUYER FOR ANY SPECIAL, INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF, OR AS THE RESULT OF, THE SALE, DELIVERY, NON-DELIVERY, SERVICING, USE OR LOSS OF USE OF THE PRODUCTS OR ANY PART THEREOF, OR FOR ANY CHARGES OR EXPENSES OF ANY NATURE INCURRED WITHOUT SELLER’S WRITTEN CONSENT, EVEN IF SELLER HAS BEEN NEGLIGENT, WHETHER IN CONTRACT, TORT OR OTHER LEGAL THEORY. IN NO EVENT SHALL SELLER’S LIABILITY UNDER ANY CLAIM MADE BY BUYER EXCEED THE PURCHASE PRICE OF THE PRODUCTS.
7. **Contingencies.** Seller shall not be liable for any default or delay in performance if caused by circumstances beyond the reasonable control of Seller.
8. **User Responsibility.** The user, through its own analysis and testing, is solely responsible for making the final selection of the system and Product and assuring that all performance, endurance, maintenance, safety and warning requirements of the application are met. The user must analyze all aspects of the application and follow applicable industry standards and Product information. If Seller provides Product or system options, the user is responsible for determining that such data and specifications are suitable and sufficient for all applications and reasonably foreseeable uses of the Products or systems.
9. **Loss to Buyer’s Property.** Any designs, tools, patterns, materials, drawings, confidential information or equipment furnished by Buyer or any other items which become Buyer’s property, may be considered obsolete and may be destroyed by Seller after two consecutive years have elapsed without Buyer placing an order for the items which are manufactured using such property. Seller shall not be responsible for any loss or damage to such property while it is in Seller’s possession or control.
10. **Special Tooling.** A tooling charge may be imposed for any special tooling, including without limitation, dies, fixtures, molds and patterns, acquired to manufacture Products.

- Such special tooling shall be and remain Seller’s property notwithstanding payment of any charges by Buyer. In no event will Buyer acquire any interest in apparatus belonging to Seller which is utilized in the manufacture of the Products, even if such apparatus has been specially converted or adapted for such manufacture and notwithstanding any charges paid by Buyer. Unless otherwise agreed, Seller shall have the right to alter, discard or otherwise dispose of any special tooling or other property in its sole discretion at any time.
11. **Buyer’s Obligation; Rights of Seller.** To secure payment of all sums due or otherwise, Seller shall retain a security interest in the goods delivered and this agreement shall be deemed a Security Agreement under the Uniform Commercial Code. Buyer authorizes Seller as its attorney to execute and file on Buyer’s behalf all documents Seller deems necessary to perfect its security interest. Seller shall have a security interest in, and lien upon, any property of Buyer in Seller’s possession as security for the payment of any amounts owed to Seller by Buyer.
12. **Improper use and Indemnity.** Buyer shall indemnify, defend, and hold Seller harmless from any claim, liability, damages, lawsuits, and costs (including attorney fees), whether for personal injury, property damage, patent, trademark or copyright infringement or any other claim, brought by or incurred by Buyer, Buyer’s employees, or any other person, arising out of: (a) improper selection, improper application or other misuse of Products purchased by Buyer from Seller; (b) any act or omission, negligent or otherwise, of Buyer; (c) Seller’s use of patterns, plans, drawings, or specifications furnished by Buyer to manufacture Product; or (d) Buyer’s failure to comply with these terms and conditions. Seller shall not indemnify Buyer under any circumstance except as otherwise provided.
13. **Cancellations and Changes.** Orders shall not be subject to cancellation or change by Buyer for any reason, except with Seller’s written consent and upon terms that will indemnify, defend and hold Seller harmless against all direct, incidental and consequential loss or damage. Seller may change product features, specifications, designs and availability with notice to Buyer.
14. **Limitation on Assignment.** Buyer may not assign its rights or obligations under this agreement without the prior written consent of Seller.
15. **Entire Agreement.** This agreement contains the entire agreement between the Buyer and Seller and constitutes the final, complete and exclusive expression of the terms of the agreement. All prior or contemporaneous written or oral agreements or negotiations with respect to the subject matter are herein merged.
16. **Waiver and Severability.** Failure to enforce any provision of this agreement will not waive that provision nor will any such failure prejudice Seller’s right to enforce that provision in the future. Invalidation of any provision of this agreement by legislation or other rule of law shall not invalidate any other provision herein. The remaining provisions of this agreement will remain in full force and effect.
17. **Termination.** This agreement may be terminated by Seller for any reason and at any time by giving Buyer thirty (30) days written notice of termination. In addition, Seller may

- by written notice immediately terminate this agreement for the following: (a) Buyer commits a breach of any provision of this agreement (b) the appointment of a trustee, receiver or custodian for all or any part of Buyer’s property (c) the filing of a petition for relief in bankruptcy of the other Party on its own behalf, or by a third party (d) an assignment for the benefit of creditors, or (e) the dissolution or liquidation of the Buyer.
18. **Governing Law.** This agreement and the sale and delivery of all Products hereunder shall be deemed to have taken place in and shall be governed and construed in accordance with the laws of the State of Ohio, as applicable to contracts executed and wholly performed therein and without regard to conflicts of laws principles. Buyer irrevocably agrees and consents to the exclusive jurisdiction and venue of the courts of Cuyahoga County, Ohio with respect to any dispute, controversy or claim arising out of or relating to this agreement. Disputes between the parties shall not be settled by arbitration unless, after a dispute has arisen, both parties expressly agree in writing to arbitrate the dispute.
19. **Indemnity for Infringement of Intellectual Property Rights.** Seller shall have no liability for infringement of any patents, trademarks, copyrights, trade dress, trade secrets or similar rights except as provided in this Section. Seller will defend and indemnify Buyer against allegations of infringement of U.S. patents, U.S. trademarks, copyrights, trade dress and trade secrets (“Intellectual Property Rights”). Seller will defend at its expense and will pay the cost of any settlement or damages awarded in an action brought against Buyer based on an allegation that a Product sold pursuant to this Agreement infringes the Intellectual Property Rights of a third party. Seller’s obligation to defend and indemnify Buyer is contingent on Buyer notifying Seller within ten (10) days after Buyer becomes aware of such allegations of infringement, and Seller having sole control over the defense of any allegations or actions including all negotiations for settlement or compromise. If a Product is subject to a claim that it infringes the Intellectual Property Rights of a third party, Seller may, at its sole expense and option, procure for Buyer the right to continue using the Product, replace or modify the Product so as to make it noninfringing, or offer to accept return of the Product and return the purchase price less a reasonable allowance for depreciation. Notwithstanding the foregoing, Seller shall have no liability for claims of infringement based on information provided by Buyer, or directed to Products delivered hereunder for which the designs are specified in whole or part by Buyer, or infringements resulting from the modification, combination or use in a system of any Product sold hereunder. The foregoing provisions of this Section shall constitute Seller’s sole and exclusive liability and Buyer’s sole and exclusive remedy for infringement of Intellectual Property Rights.
20. **Taxes.** Unless otherwise indicated, all prices and charges are exclusive of excise, sales, use, property, occupational or like taxes which may be imposed by any taxing authority upon the manufacture, sale or delivery of Products.
21. **Equal Opportunity Clause.** For the performance of government contracts and where dollar value of the Products exceed \$10,000, the equal employment opportunity clauses in Executive Order 11246, VEVRAA, and 41 C.F.R. §§ 60-1.4(a), 60-741.5(a), and 60-250.4, are hereby incorporated.

**WARNING**

The products described in this catalog can expose you to chemicals, including Lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to [www.p65warnings.ca.gov](http://www.p65warnings.ca.gov).

**WARNING**

The products described in this catalog can expose you to chemicals, including Lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to [www.p65warnings.ca.gov](http://www.p65warnings.ca.gov).



**WARNING USER RESPONSIBILITY**

FAILURE OR IMPROPER SELECTION OR IMPROPER USE OF THE PRODUCTS DESCRIBED HEREIN OR RELATED ITEMS CAN CAUSE DEATH, PERSONAL INJURY AND PROPERTY DAMAGE.

This document and other information from Parker Hannifin Corporation, its subsidiaries and authorized distributors provide product or system options for further investigation by users having technical expertise.

The user, through its own analysis and testing, is solely responsible for making the final selection of the system and components and assuring that all performance, endurance, maintenance, safety and warning requirements of the application are met. The user must analyse all aspects of the application, follow applicable industry standards, and follow the information concerning the product in the current product catalogue and in any other materials provided from Parker or its subsidiaries or authorized distributors.

To the extent that Parker or its subsidiaries or authorized distributors provide component or system options based upon data or specifications provided by the user, the user is responsible for determining that such data and specifications are suitable and sufficient for all applications and reasonably foreseeable uses of the components or systems.



**WARNING**

The products described in this catalog can expose you to chemicals, including Lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to [www.p65warnings.ca.gov](http://www.p65warnings.ca.gov).



# Parker Worldwide

## Europe, Middle East, Africa

**AE – United Arab Emirates,** Dubai  
Tel: +971 4 8127100

**AT – Austria,** St. Florian  
Tel: +43 (0)7224 66201

**AZ – Azerbaijan,** Baku  
Tel: +994 50 2233 458

**BE/NL/LU – Benelux,** Hendrik Ido Ambacht  
Tel: +31 (0)541 585 000

**BY – Belarus,** Minsk  
Tel: +48 (0)22 573 24 00

**CH – Switzerland,** Etoy  
Tel: +41 (0)21 821 87 00

**CZ – Czech Republic,** Prague  
Tel: +420 284 083 111

**DE – Germany,** Kaarst  
Tel: +49 (0)2131 4016 0

**DK – Denmark,** Ballerup  
Tel: +45 43 56 04 00

**ES – Spain,** Madrid  
Tel: +34 902 330 001

**FI – Finland,** Vantaa  
Tel: +358 (0)20 753 2500

**FR – France,** Contamine s/Arve  
Tel: +33 (0)4 50 25 80 25

**GR – Greece**  
Tel: +30 69 44 52 78 25

**HU – Hungary,** Budaörs  
Tel: +36 23 885 470

**IE – Ireland,** Dublin  
Tel: +353 (0)1 466 6370

**IL – Israel**  
Tel: +39 02 45 19 21

**IT – Italy,** Corsico (MI)  
Tel: +39 02 45 19 21

**KZ – Kazakhstan,** Almaty  
Tel: +7 7273 561 000

**NO – Norway,** Asker  
Tel: +47 66 75 34 00

**PL – Poland,** Warsaw  
Tel: +48 (0)22 573 24 00

**PT – Portugal**  
Tel: +351 22 999 7360

**RO – Romania,** Bucharest  
Tel: +40 21 252 1382

**SE – Sweden,** Borås  
Tel: +46 (0)8 59 79 50 00

**SL – Slovenia,** Novo Mesto  
Tel: +386 7 337 6650

**TR – Turkey,** Istanbul  
Tel: +90 216 4997081

**UK – United Kingdom,** Warwick  
Tel: +44 (0)1926 317 878

**ZA – South Africa,** Kempton Park  
Tel: +27 (0)11 961 0700

## North America

**CA – Canada,** Milton, Ontario  
Tel: +1 905 693 3000

**US – USA,** Cleveland  
Tel: +1 216 896 3000

## Asia Pacific

**AU – Australia,** Castle Hill  
Tel: +61 (0)2-9634 7777

**CN – China,** Shanghai  
Tel: +86 21 2899 5000

**HK – Hong Kong**  
Tel: +852 2428 8008

**IN – India,** Mumbai  
Tel: +91 22 6513 7081-85

**JP – Japan,** Tokyo  
Tel: +81 (0)3 6408 3901

**KR – South Korea,** Seoul  
Tel: +82 2 559 0400

**MY – Malaysia,** Shah Alam  
Tel: +60 3 7849 0800

**NZ – New Zealand,** Mt Wellington  
Tel: +64 9 574 1744

**SG – Singapore**  
Tel: +65 6887 6300

**TH – Thailand,** Bangkok  
Tel: +662 186 7000

**TW – Taiwan,** Taipei  
Tel: +886 2 2298 8987

## South America

**AR – Argentina,** Buenos Aires  
Tel: +54 3327 44 4129

**BR – Brazil,** Sao Jose dos Campos  
Tel: +55 080 0727 5374

**CL – Chile,** Santiago  
Tel: +56 22 303 9640

**MX – Mexico,** Toluca  
Tel: +52 72 2275 4200

**European Product Information Centre**  
**Free phone: 00 800 27 27 5374**  
(from AT, BE, CH, CZ, DE, DK, EE, ES, FI, FR, IE, IL, IS, IT, LU, MT, NL, NO, PL, PT, RU, SE, SK, UK, ZA)

Your local authorized Parker distributor

