# **Proflow™-HE**

Pleated hydrophilic PTFE membrane and polypropylene supported cartridges for microelectronic liquid

The Proflow™-HE cartridge is designed for filtration of microelectronic (MiE) fluids. High-purity polypropylene and hydrophilic PTFE provide an economical alternative for the filtration of various MiE chemicals. The hydrophilic nature of the PTFE membrane does not require pre-wetting for aqueous based liquids typically necessitated with standard PTFE membranes. This can reduce total operating cost and improve process up-times.

Proflow-HE is available in both Standard and SELECT pleated versions. SELECT pleating allows for additional membrane surface areas for exceptional flow rates and on-stream life.

Proflow-HE cartridges are manufactured in an ISO 9008 certified Class 10,000 cleanroom and flushed with ultra-high-purity deionized water and 100% integrity tested as well as serialized to provide complete product purity, reliability and traceability.



Parker-Hannifin Corporation domnick hunter Process Filtration - N.A. 2340 Eastman Avenue Oxnard, California, USA 93030

toll free +1 877 784 2234 phone +1 805 604 3400 fax +1 805 604 3401 dhpsales.na@parker.com

www.parker.com/processfiltration





## **Applications**

Recommended applications include, but are not limited to:

- Acids & Bases
- Extraction/crystallization solvents
- Hot ultra-high-purity deionized water
- Solvent filtration

## **Markets**

Proflow-HE is well-suited for the manufacturing of:

- LCD Displays
- Solar Panels
- Bulk Chemicals
- Fine Chemical Filtration

### **Benefits**

- Hydrophilic membrane (pre-wetting not required)
- Broad chemical compatibility
- Long service life minimizes changeout frequency
- Low differential pressure reduces energy costs
- Top-performing retention efficiency
- Very low metals and organic extractables
- Quick rinse up-time
- Integrity-tested for quality assurance

ENGINEERING YOUR SUCCESS.

## Proflow<sup>™</sup>-HE

#### **SPECIFICATIONS**

#### **Materials of Construction**

Membrane: Hydrophilic PTFE
Support layers: Polypropylene
Structure: Polypropylene
Materials are thermally bonded, for maximum
assurance of filter integrity and elimination of
bonding or sealing compounds. Modules and
final filter assemblies are flushed with 18-megohm-cm high purity water, to provide extremely
low extractables levels.

#### **Effective Filtration Area**

Standard Pleating: 7.2 ft<sup>2\*</sup> SELECT Pleating: 11.4 ft<sup>2\*</sup> \* Per 10-inch (250mm) cartridges

#### **Maximum Differential Pressure**

Forward:

70 psid (4.8 bar) @ 75°F (24°C) 40 psid (2.8 bar) @ 180°F (82°C)

Reverse:

40 psid (2.8 bar) @ 75°F (24°C)

#### Cleanliness (Particle Shedding)

20 gal rinse-up at 1gpm achieves <1 particle/ml @ 0.2 µm

#### **Chemical Compatibility**


Compatible with many water based acids, basis & solvent solutions.

Contact dhP-N.A. Technical Services for details.

#### **Performance Attributes**

Water flow rates, Typical*			
Туре	Micron	gpm/psid	lpm/100mbar
SELECT	0.05	0.65	3.6
	0.1	2.2	12
	0.2	3.5	19
	0.5	7.3	40
	1.0	12.7	70
	3.0	20.0	110
	10.0	40.0	220
Standard	0.05	0.45	2.5
	0.1	1.3	7.1
	0.2	2.2	12
	0.5	4.6	25
	1.0	9.8	54
	3.0	14.0	77
	10.0	25.0	140


<sup>\*</sup> Per 10-inch (250mm) cartridge equivalent.

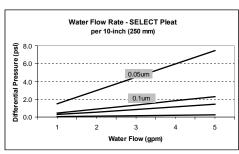

\*Liquids with a viscosity of 1 cp

### **Ordering Information**

Each cartridge is identified with a product number, pore size and lot number for traceability.

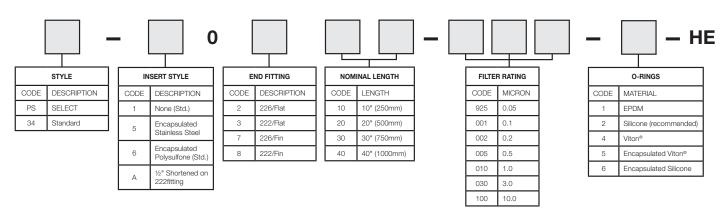

Specifications are subject to change without notification. For User Responsibility Statement, see www.parker.com/safety Proflow is a registered trademark of Parker-Hannifin Corporation. Vilton is a registered trademark of E.I. DuPont de Nemours & Co., Inc.

© 2008 Parker-Hannifin Corporation domnick hunter Process Filtration - N.A. All Rights Reserved

